



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**300687(B1-B3)**  
***Daybed***

# ITEM: 300687(B1-B3)

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

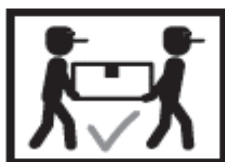


ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A LEFT SIDE FRAME



1PC


B RIGHT SIDE FRAME



1PC


### B2 (BOX 2)

C BACK PANEL



1PC

E ROLL SLAT  
(7PCS)



2SETS

D BACK RAIL



1PC


I FRONT RAIL



1PC

### B3 (BOX 3)

E ROLL SLAT  
(7PCS)



2SETS

H TRUNDLE  
BACK PANEL



1PC

F TRUNDLE  
FRONT PANEL



1PC

J CASTER  
WITH SCREW



4 SETS

G TRUNDLE  
SIDE PANEL



2PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 300687(B1-B3)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








### WARNING!




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 300687 (B2)

1	<b>BOLT</b> (1/4 x 90mm - BLK)		12PCS	4	<b>FLAT HEAD SCREW</b> (4 x 30mm - BLK)		8PCS
2	<b>BARREL NUT</b> (1/4 x 13mm - BLK)		12PCS	5	<b>ALLEN WRENCH</b> (4 x 25 x 60mm - BLK)		1PC
3	<b>WOOD DOWEL</b> (10 x 40mm)		8PCS				

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 300687 (B3)

6	<b>BOLT</b> (1/4 x 40mm - BLK)		8PCS	8	<b>FLAT HEAD SCREW</b> (4 x 30mm - BLK)		8PCS
7	<b>ALLEN WRENCH</b> (4 x 25 x 60mm - BLK)		1PC				


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 300687(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 1

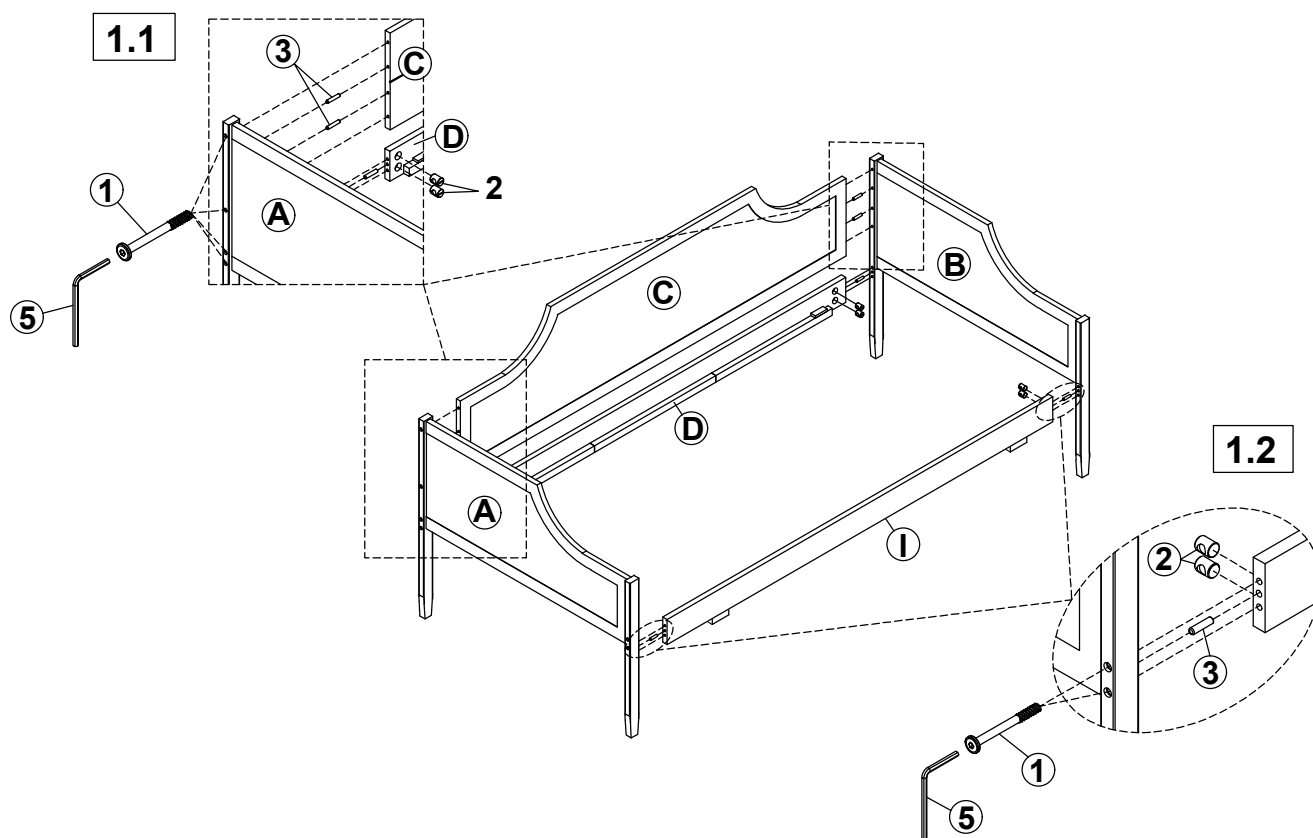


### STEP 2

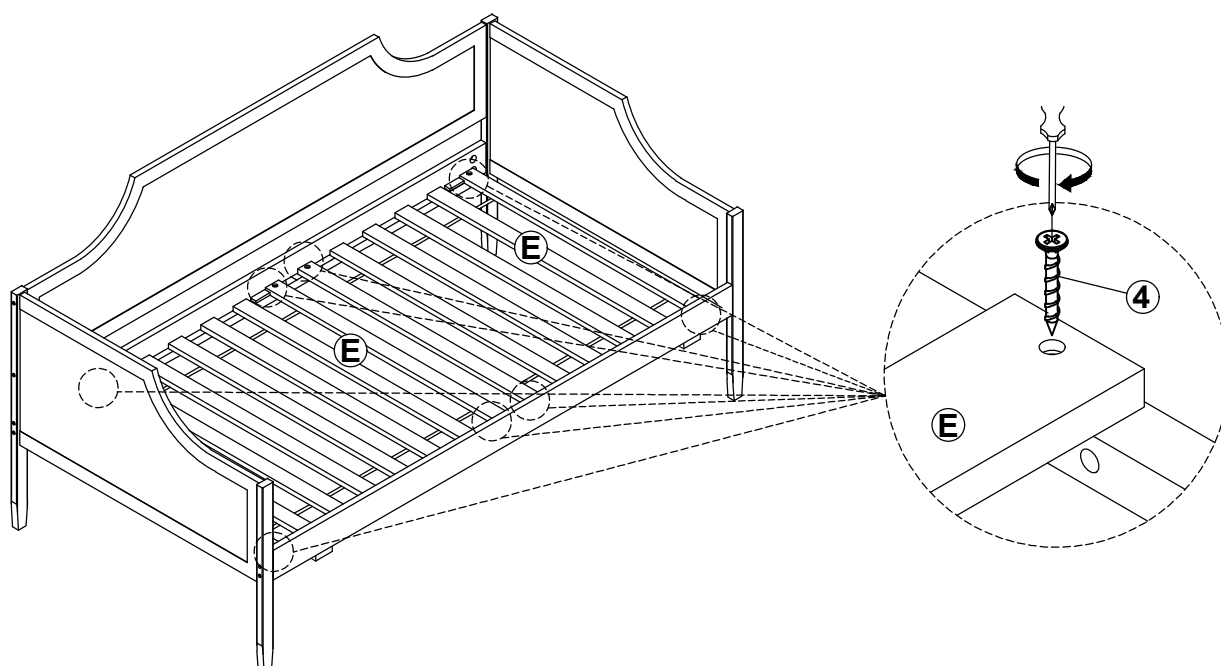


ITEM: **300687(B1-B3)**  
**ASSEMBLY INSTRUCTIONS**

**STEP 3**

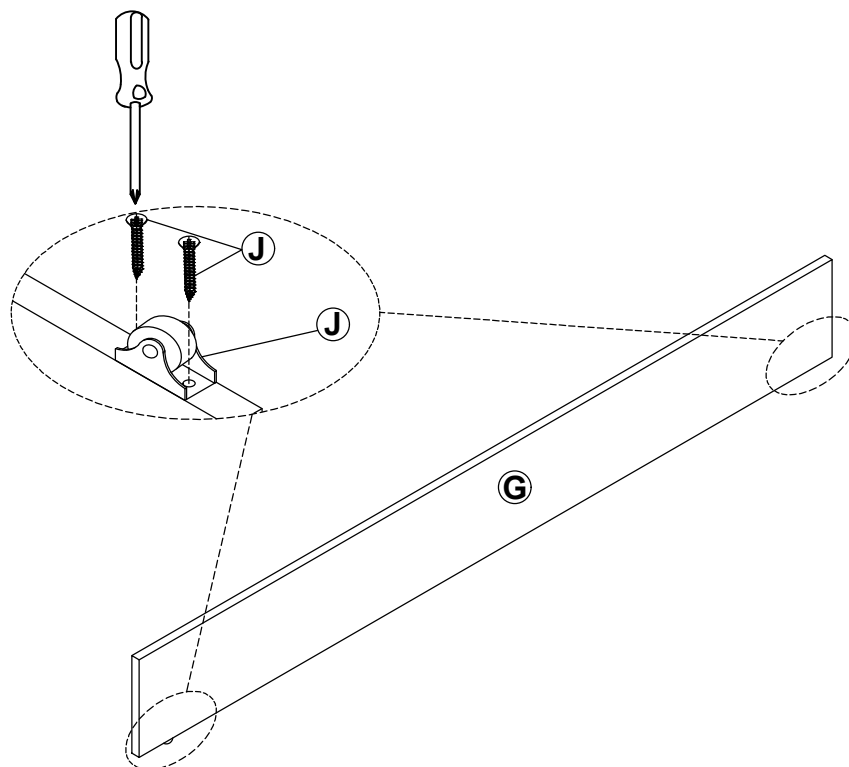


**STEP 4**

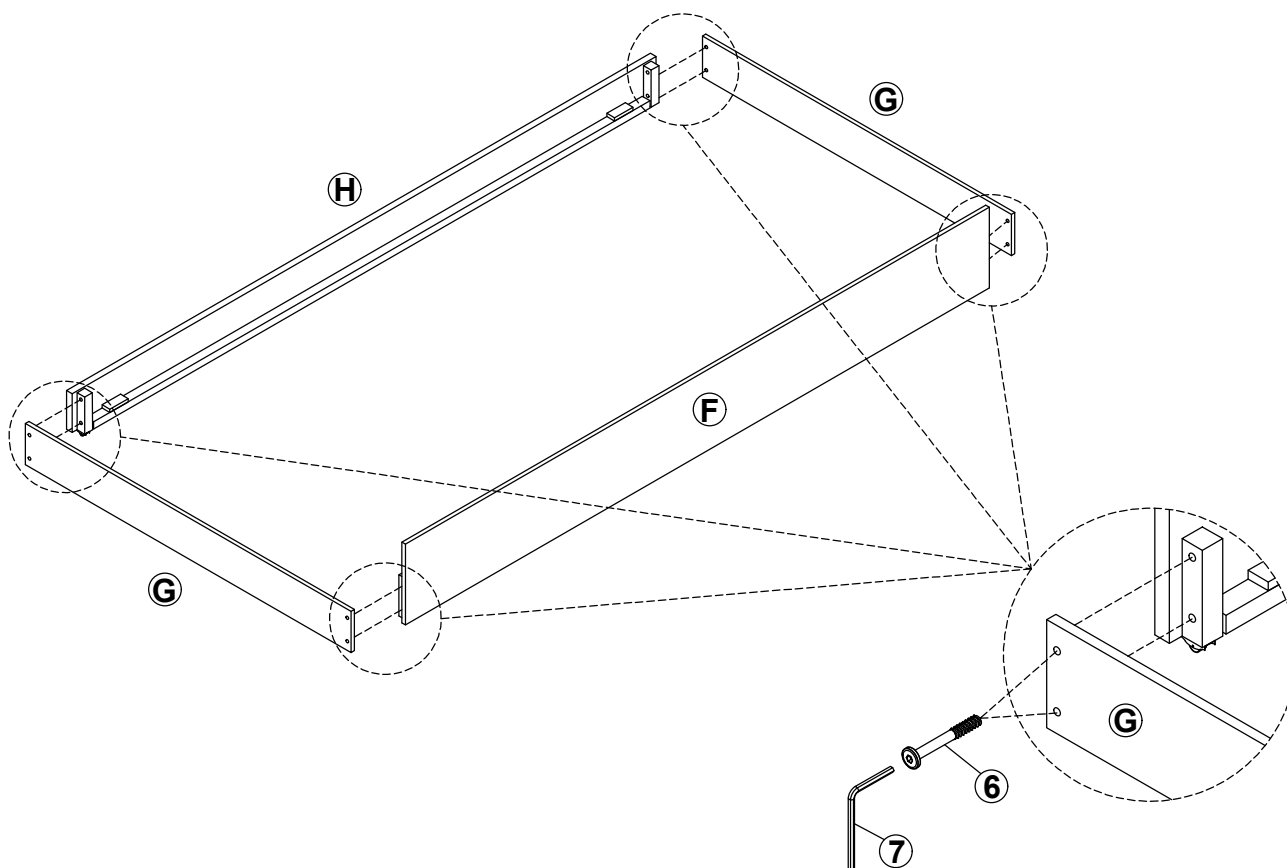


ITEM: **300687(B1-B3)**  
**ASSEMBLY INSTRUCTIONS**



**STEP 5**

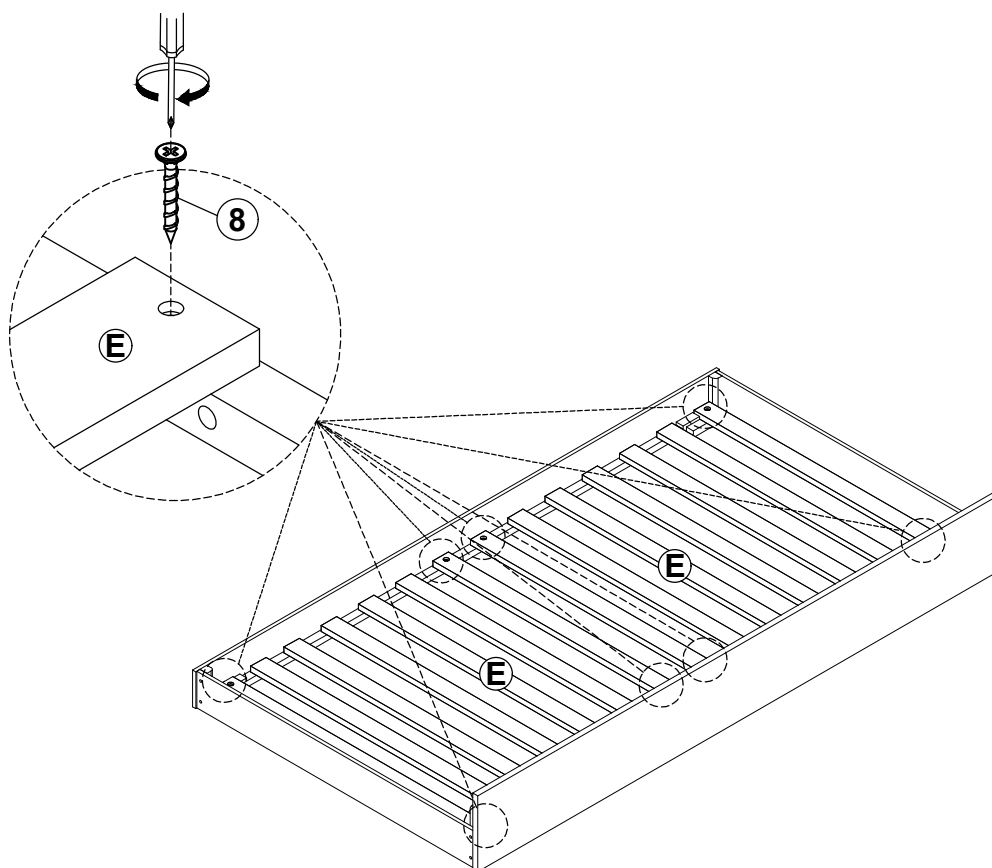

**STEP 6**  
**COMPLETE**

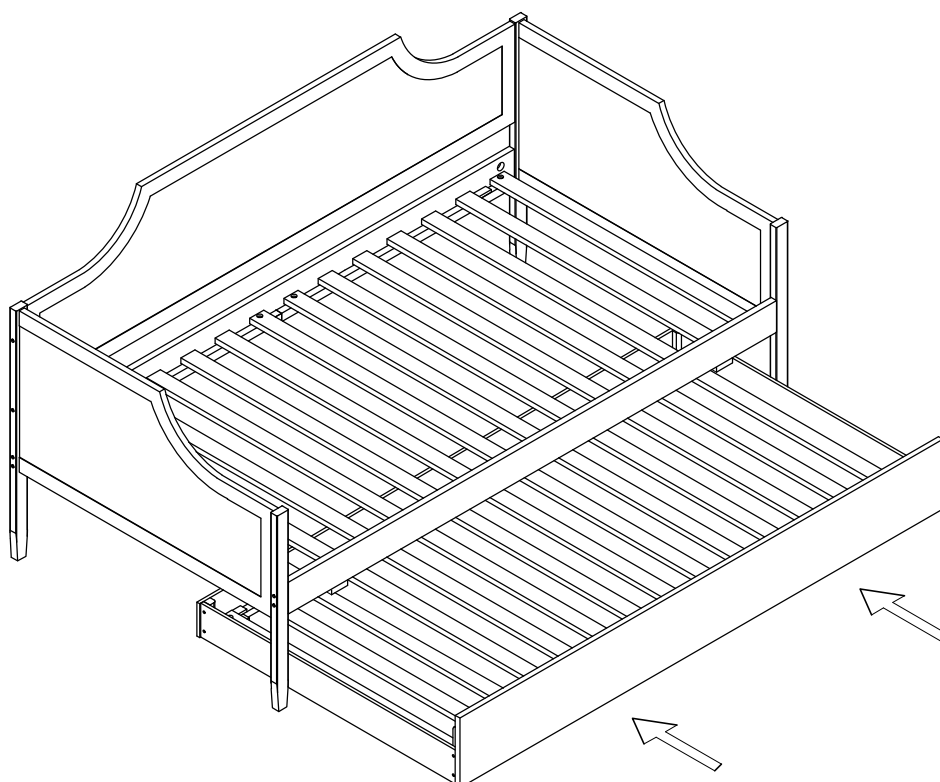


ITEM: **300687(B1-B3)**



Inner Size: 81.00"W x 42.00"D

Trundle Inner Size: 76.75"W x 41.00"D

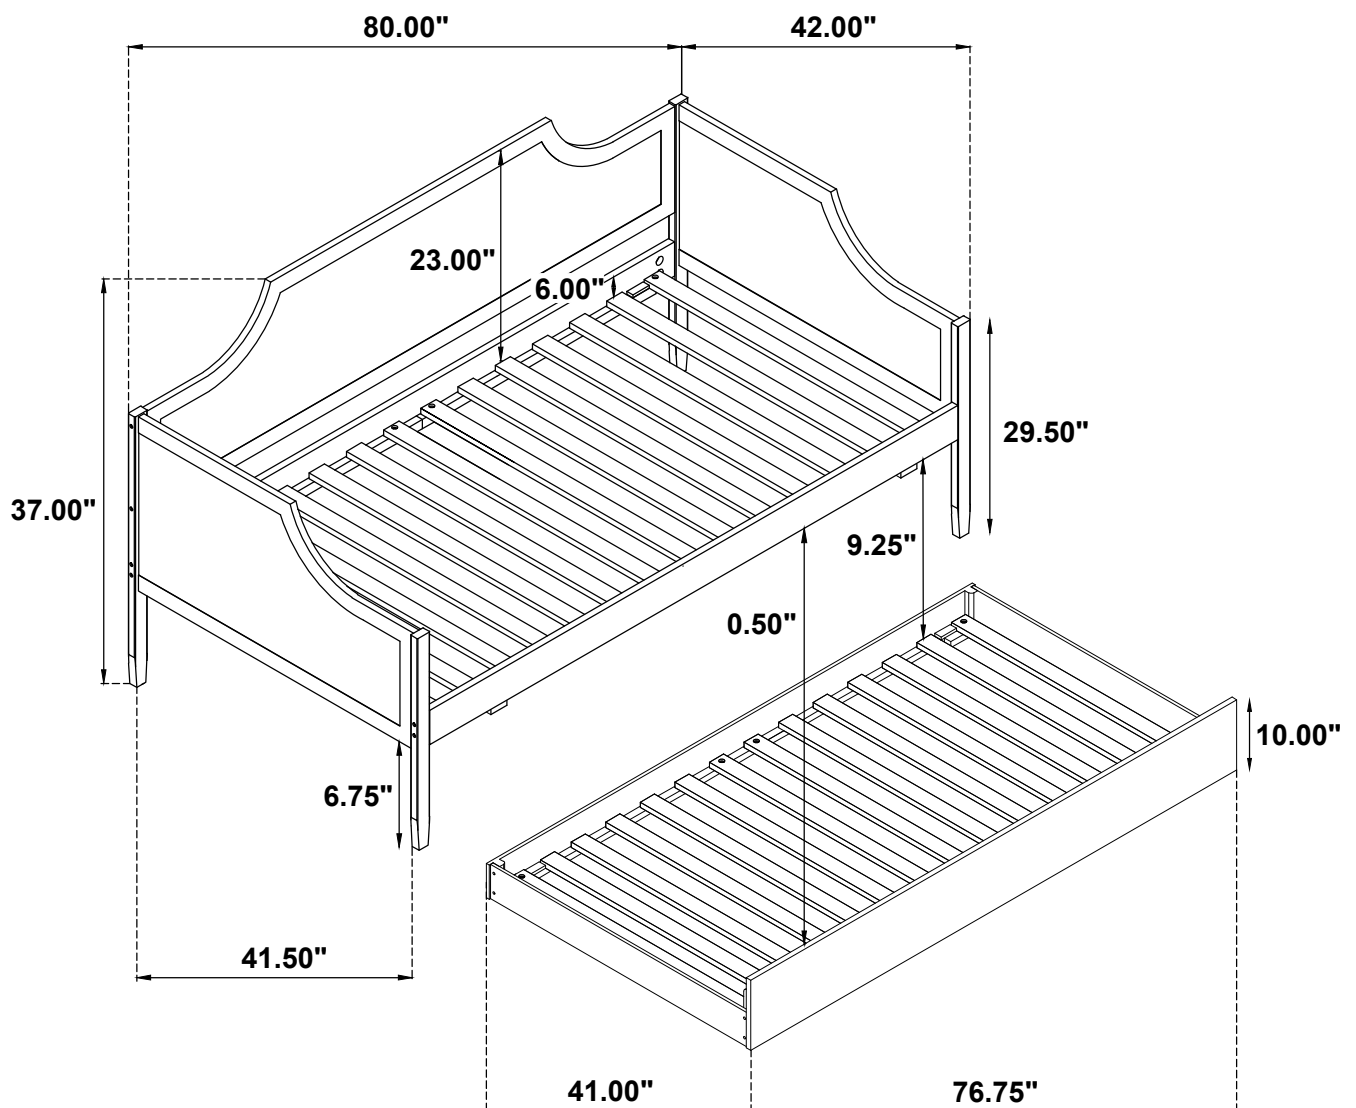

Note: Dimension tolerance  $\pm 5\%$