

### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 501205(B1-B3) Sleeper Sectional

REVISION 0: 12/28/2024

PAGE 1 OF 7

COASTERFURNITURE.COM

### ITEM: 501205(B1-B3) ASSEMBLY INSTRUCTIONS



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.

ASSEMBLY TIME

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

**15 MINUTES** 

2. This product is for home use only and not intended for commercial establishments.



## PARTS IDENTIFICATION

### B1 (BOX 1)

					BACK CUSHION			
A	LEFT SOFA SEAT		1PC	F	WITH "F "LABEL		2PCS	
в	LONG BACK FRAME		1PC	G	PILLOW		2PCS	
С	SHORT BACK FRAME		1PC	н	LEG	CO. L	2PCS	
D	SOFA ARM		1PC	I	BUN FOOT	٩	4PCS	
E	BACK CUSHION WITH " E " LABEL		2PCS					
B2 (BOX 2)								
F	BACK CUSHION WITH " F " LABEL		2PCS	к	LOVESEAT BACK FRAME		1PC	
I	BUN FOOT		4PCS	N	CASTER WITH SCREW		2SETS	
J	LOVESEAT SEAT		1PC					
B3 (BOX 3)								
с	SHORT BACK FRAME		1PC	I	BUN FOOT		2PCS	
F	BACK CUSHION WITH " F " LABEL		1PC	L	CHAISE ARM		1PC	
G	PILLOW		1PC	м	CHAISE SEAT		1PC	
н	LEG	( in the second s	4PCS			- <b>1</b>		
			PAGE	2 OF 7		COASTERFURNIT	JRE.COM	
L								

### ITEM: 501205(B1-B3) ASSEMBLY INSTRUCTIONS



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Ν

#### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishments.


### HARDWARE IDENTIFICATION

### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 501205(B1)

1	FLAT HEAD SCREW (M4 x 45mm - BLK)	<del>() mmm</del>	8PCS				
2	BASS METAL (6" x 1-1/4" x 3/8" - BRW)		4PCS				
3	THREAD BOLT (Ø5/16 x 4"- BLK)		2PCS				
4	HEX NUT (Ø5/16 x1/2" - BLK)		2PCS				
5	LOCK WASHER: (Ø5/16" x 12mm)	Q	2PCS				
6	FLAT WASHER (Ø5/16 x 3/4" - BLK)	$\bigcirc$	2PCS				
7	WRENCH (1/2"x 3 1/2" - BLK)	5	1PC				
Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 501205(B2)							
1	FLAT HEAD SCREW (M4 x 45mm - BLK)	<del>()</del>	4PCS				
2	BASS METAL (6" x 1-1/4" x 3/8" - BRW)		2PCS				
Z·	Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 501205(B3)						
1	FLAT HEAD SCREW (M4 x 45mm - BLK)	<del>8 mmm</del>	10PCS				
2	BASS METAL (6" x 1-1/4" x 3/8" - BRW)		2PCS				
ют	E:						
hilling	illips head screw driver is required in the assembly process; however, manufacturer does not provide this item.						


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

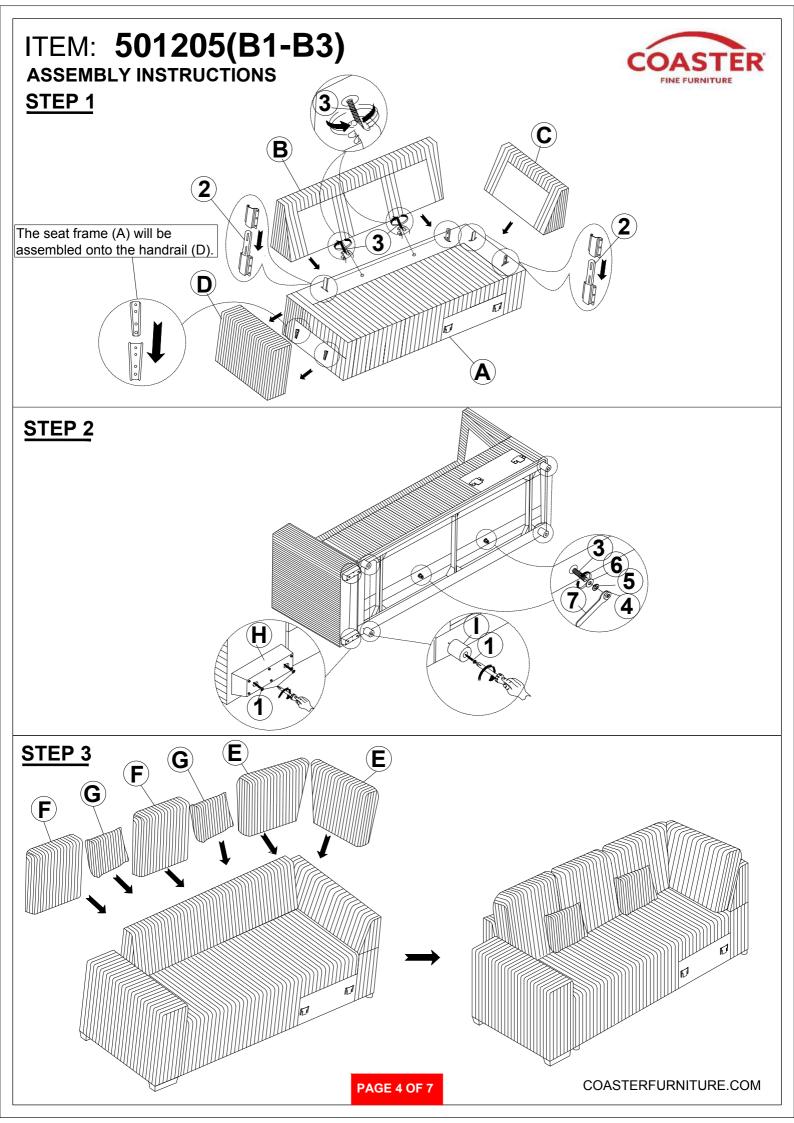


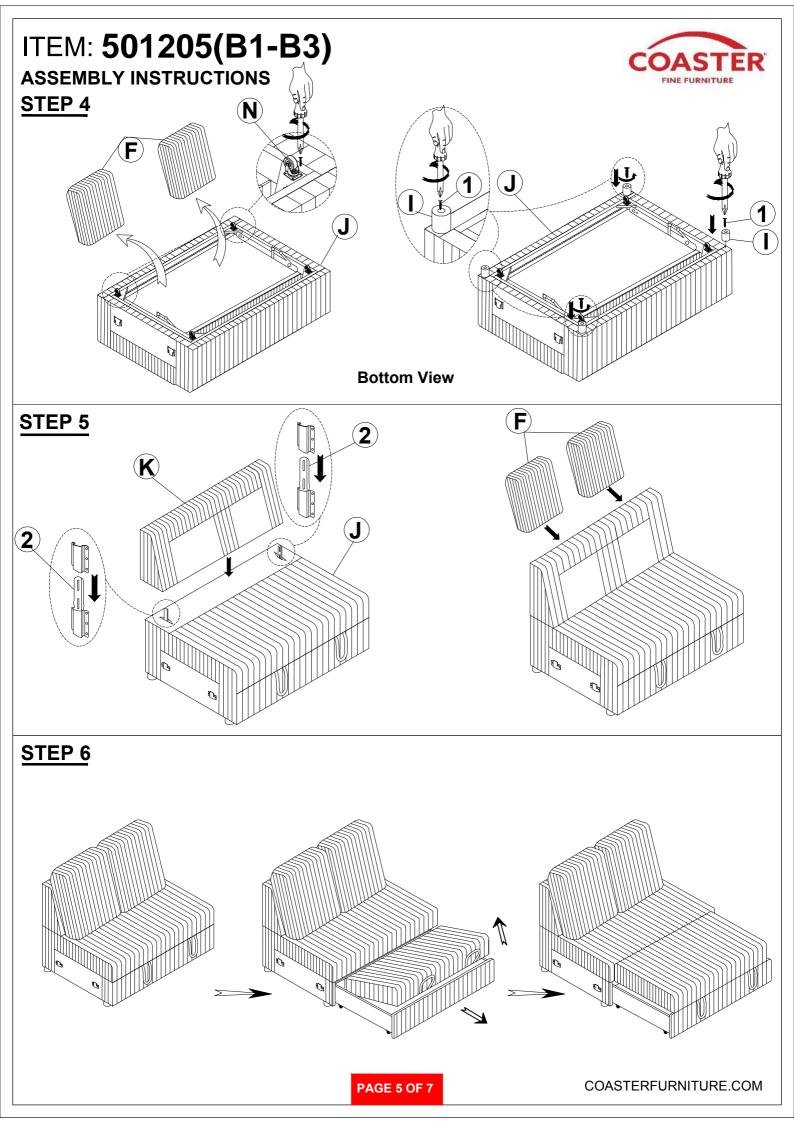


### ITEM: 501205(B1-B3) ASSEMBLY INSTRUCTIONS STEP 7



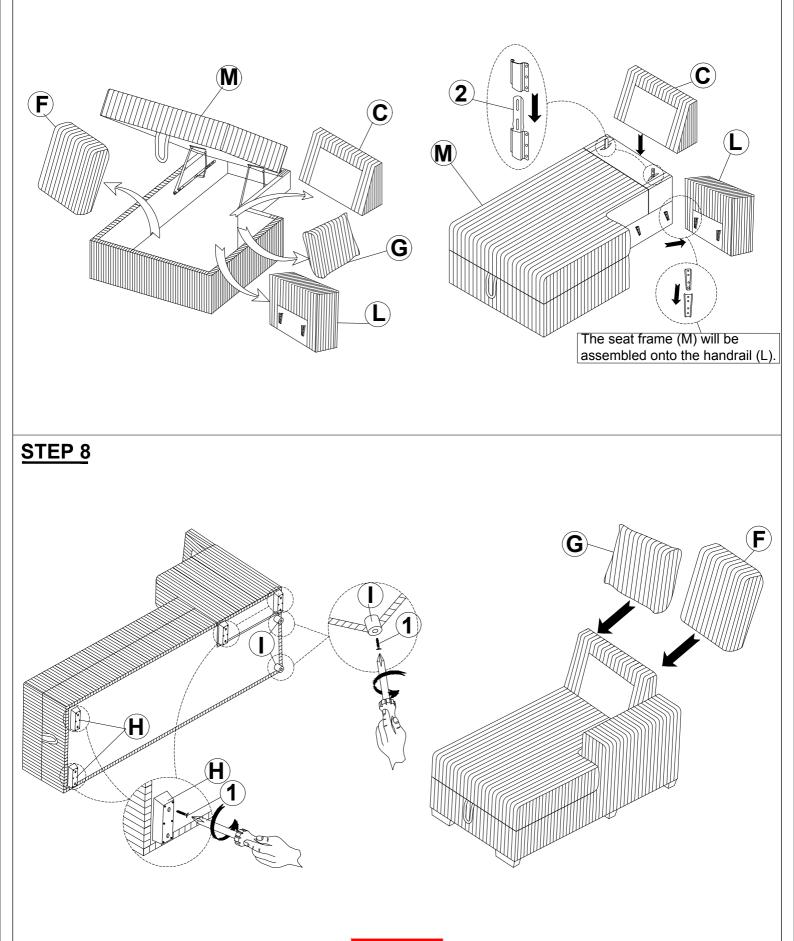

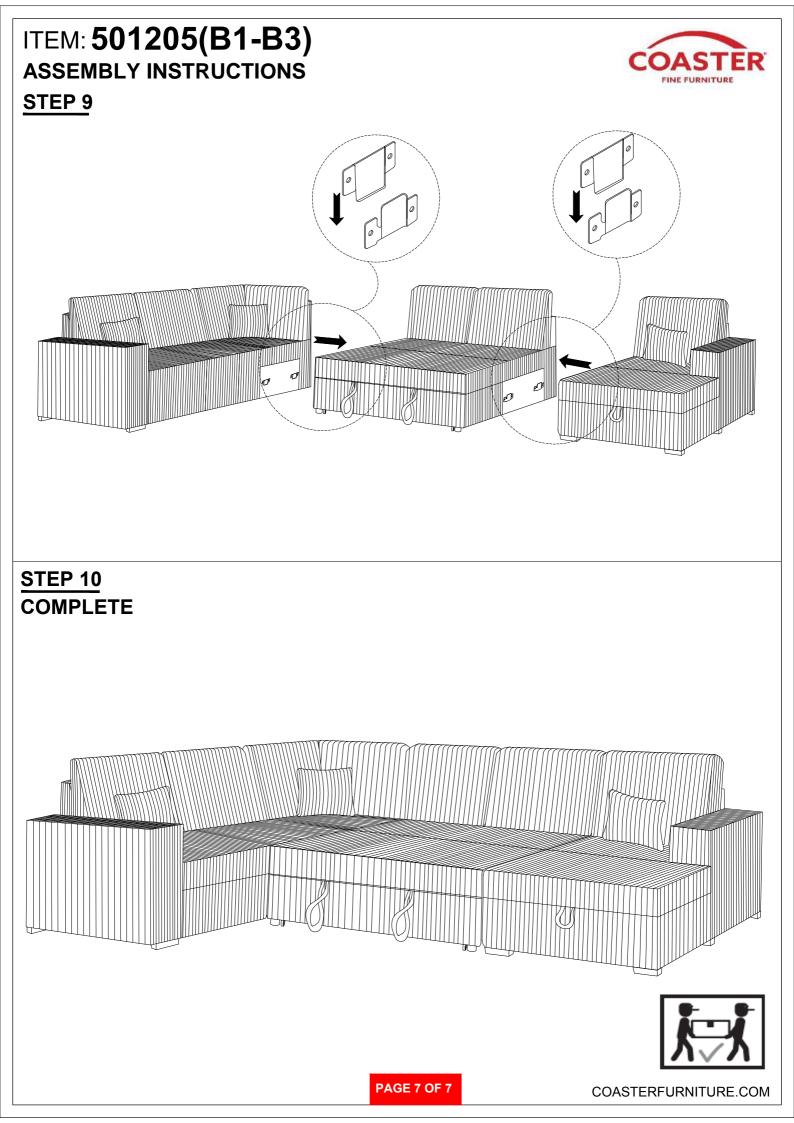

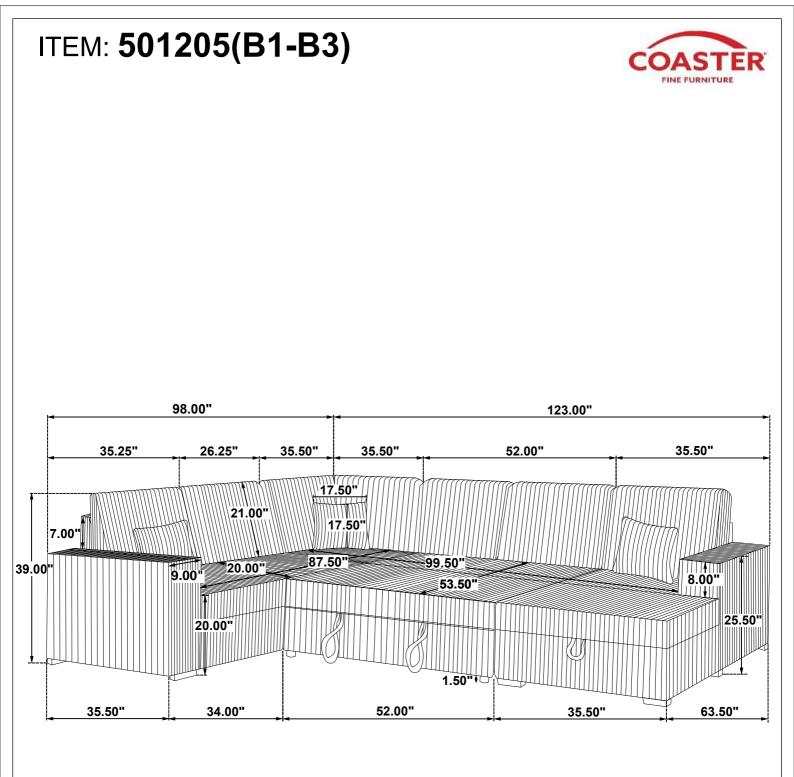

Note: Dimension tolerance ±5%