

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222931T(B1&B2)**  
***Twin Bed***

# ITEM: 222931T(B1&B2)

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

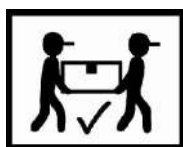


ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A HEADBOARD  
PANEL

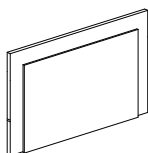


1PC

B LEFT HEADBOARD LEG  
(WITH "L" LABEL)



1PC

C RIGHT HEADBOARD LEG  
(WITH "R" LABEL)



1PC

D FOOTBOARD  
PANEL



1PC

E METAL LEG



2PCS

F BED SLAT



4PCS

H WOOD CLEAT



2PCS


J ADAPTER PLUG



1PC

### B2 (BOX 2)

I BED RAIL



2PCS

# ITEM: 222931T(B1&B2)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 222831T (B1)

1	<b>BOLT 1</b> (M8 x 16MM - RBW)		8PCS	6	<b>FLAT HEAD SCREW</b> (M4 x 32MM - RBW)		8PCS
2	<b>BOLT 2</b> (M8 x 35MM - RBW)		6PCS	7	<b>SMALL ALLEN WRENCH</b> (M4 x 65MM - BLK)		1PC
3	<b>BOLT 3</b> (M6 x 35MM - RBW)		8PCS	8	<b>BIG ALLEN WRENCH</b> (M5 x 65MM - BLK)		1PC
4	<b>BIG LOCK WASHER</b> (5/16" x 14Ø - RBW)		6PCS	9	<b>SMALL LOCK WASHER</b> (1/4" x 12Ø - RBW)		8PCS
5	<b>BIG FLAT WASHER</b> (5/16" x 22Ø - RBW)		6PCS	10	<b>SMALL FLAT WASHER</b> (1/4" x 19Ø - RBW)		8PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **222931T(B1&B2)**

## ASSEMBLY INSTRUCTIONS




### STEP 1

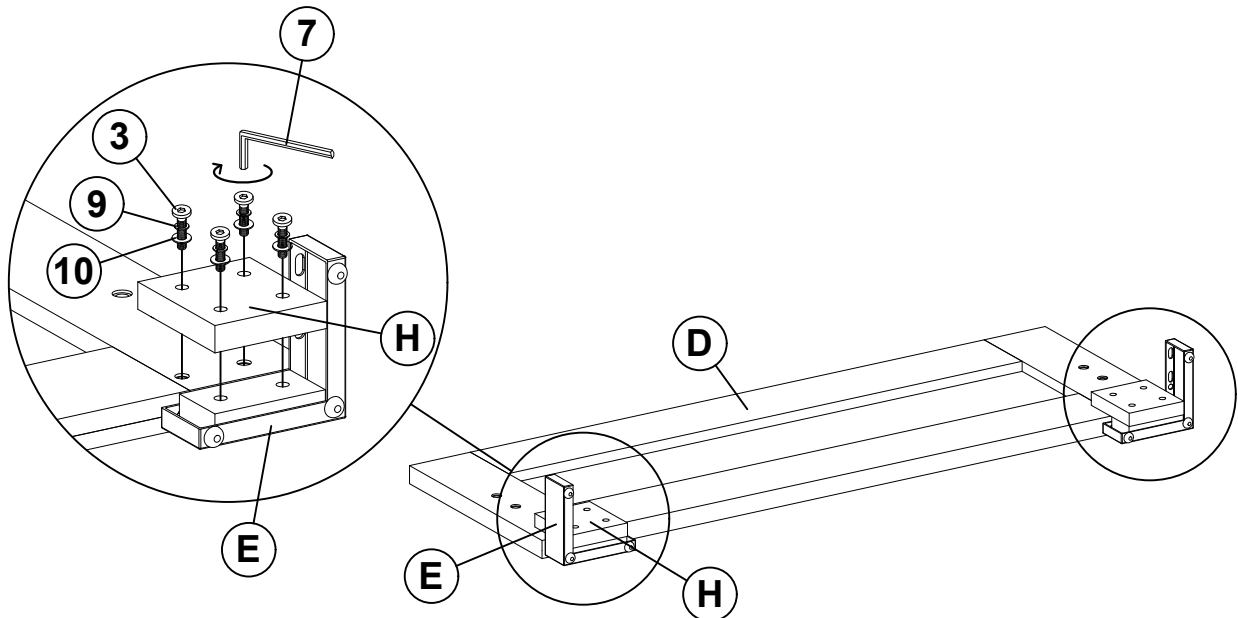

**\*\* BACK VIEW**

### STEP 2

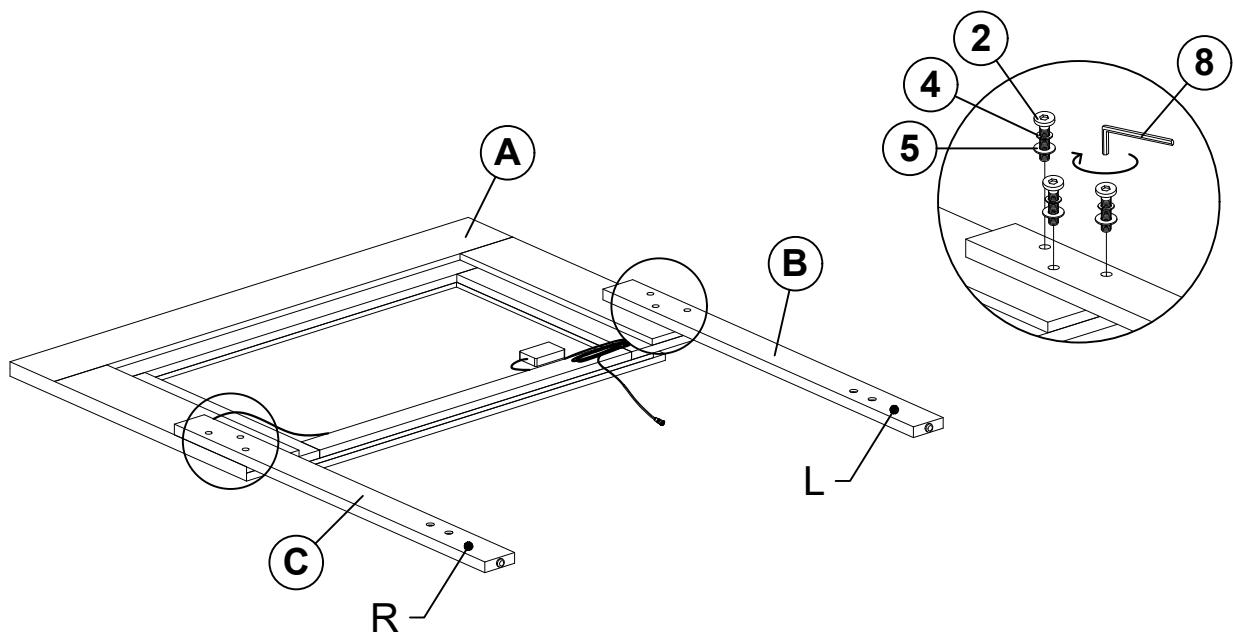


**\*\* BACK VIEW**

ITEM: **222931T(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 3

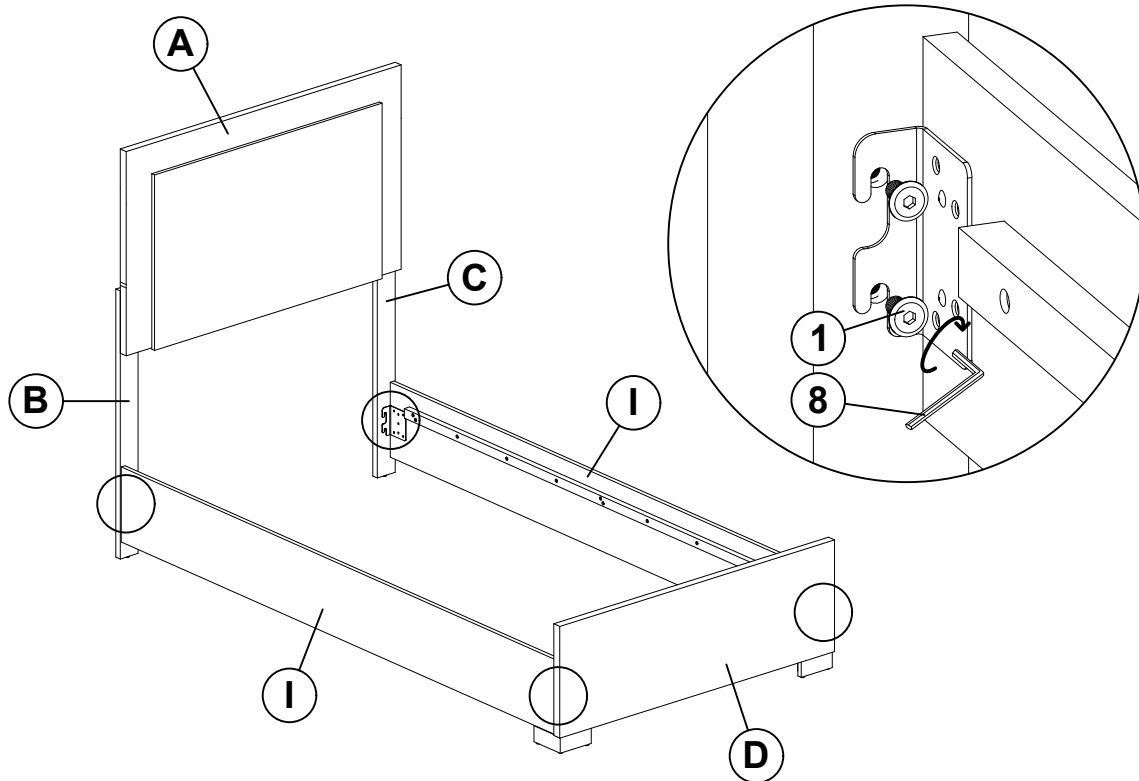



### STEP 4

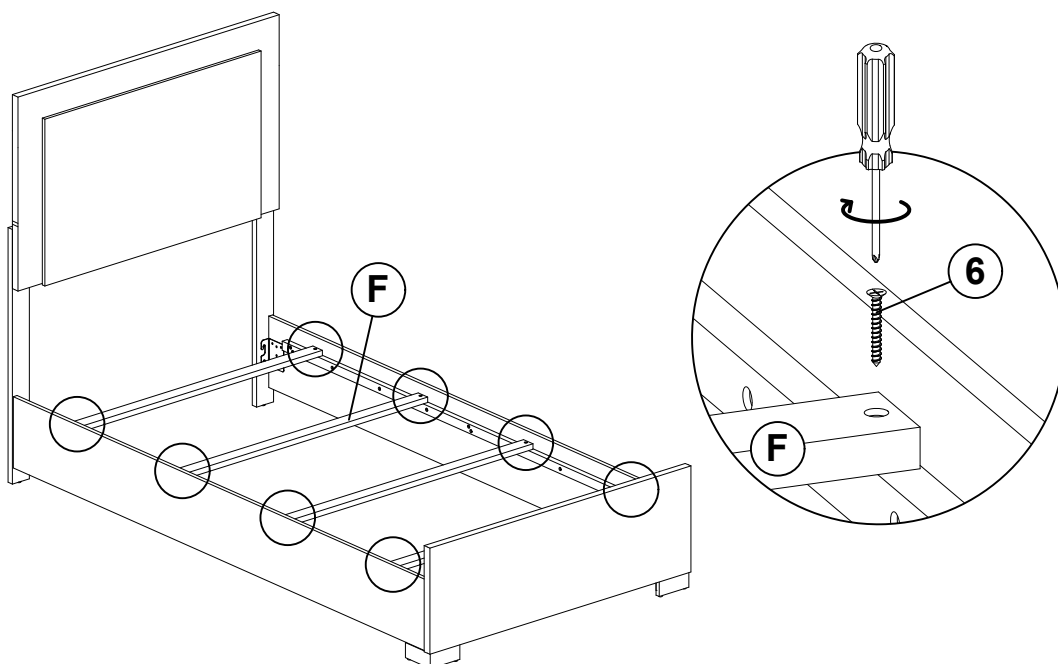

ITEM: **222931T(B1&B2)**

## ASSEMBLY INSTRUCTIONS


### STEP 5 COMPLETE

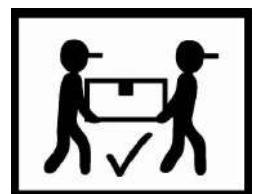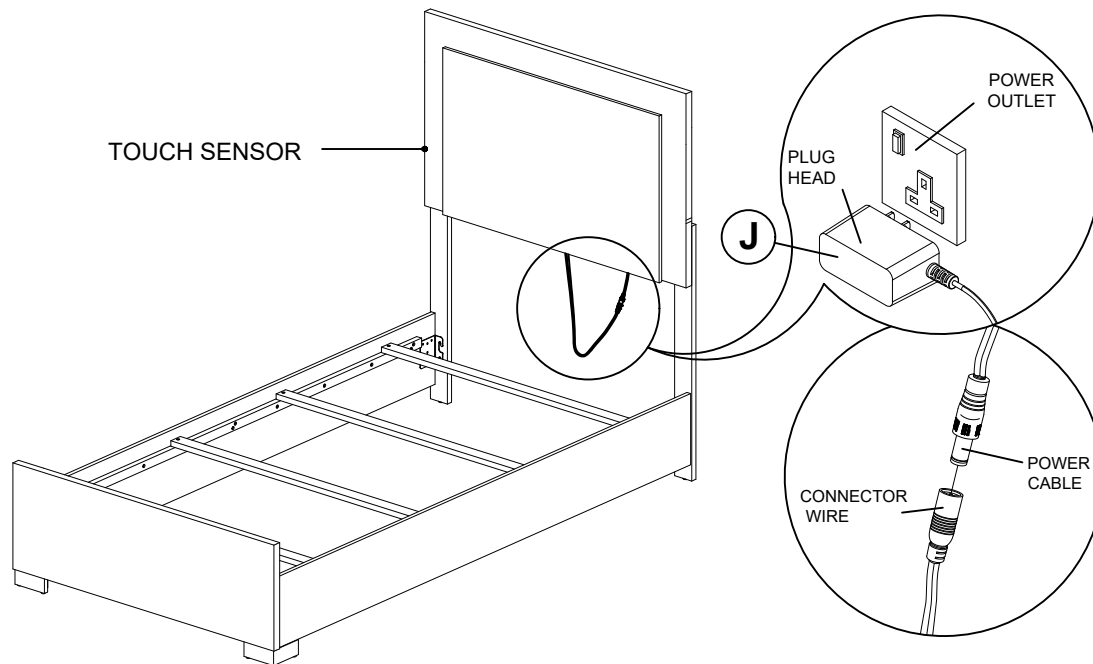

ITEM: **222931T(B1&B2)**



Inner Size : 39.50"W X 75.00"D

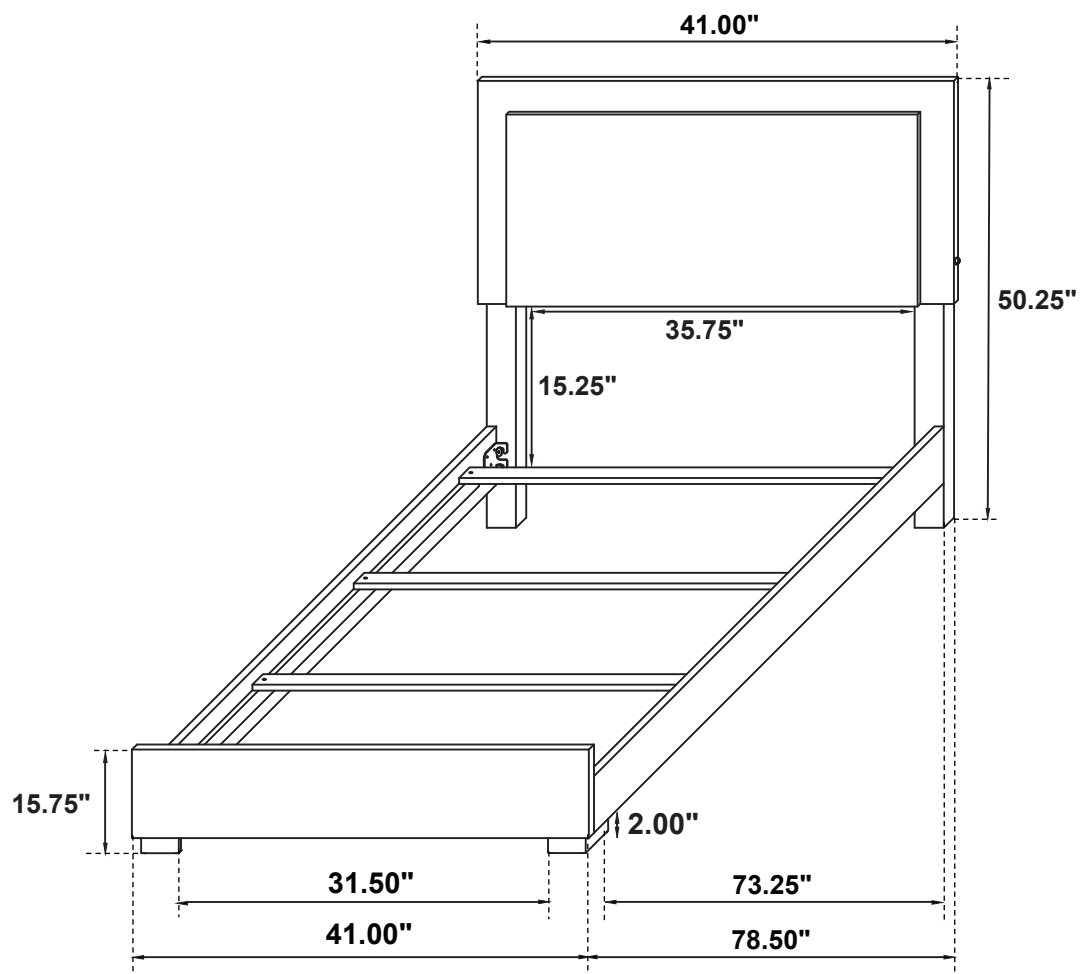

Note : Dimension tolerance  $\pm 5\%$