


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

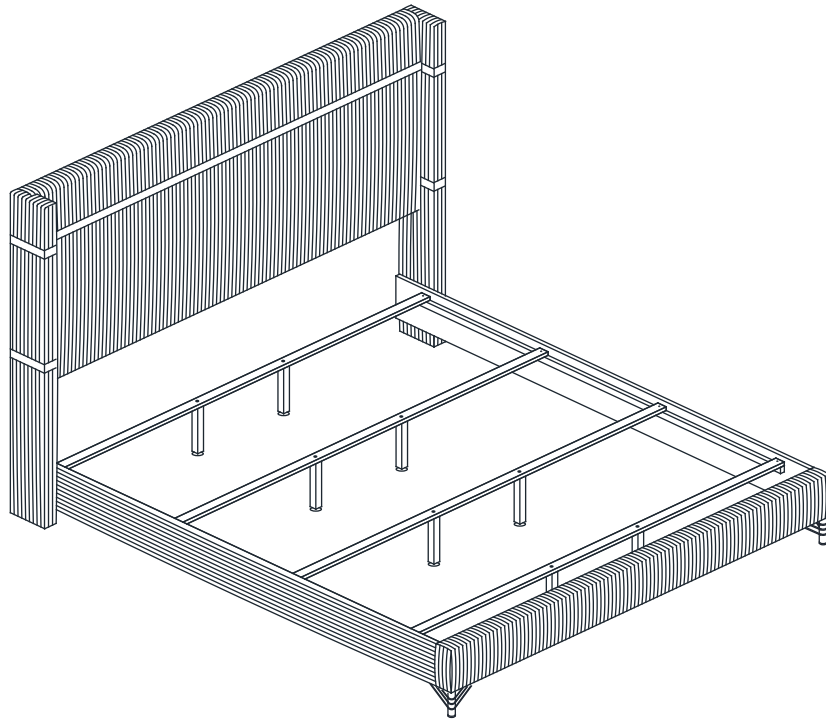

*Fine Furniture for every stage of life*

## 224991KE (B1&B2) *Eastern King Bed*

# ITEM: 224991KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

AF HEADBOARD PANEL

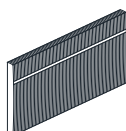


1PC

B LEFT HEADBOARD LEG  
(WITH "L" LABEL)




1PC

C RIGHT HEADBOARD LEG  
(WITH "R" LABEL)



1PC

D FOOTBOARD PANEL



1PC

E FOOTBOARD LEG



2PCS

F BED SLAT



4PCS


G BED SLAT SUPPORT  
WITH LEVELER



8PCS


### B2 (BOX 2)

H LEFT BED RAIL  
(WITH "H" LABEL)



1PC

I RIGHT BED RAIL  
(WITH "I" LABEL)



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

# ITEM: 224991KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224991KE (B2)

1	<b>BOLT 1</b> (M8 x 20MM - RBW)		4PCS	7	<b>SMALL FLAT WASHER</b> (1/4" x 19 Ø - RBW)		6PCS
2	<b>BOLT 2</b> (M8 x 35MM - RBW)		4PCS	8	<b>BIG LOCK WASHER</b> (M8 x 13MM - RBW)		4PCS
3	<b>BOLT 4</b> (M6 x 35MM - RBW)		10PCS	9	<b>BIG FLAT WASHER</b> (M8 x 22MM - RBW)		4PCS
4	<b>BOLT 3</b> (M6 x 15MM - RBW)		6PCS	10	<b>FLAT HEAD SCREW</b> (M4 x 32MM - RBW)		8PCS
5	<b>WOOD DOWEL</b> (M10 x 30MM - RBW)		4PCS	11	<b>SMALL ALLEN WRENCH</b> (M4 x 100MM - BLK)		1PC
6	<b>SMALL LOCK WASHER</b> (1/4" x 12 Ø - RBW)		6PCS	12	<b>BIG ALLEN WRENCH</b> (M5 x 65MM - BLK)		1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

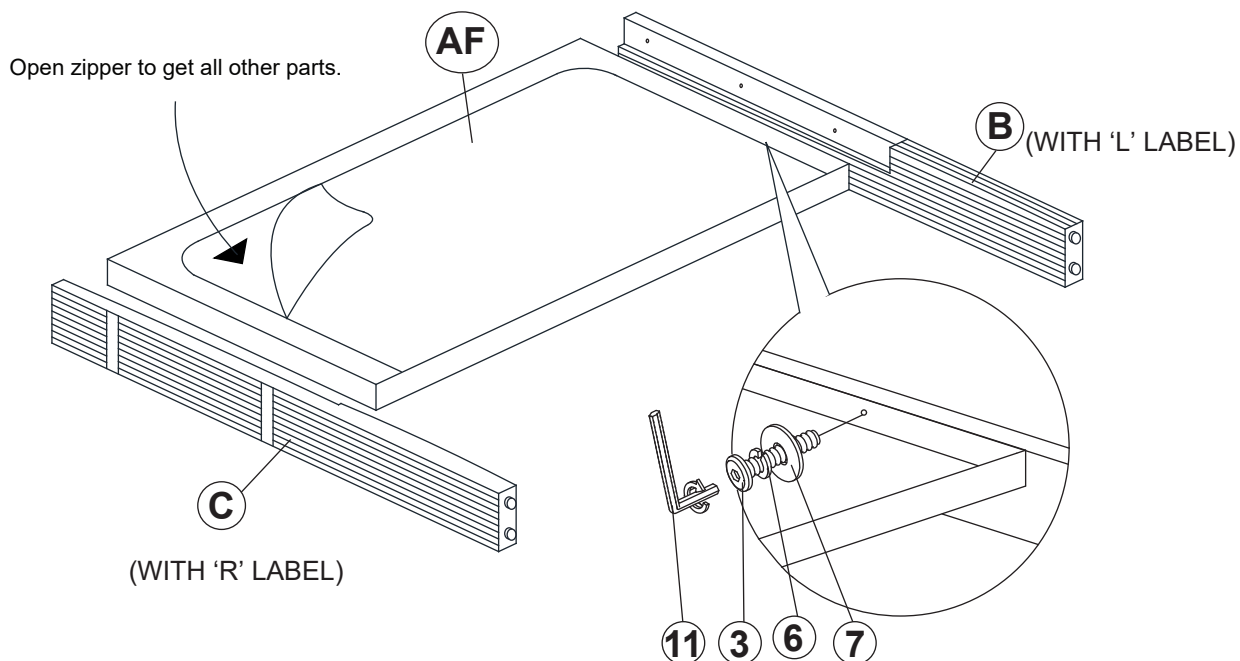

**\*\* BACK VIEW**

### STEP 2

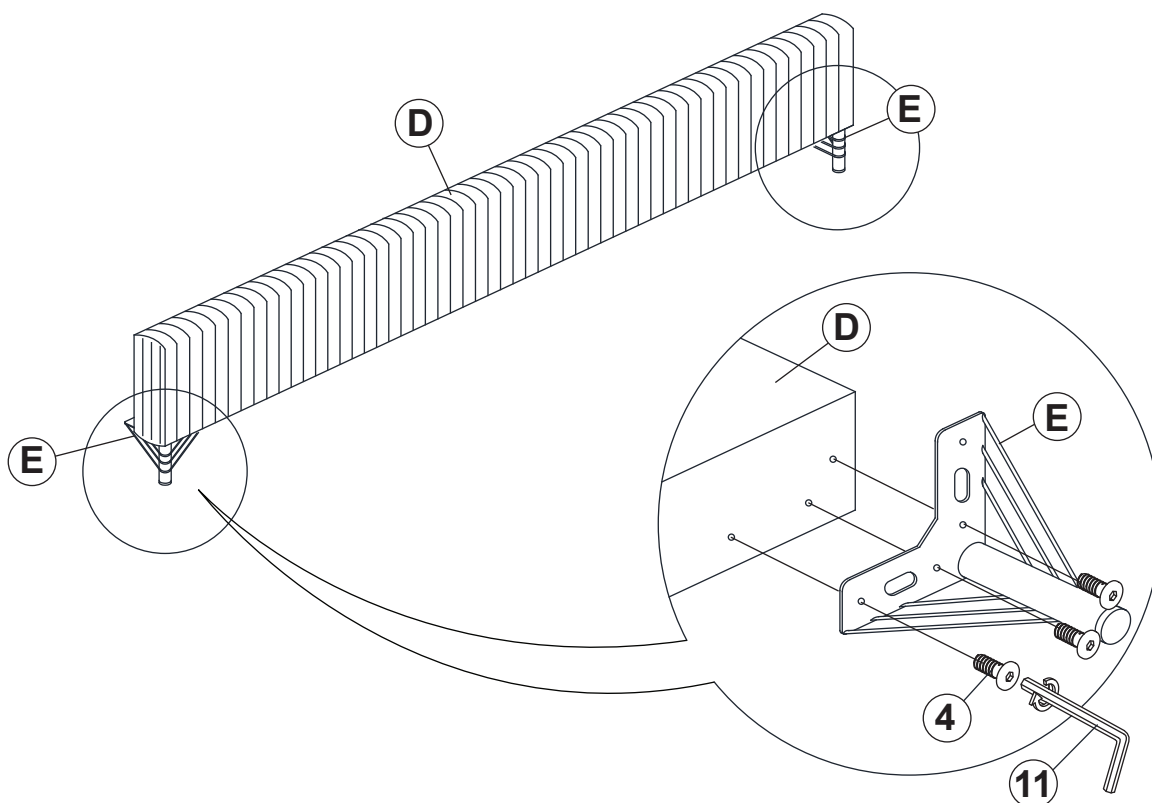


ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 3

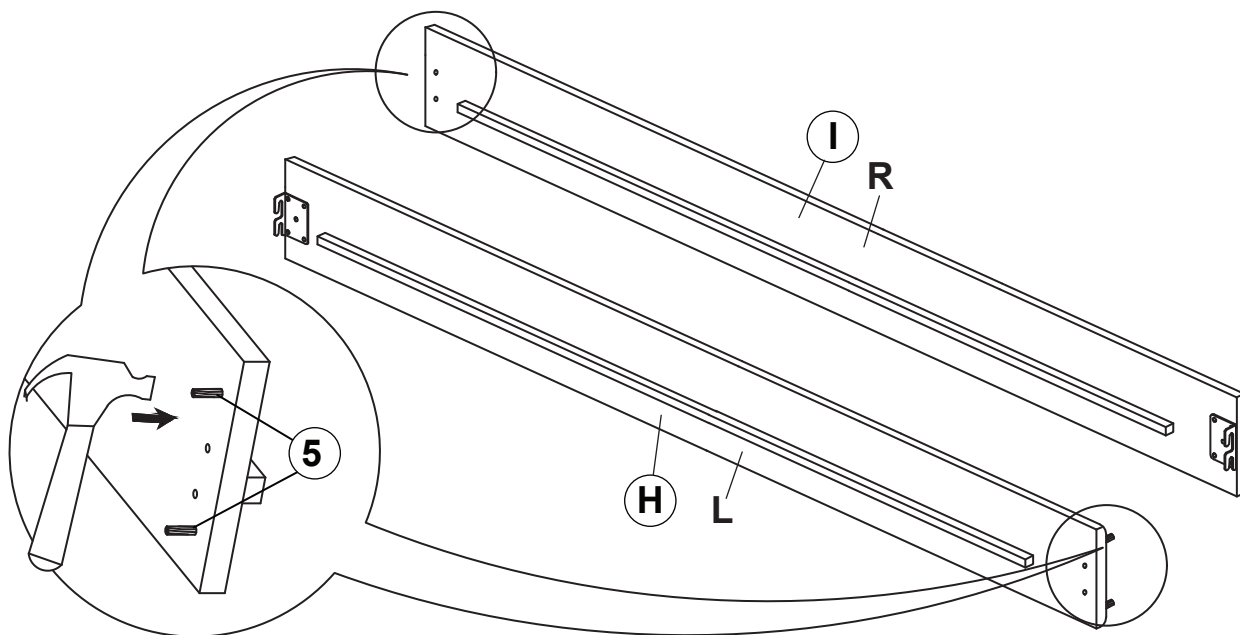

### STEP 4

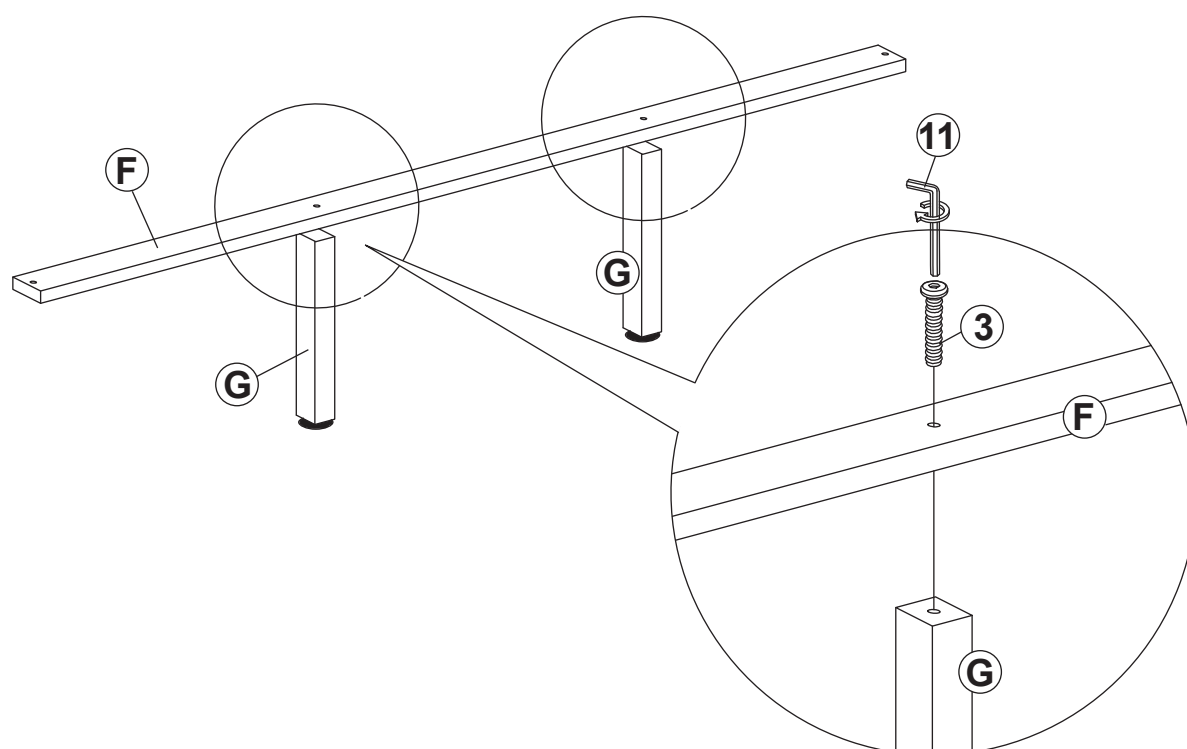


ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 5

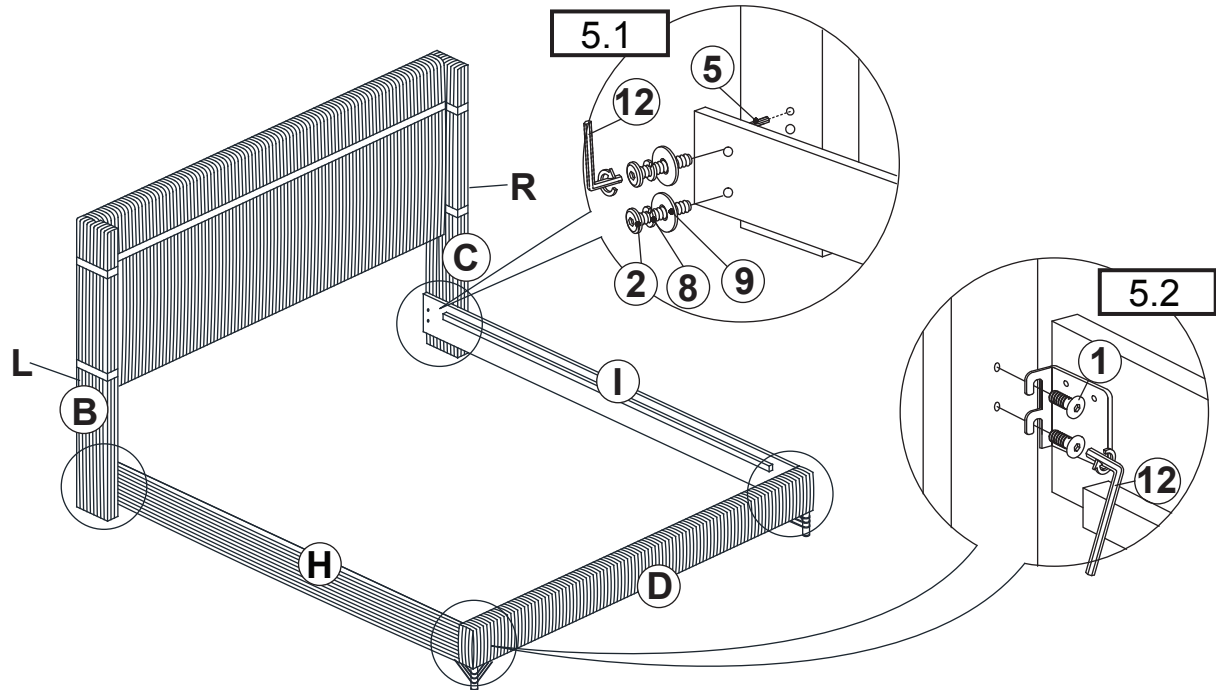


### STEP 6 COMPLETE

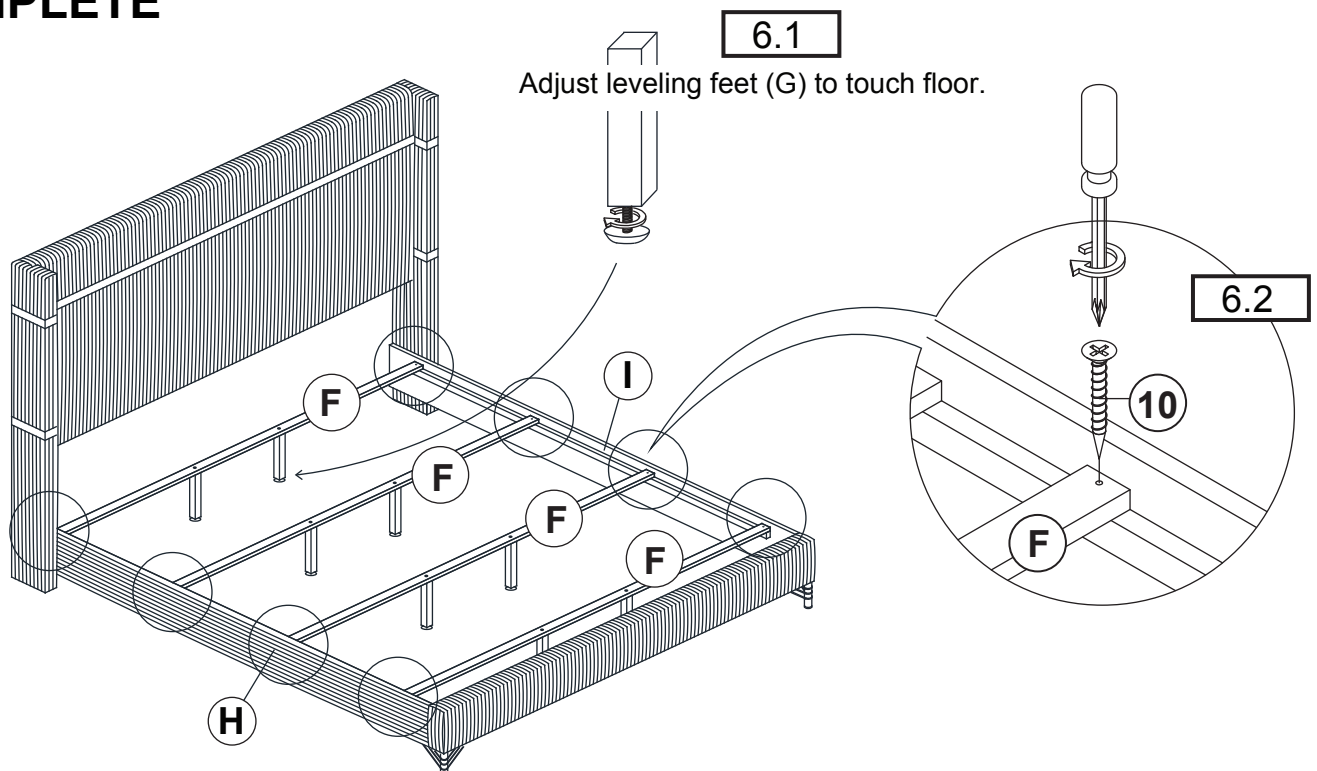

ITEM: **224991KE (B1&B2)**



Inner size: 76.50"W X 81.75"D

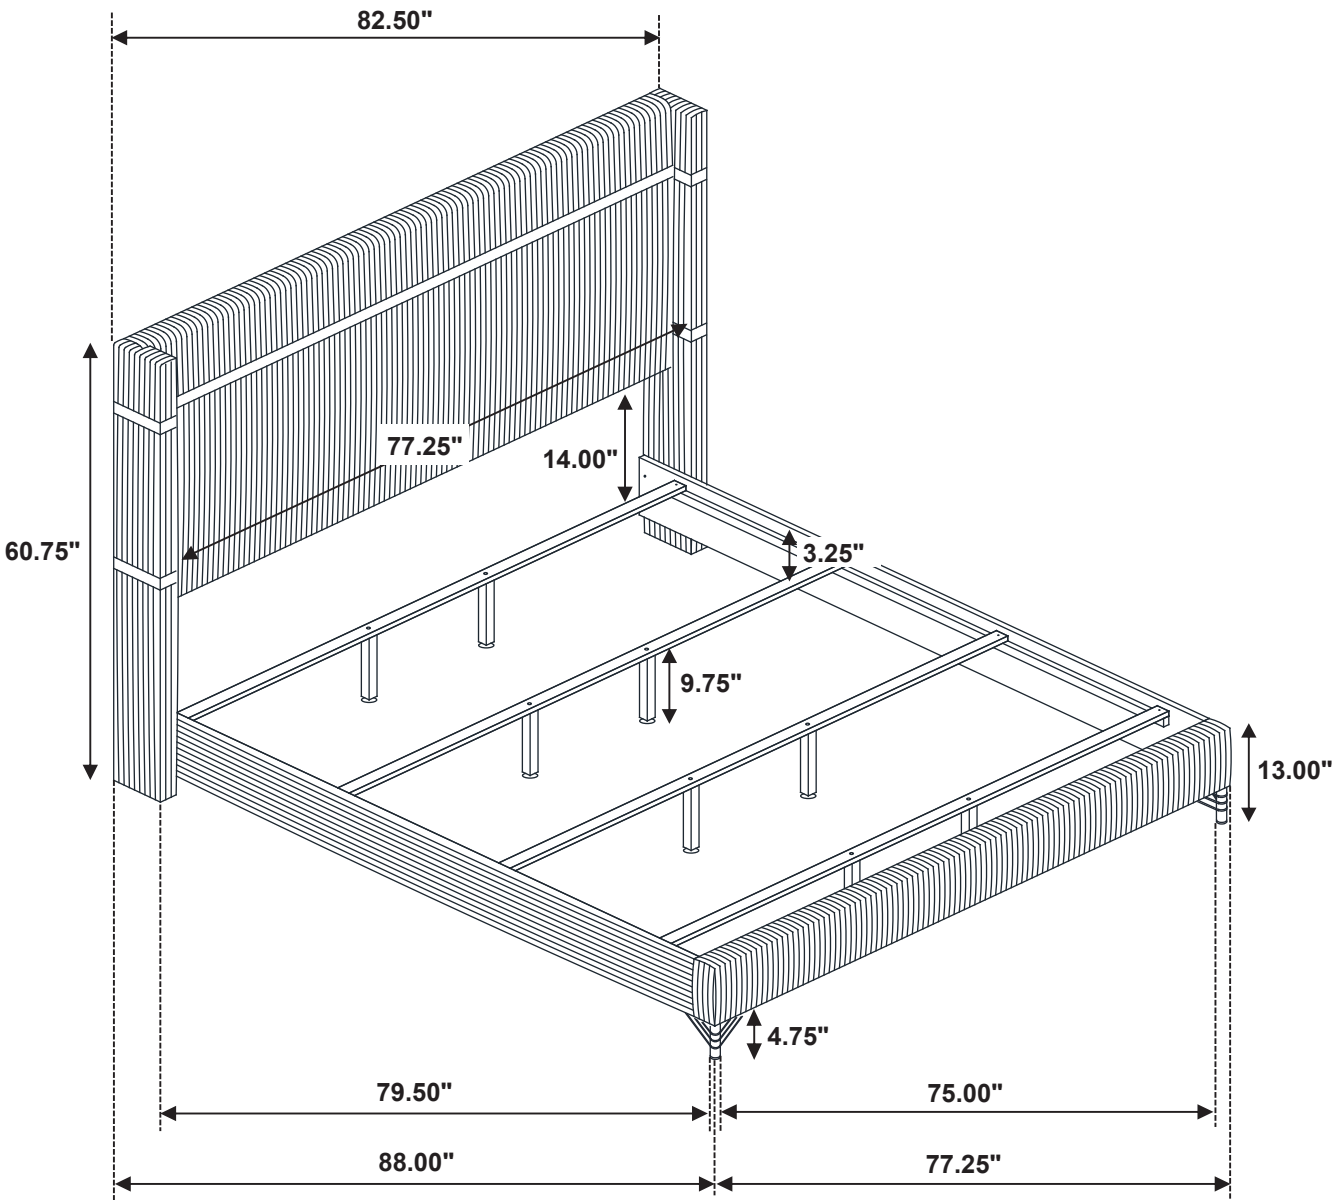

Note : Dimension tolerance  $\pm 5\%$