


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

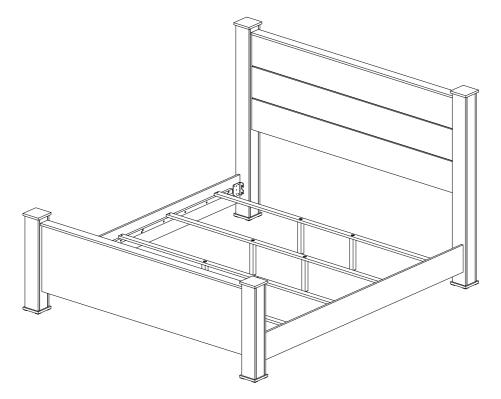

Fine Furniture for every stage of life

225101KW (B1&B2) California King Bed

REVISION 0 : 02/25/2025

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM: 225101KW (B1&B2) ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

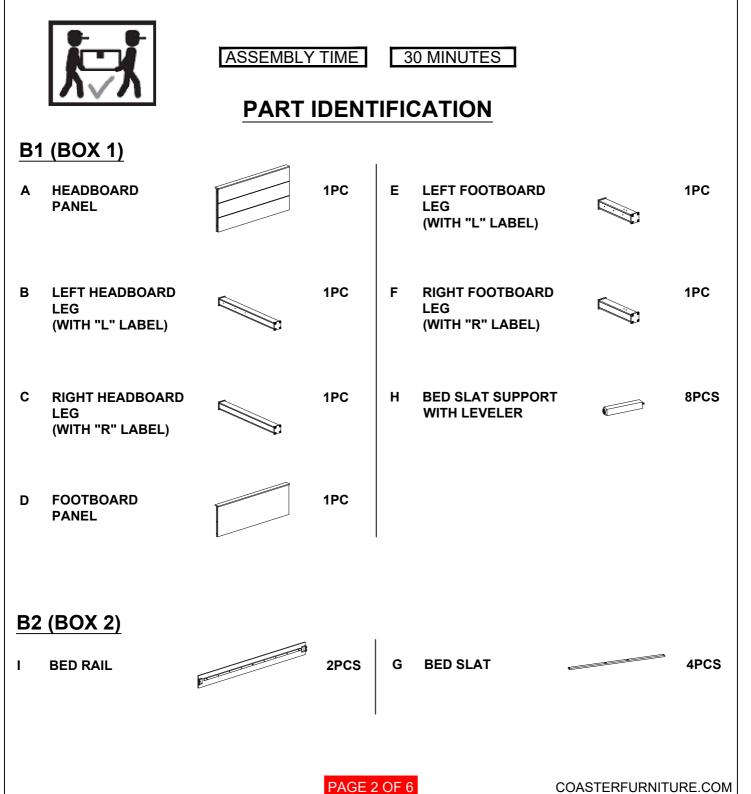

ITEM: 225101KW (B1&B2) ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 225101KW (B1)


1	SHORT BOLT (M8 x 16MM - RBW)		8PCS
2	BIG ALLEN WRENCH (M5 x 68MM - BLK)		1PC
3	LONG BOLT (M6 x 40MM - RBW)		12PCS
4	LOCK WASHER (1/4" x 13Ø - RBW)		12PCS
5	FLAT WASHER (1/4" x 19Ø - RBW)	\bigcirc	12PCS
6	SMALL ALLEN WRENCH (M4 x 110MM - BLK)	E C	1PC
7	FLAT HEAD SCREW (M4 x 32MM - RBW)		8PCS


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.



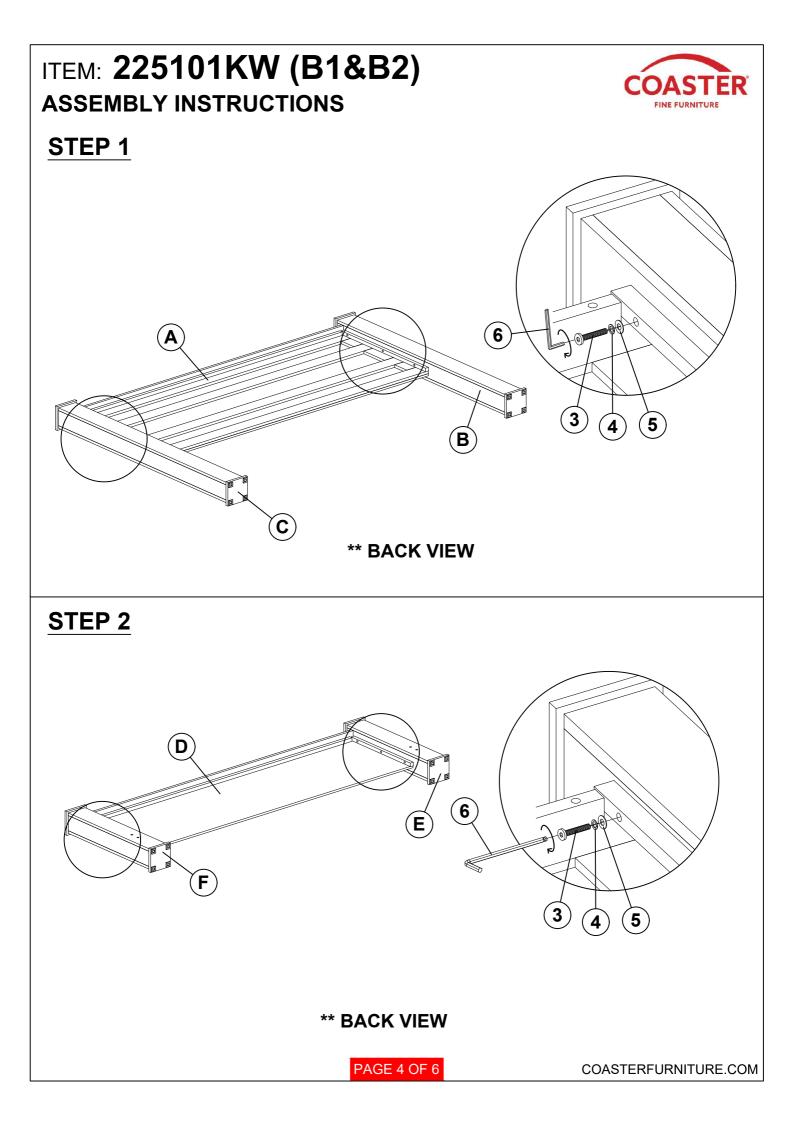

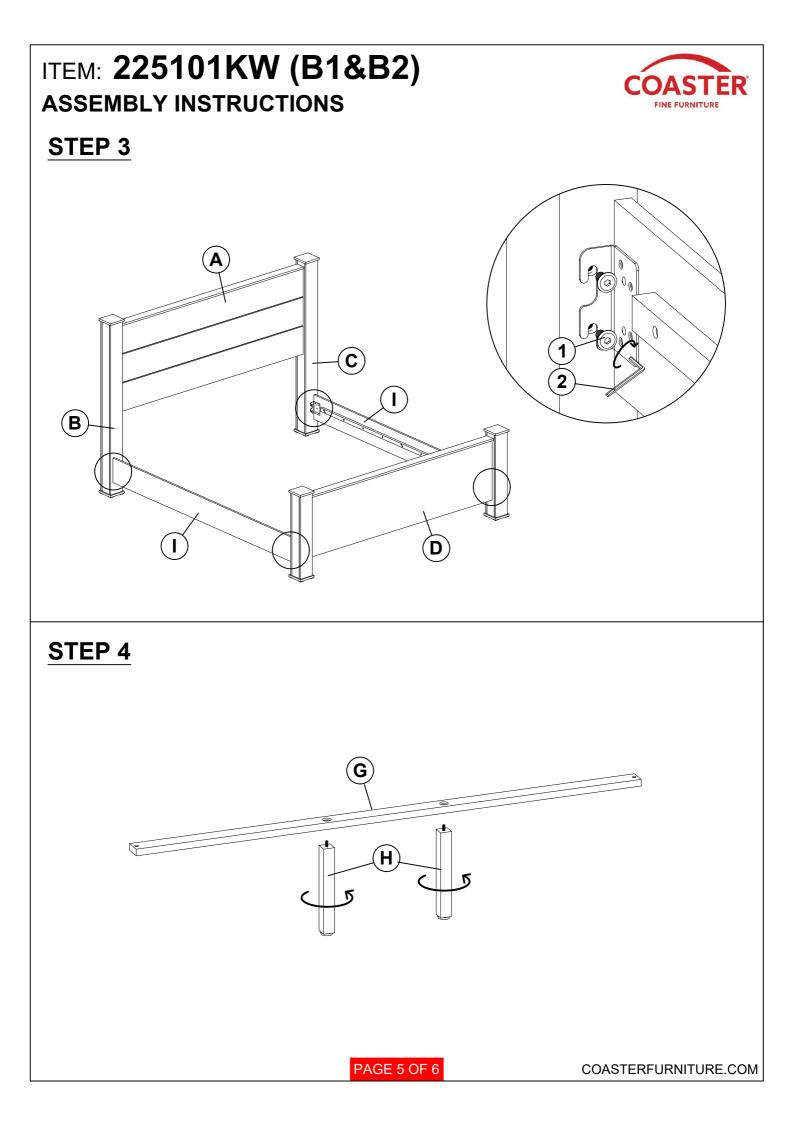

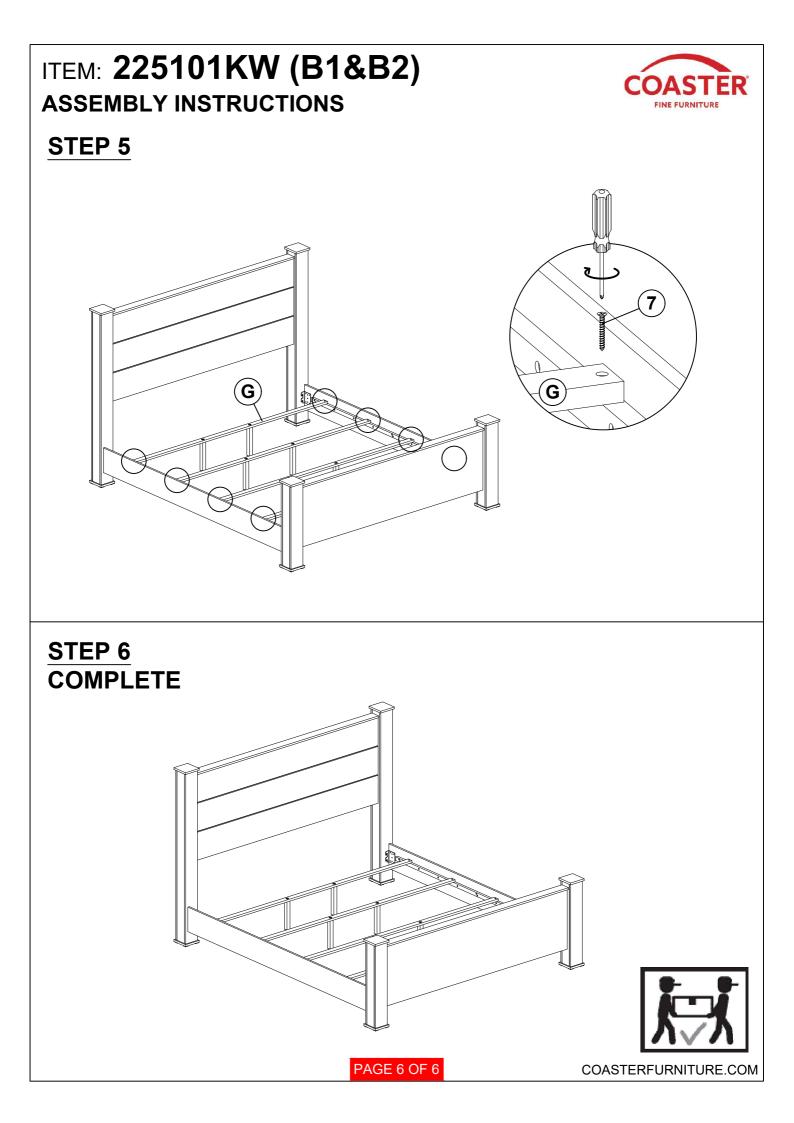

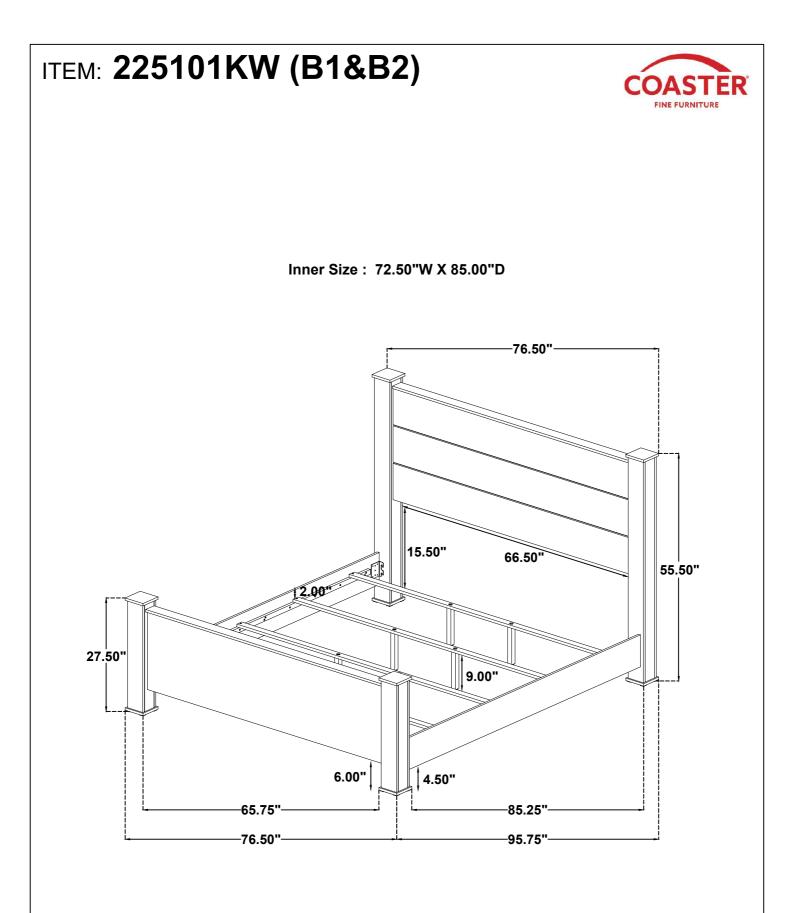

Note : Dimension tolerance ±5%