


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

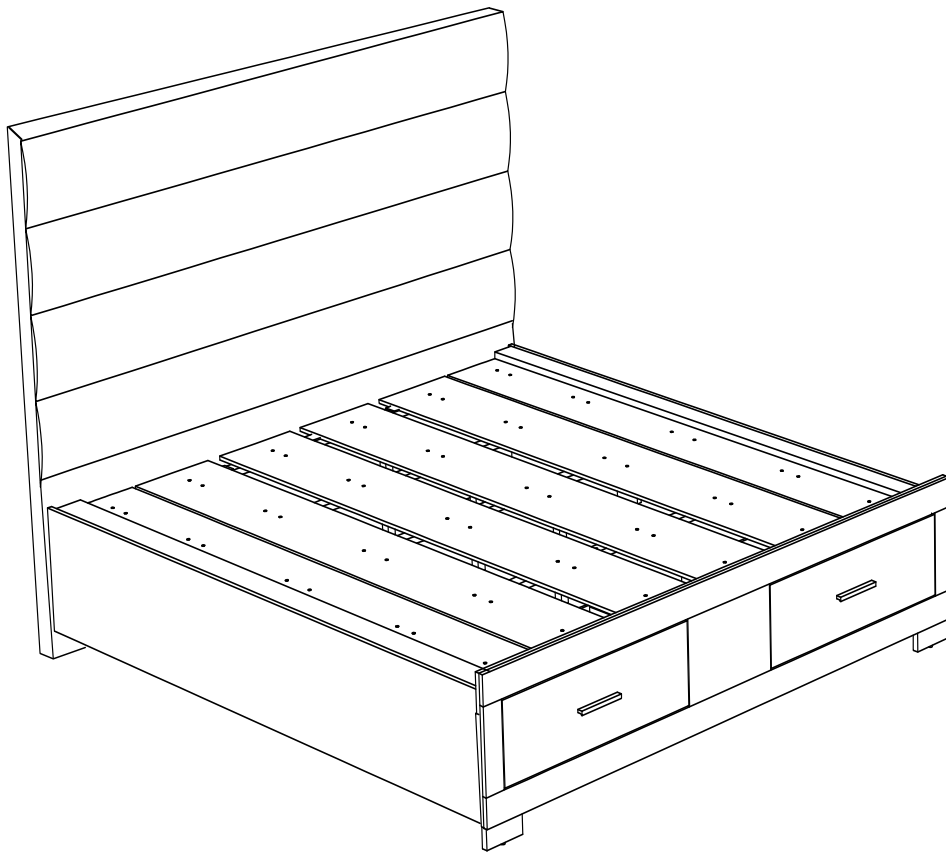

Fine Furniture for every stage of life

203510KW (B1-B3)
California King Storage Bed

ITEM: 203510KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A HEADBOARD

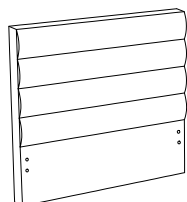

1PC


B2 (BOX 2)

B FOOTBOARD
FRAME




1PC

C BED RAIL




2PCS

D BED SLAT WITH
2 HOLE



2PCS

E BED SLAT WITH
MARKING




2PCS

F BED SLAT WITH
1 HOLE



1PC

G CONCEAL
PANEL



4PCS

H CONCEAL
PANEL(SIDE)



2PCS

I DRAWER SUPPORT
SLAT



1PC

J DRAWER
SUPPORT RAIL



2PCS

K BED SLAT SUPPORT
WITH LEVELER



9PCS


L DRAWER SUPPORT
SLAT LEG WITH
LEVELER



1PC

B3 (BOX 3)

M DRAWER BOX



2PCS

ITEM: 203510KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203510KW(B2)

1	FLAT HEAD SCREW (M4 x 32mm - RBW)		14PCS	5	LOCK WASHER (1/4" - BLK)		2PCS
2	PAN HEAD SCREW (M3.5 x 20mm - BLK)		30PCS	6	FLAT WASHER (1/4"ID x 13mm - BLK)		2PCS
3	SHORT BOLT (M6 x 35mm - BLK)		2PCS	7	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC
4	LONG BOLT (M6 x 50mm - BLK)		10PCS	8	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203510KW (B1-B3)

ASSEMBLY INSTRUCTIONS


STEP 1

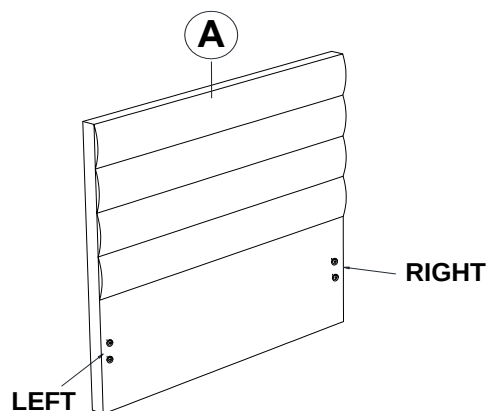


****FRONT VIEW****

Note : Please take note of the marking sticker (L&R) on the leg.


STEP 2

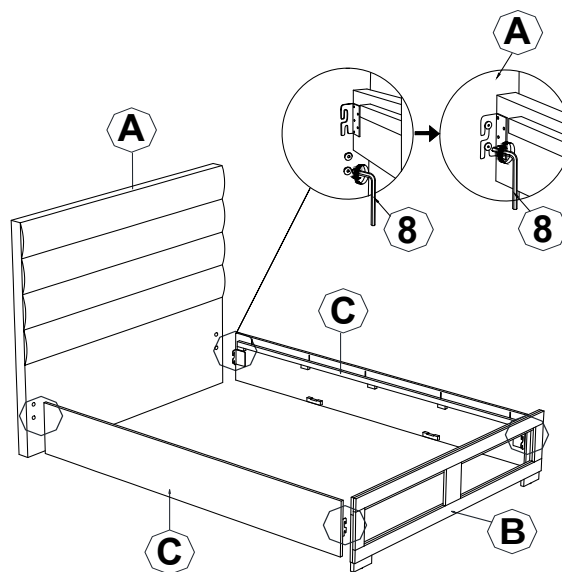

STEP 3

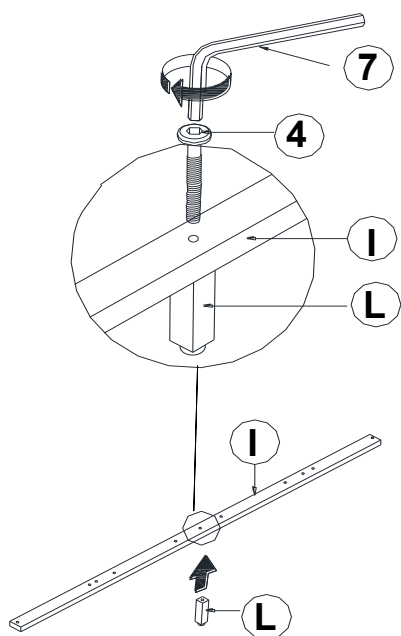

STEP 4

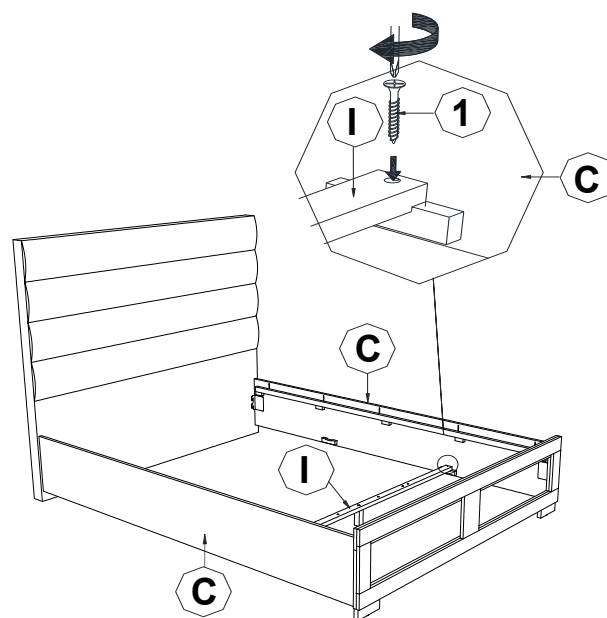


ITEM: 203510KW (B1-B3)


ASSEMBLY INSTRUCTIONS




STEP 5

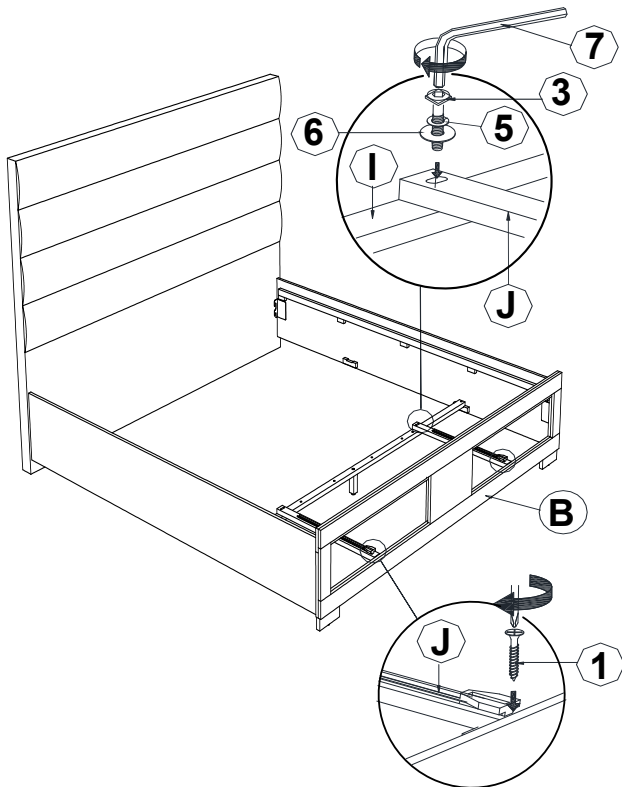


STEP 6

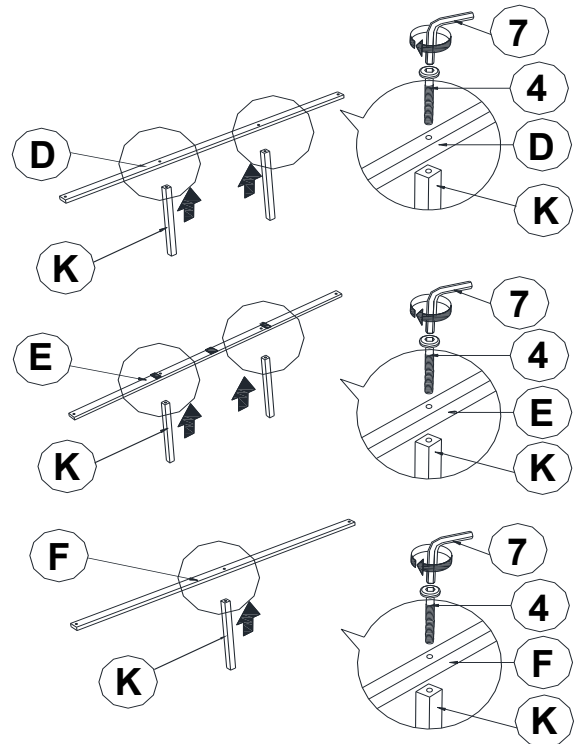

STEP 7

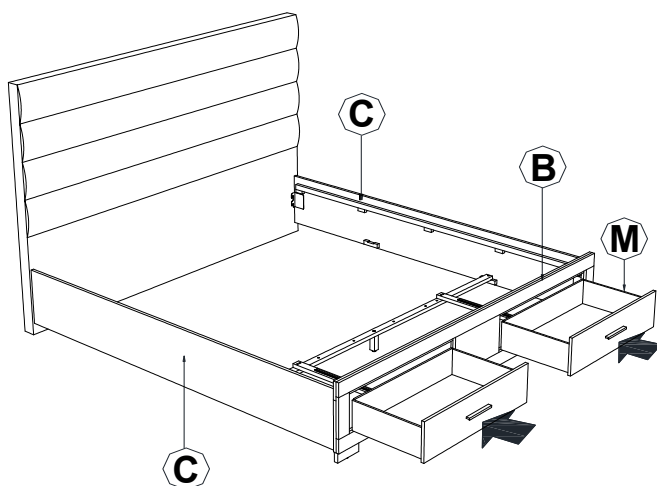


STEP 8

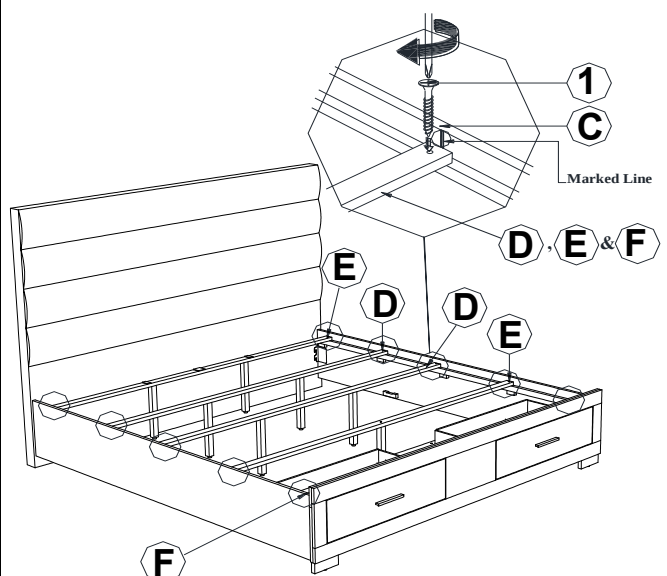


ITEM: **203510KW (B1-B3)**

ASSEMBLY INSTRUCTIONS


STEP 9

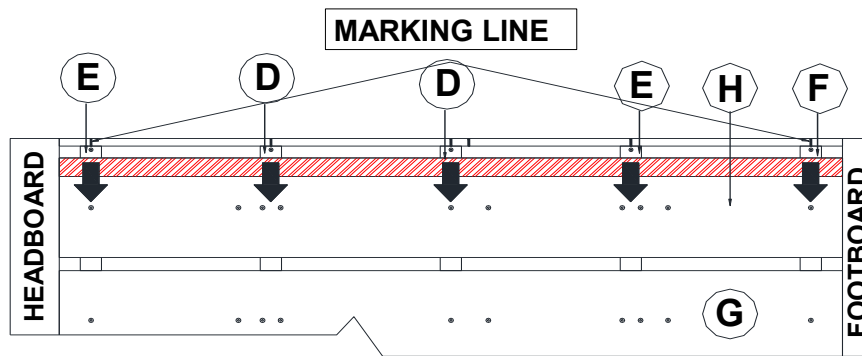

TIGHTEN THE PANHEAD SCREW (2) BY FOLLOW THE ARROW AS SHOWN

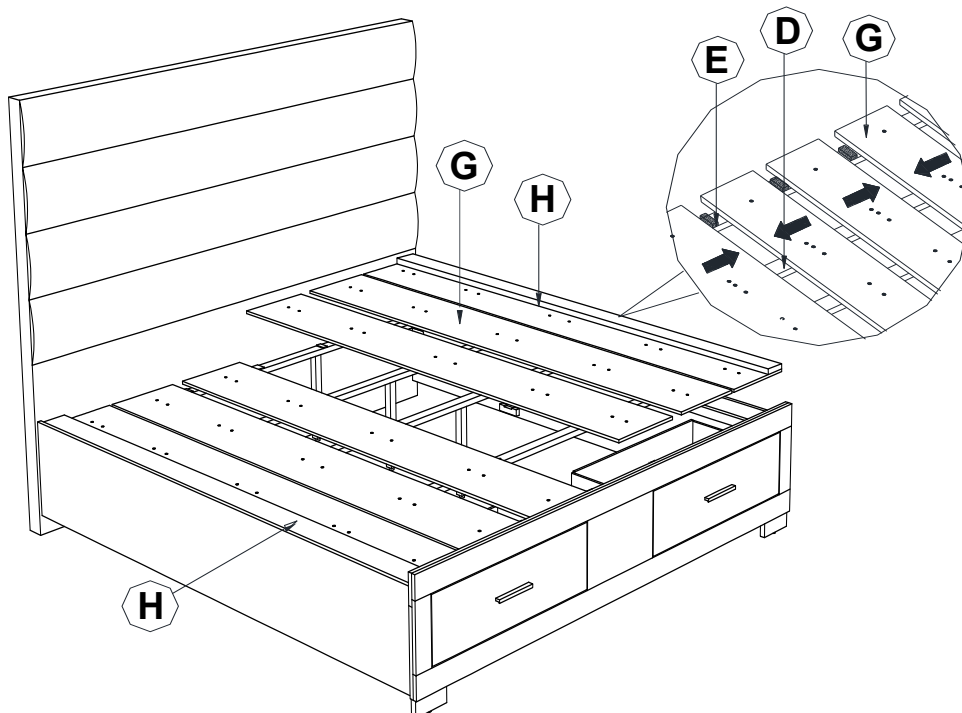

STEP 10 COMPLETE

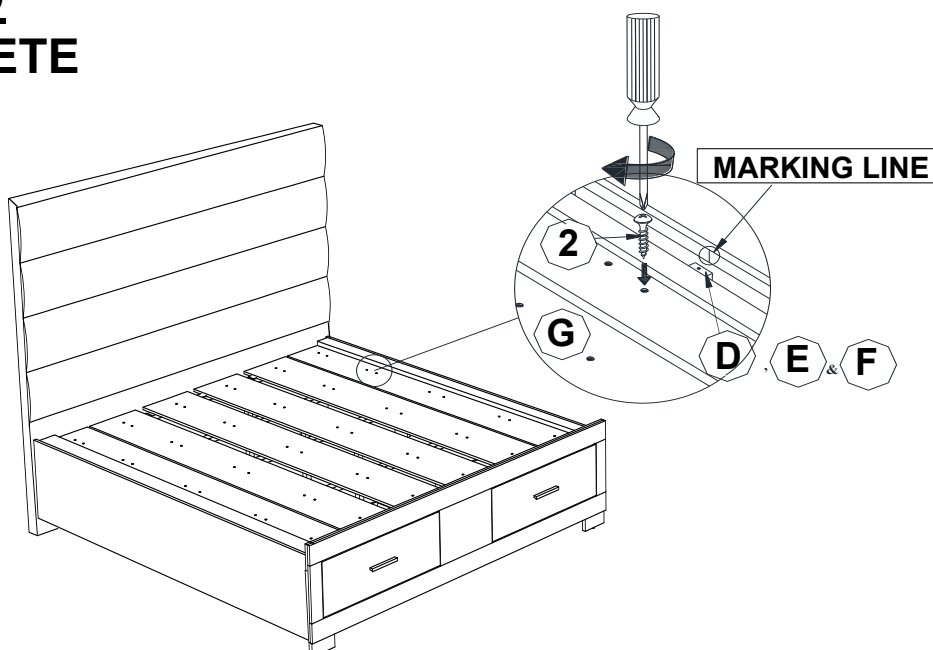


ITEM: **203510KW (B1-B3)**



Inner Size of Bed: 72.75"W X 86.00"D

Inner Size of Drawer : 27.25"W X 15.00"D X 5.00"H X 0.25"T

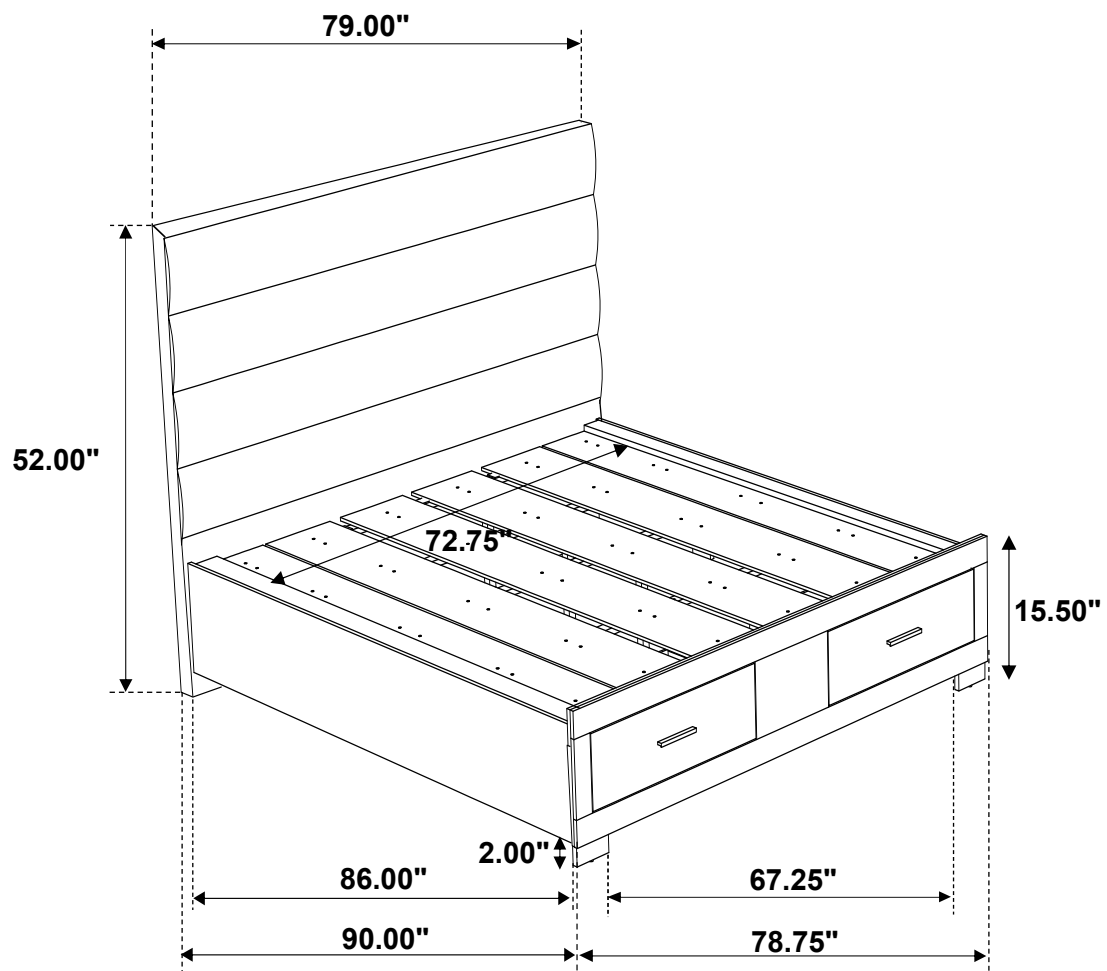

Note: Dimension tolerance $\pm 5\%$