


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

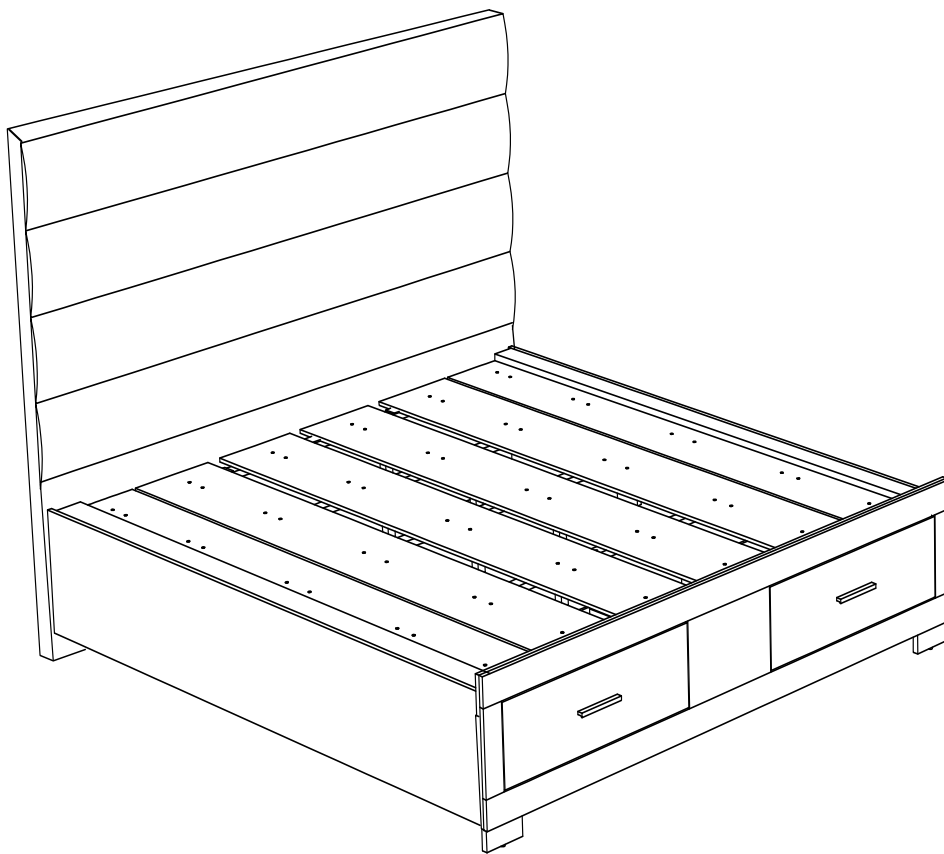

*Fine Furniture for every stage of life*

## **203510KW (B1-B3)** **California King Storage Bed**

# ITEM: 203510KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)


A HEADBOARD

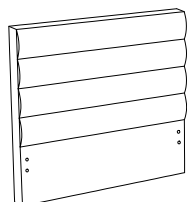

1PC


### B2 (BOX 2)

B FOOTBOARD FRAME



1PC

C BED RAIL




2PCS

D BED SLAT WITH 2 HOLE




2PCS

E BED SLAT WITH MARKING



2PCS

F BED SLAT WITH 1 HOLE




1PC

G CONCEAL PANEL



4PCS

H CONCEAL PANEL(SIDE)



2PCS

I DRAWER SUPPORT SLAT



1PC

J DRAWER SUPPORT RAIL



2PCS

K BED SLAT SUPPORT WITH LEVELER



9PCS


L DRAWER SUPPORT SLAT LEG WITH LEVELER



1PC

### B3 (BOX 3)

M DRAWER BOX



2PCS

# ITEM: 203510KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203510KW(B2)

1	<b>FLAT HEAD SCREW</b> (M4 x 32mm - RBW)		14PCS	5	<b>LOCK WASHER</b> (1/4" - BLK)		2PCS
2	<b>PAN HEAD SCREW</b> (M3.5 x 20mm - BLK)		30PCS	6	<b>FLAT WASHER</b> (1/4"ID x 13mm - BLK)		2PCS
3	<b>SHORT BOLT</b> (M6 x 35mm - BLK)		2PCS	7	<b>SMALL ALLEN WRENCH</b> (M4 x 65mm - BLK)		1PC
4	<b>LONG BOLT</b> (M6 x 50mm - BLK)		10PCS	8	<b>BIG ALLEN WRENCH</b> (M5 x 65mm - BLK)		1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 203510KW (B1-B3)

## ASSEMBLY INSTRUCTIONS


### STEP 1

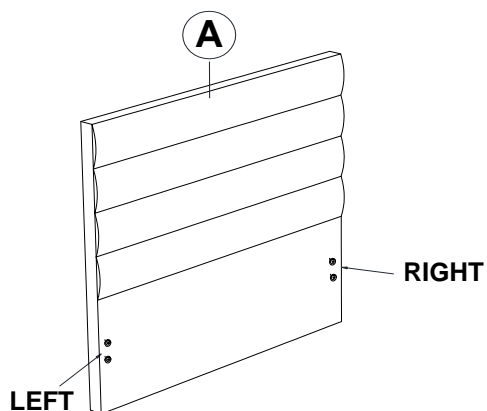


**\*\*FRONT VIEW\*\***

Note : Please take note of the marking sticker (L&R) on the leg.


### STEP 2

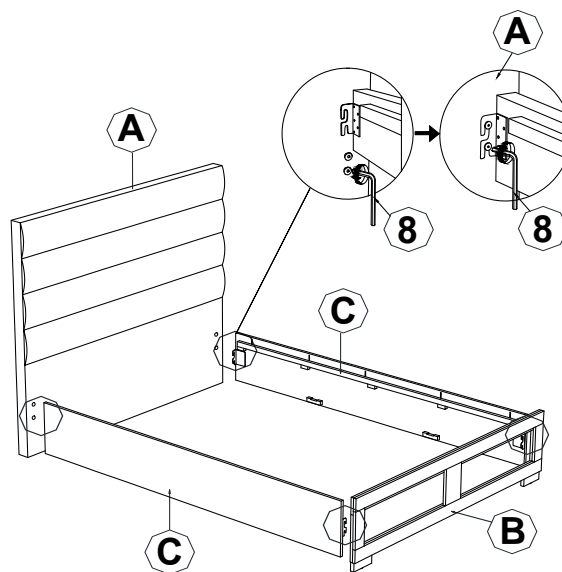

### STEP 3

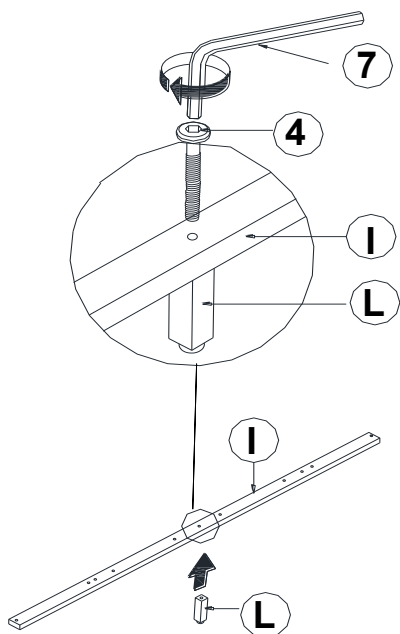

### STEP 4

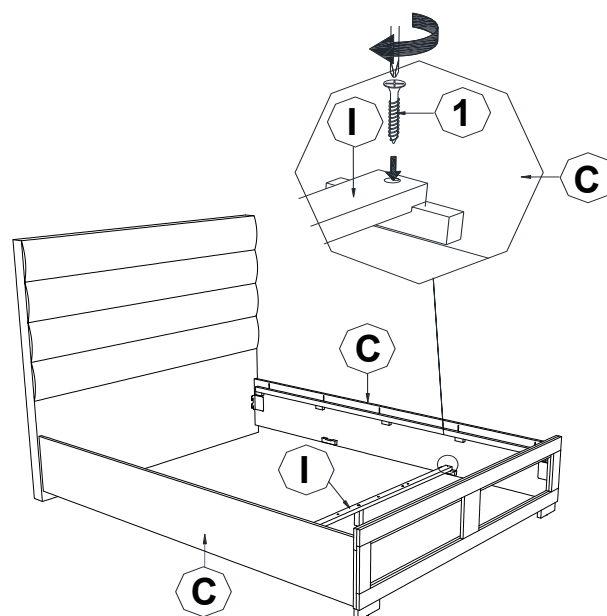


# ITEM: 203510KW (B1-B3)


## ASSEMBLY INSTRUCTIONS




### STEP 5

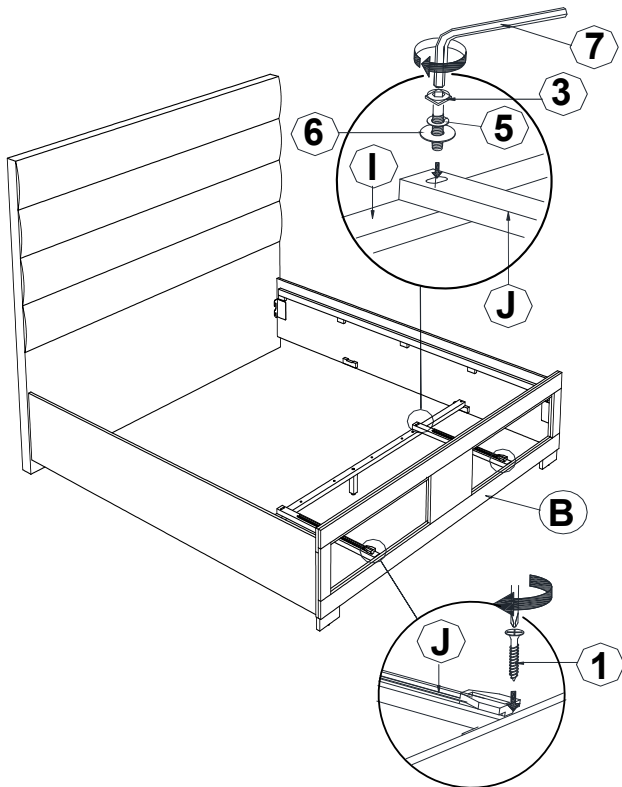


### STEP 6

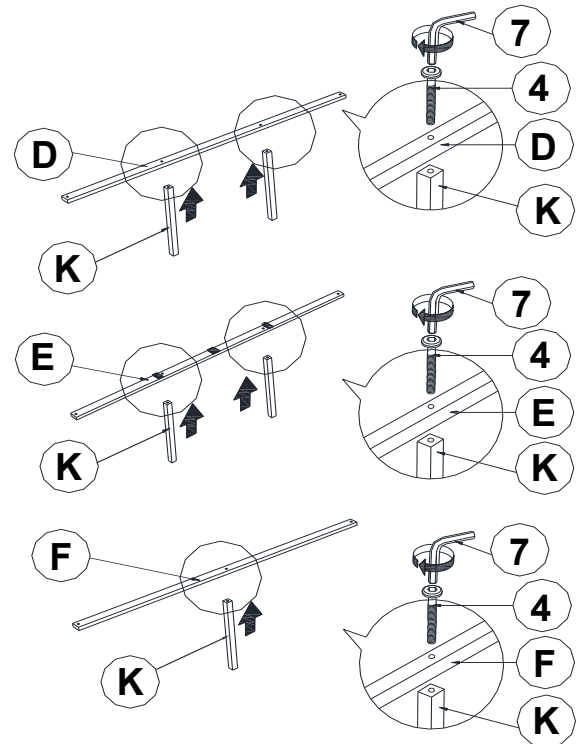

### STEP 7

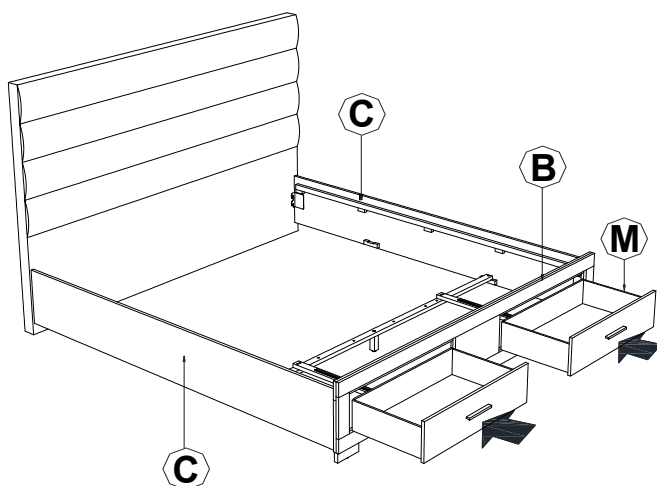


### STEP 8

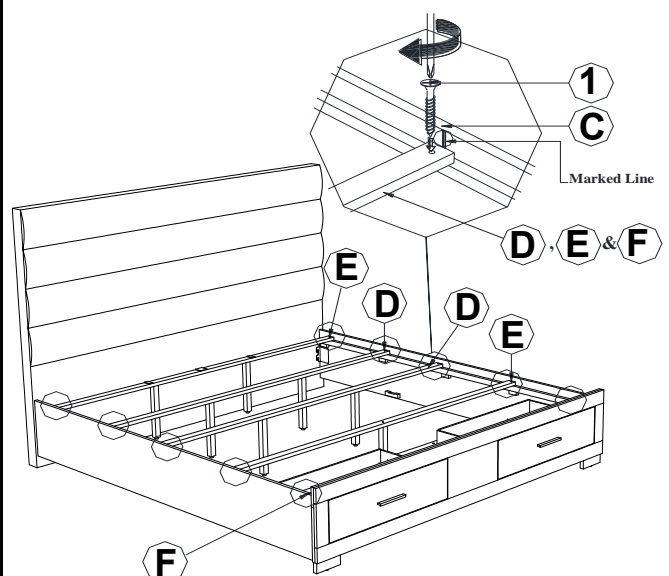


ITEM: **203510KW (B1-B3)**

## ASSEMBLY INSTRUCTIONS


### STEP 9

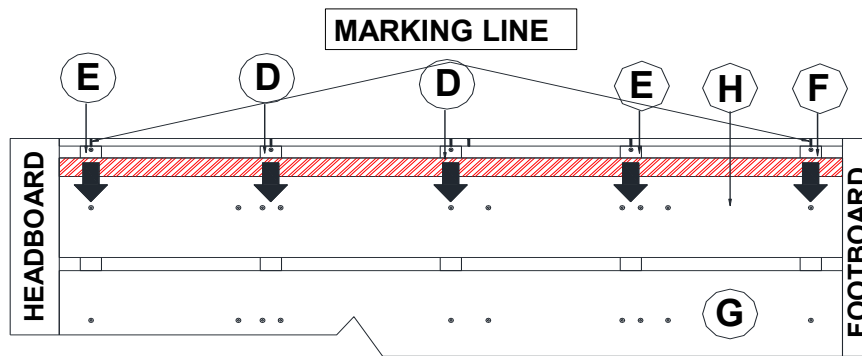

TIGHTEN THE PANHEAD SCREW (2) BY FOLLOW THE ARROW AS SHOWN

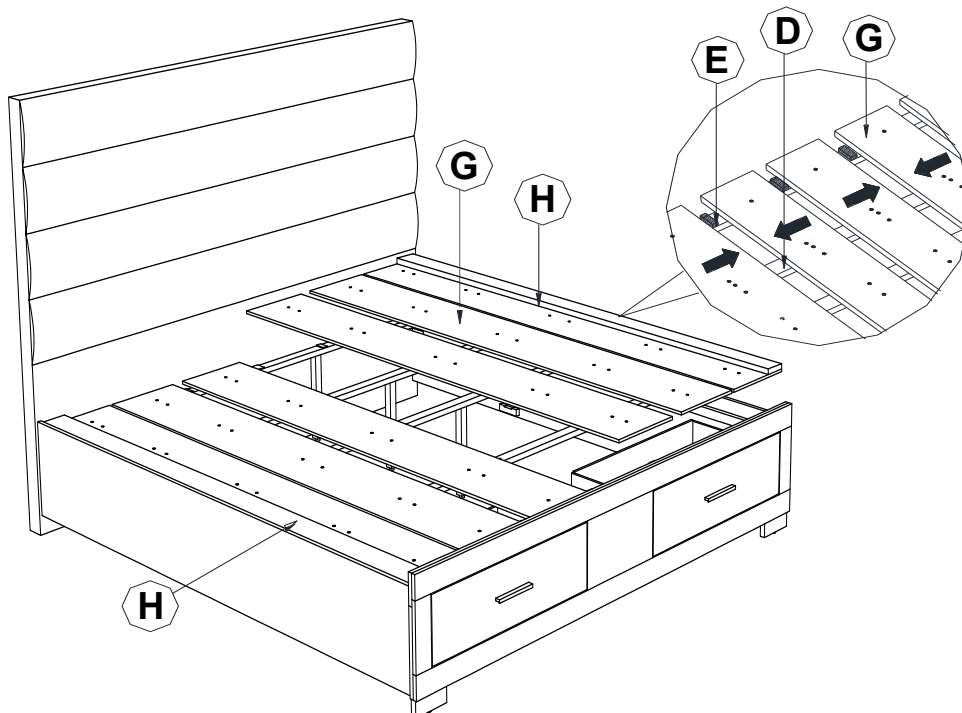

### STEP 10 COMPLETE

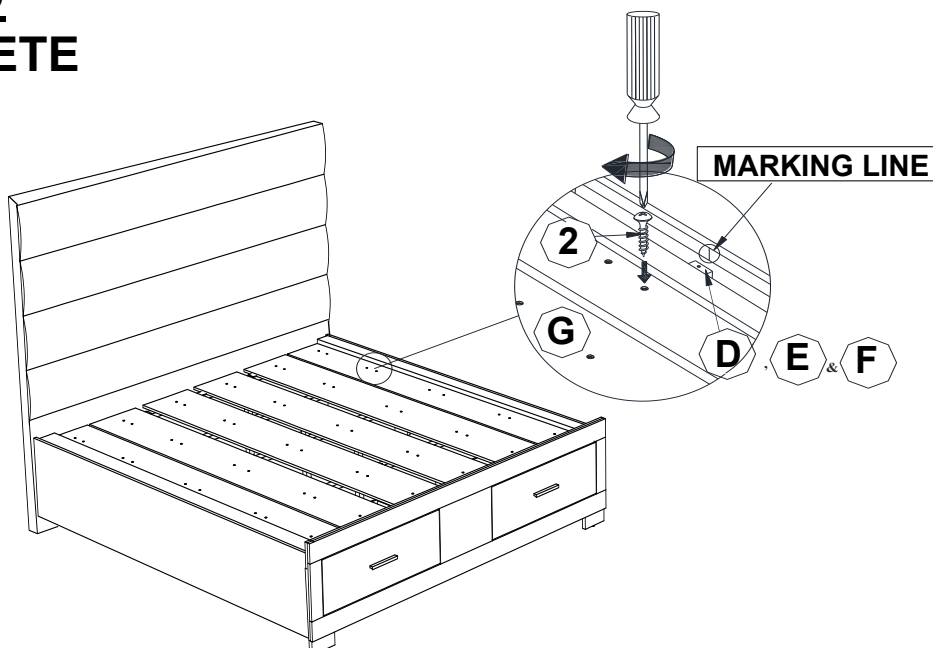


# ITEM: 203510KW (B1-B3)



Inner Size of Bed: 73.00"W X 85.00"D

Inner Size of Drawer : 27.25"W X 15.00"D X 5.00"H X 0.25"T

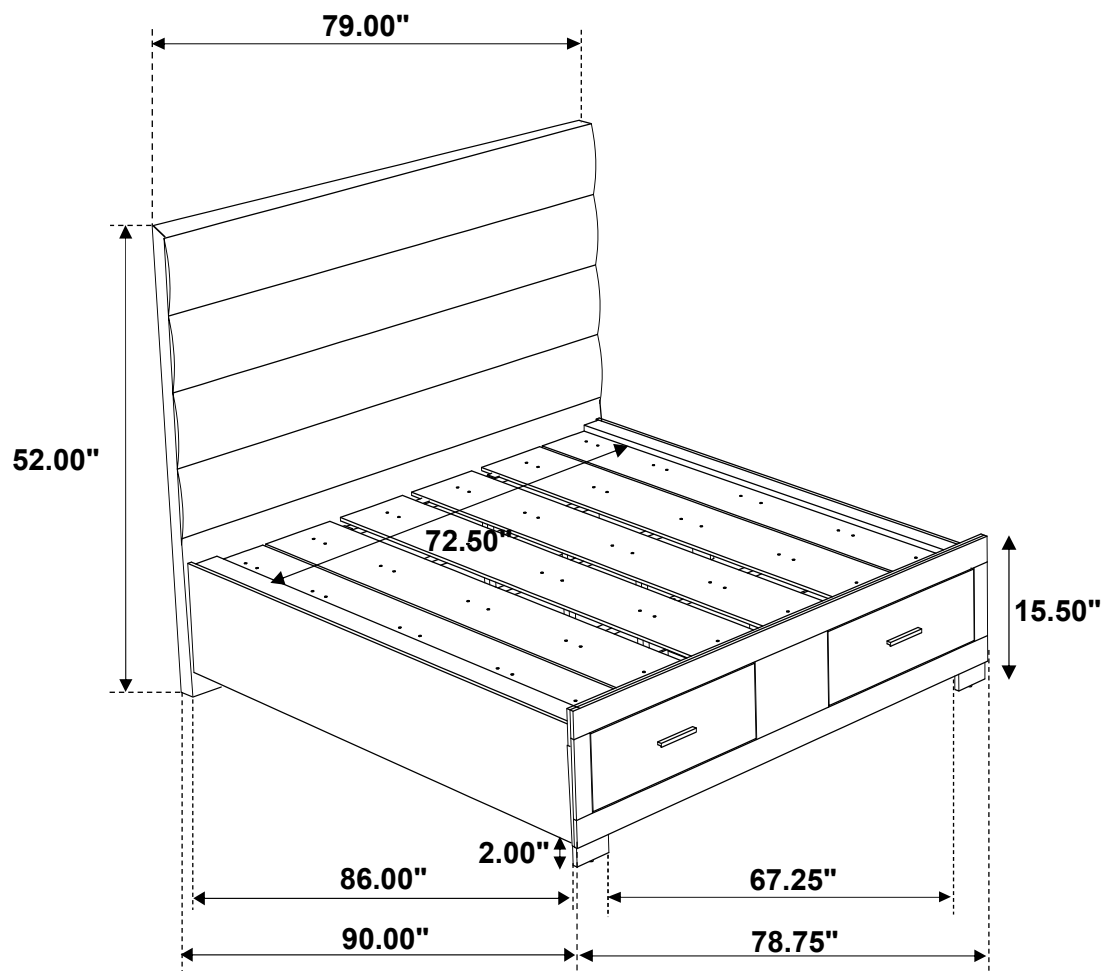

Note: Dimension tolerance  $\pm 5\%$