


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

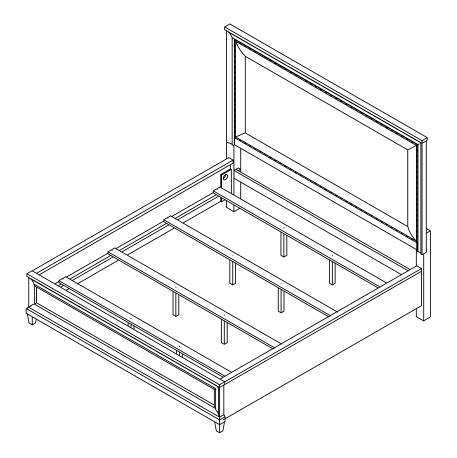

Fine Furniture for every stage of life

215921KE (B1-B3) Eastern King Bed

REVISION 0: 06/06/2025

PAGE 1 OF 6

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

HEADBOARD PANEL



1PC

В **HEADBOARD LEG**



1PC

LEFT HEADBOARD LEG



1PC

HEADBOARD BOTTOM D RAIL



1PC

B2 (BOX 2)

FOOTBOARD PANEL



1PC

RIGHT FOOTBOARD LEG



1PC

LEFT FOOTBOARD LEG



1PC

B3 (BOX 3)

BED RAIL



2PCS

BED SLAT



4PCS

BED SLAT SUPPORT WITH LEVELER



8PCS

215921KE(B1) FROM BOX 1 HB **HEADBOARD COMPLETE**



1PC

215921KE(B2) FROM BOX 2 **FOOTBOARD** COMPLETE



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS



- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Λ

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215921KE(B1)

1	LONG BOLT (Ø5/16" x 50MM- RBW)	10PCS	3	FLAT WASHER (Ø5/16" - RBW)	10PCS
2	LOCK WASHER (Ø5/16" - RBW)	10PCS	4	ALLEN WRENCH (4MMx60MM - RBW)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 215921KE(B2)


5	SHORT BOLT (Ø5/16" x 38MM- RBW)	4PCS	7	FLAT WASHER (Ø5/16" - RBW)	4PCS
6	LOCK WASHER (Ø5/16" - RBW)	4PCS	8	ALLEN WRENCH (4MMx60MM - RBW)	1PC


Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 215921KE(B3)


9	THREADED BOLT (Ø5/16" x 90MM - RBW)		8PCS	12	WRENCH (14MM - RBW)		1PC
10	HALF ROUND NUT (Ø5/16" - RBW)	EOE	8PCS	13	FLAT HEAD SCREW (Ø4 x 30MM - RBW)) mmmm	8PCS
11	HEX NUT (Ø5/16" x 14MM - RBW)		8PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

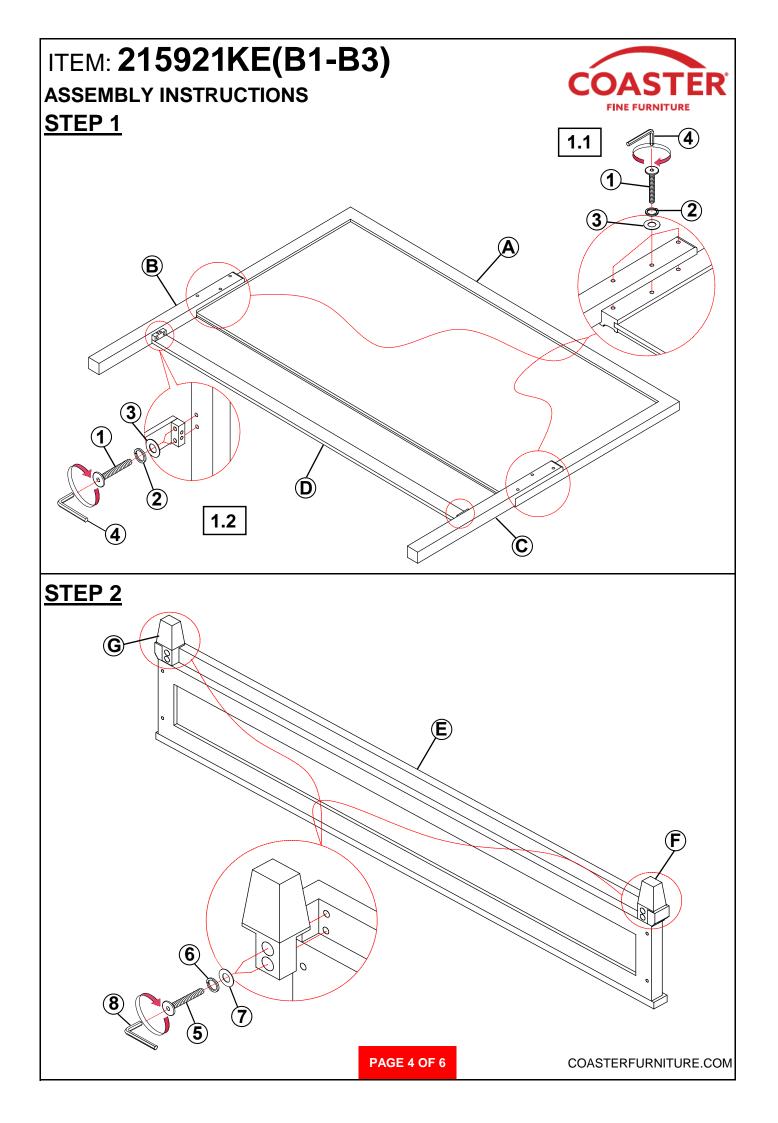


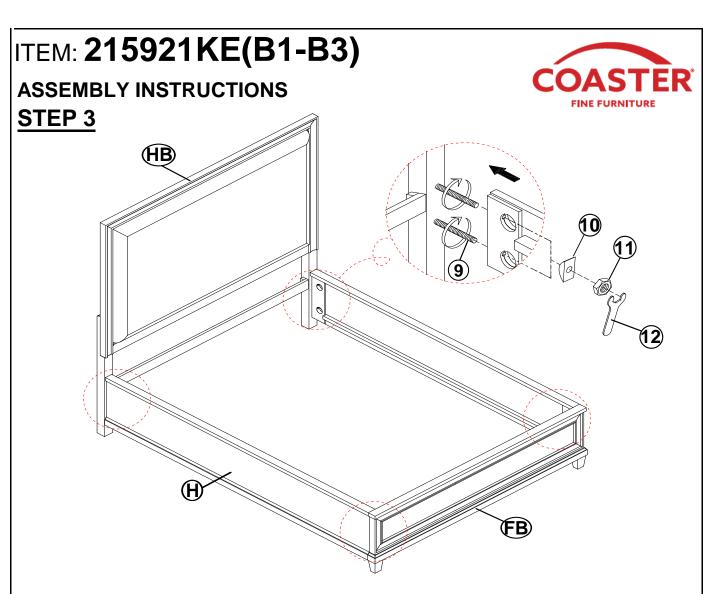

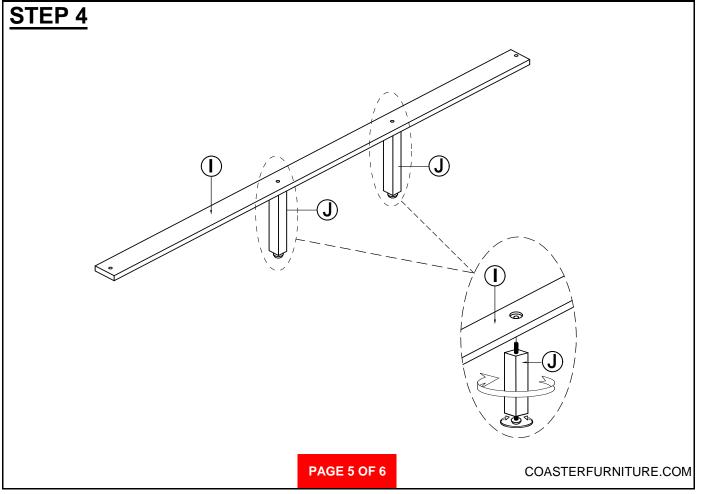


ASSEMBLY INSTRUCTIONS STEP 5



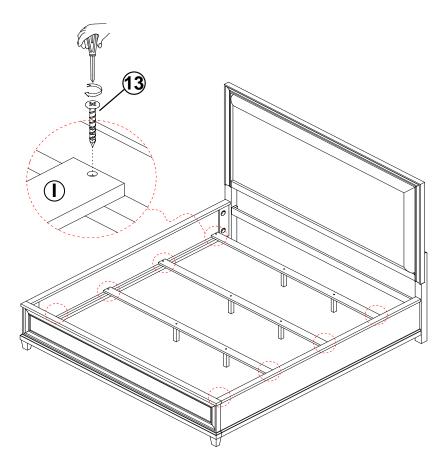

STEP 6 COMPLETE

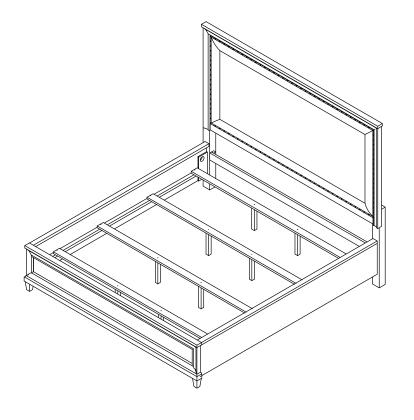


PAGE 6 OF 6

K\$

COASTERFURNITURE.COM



Inner Size: 77.00"W X 81.50"D

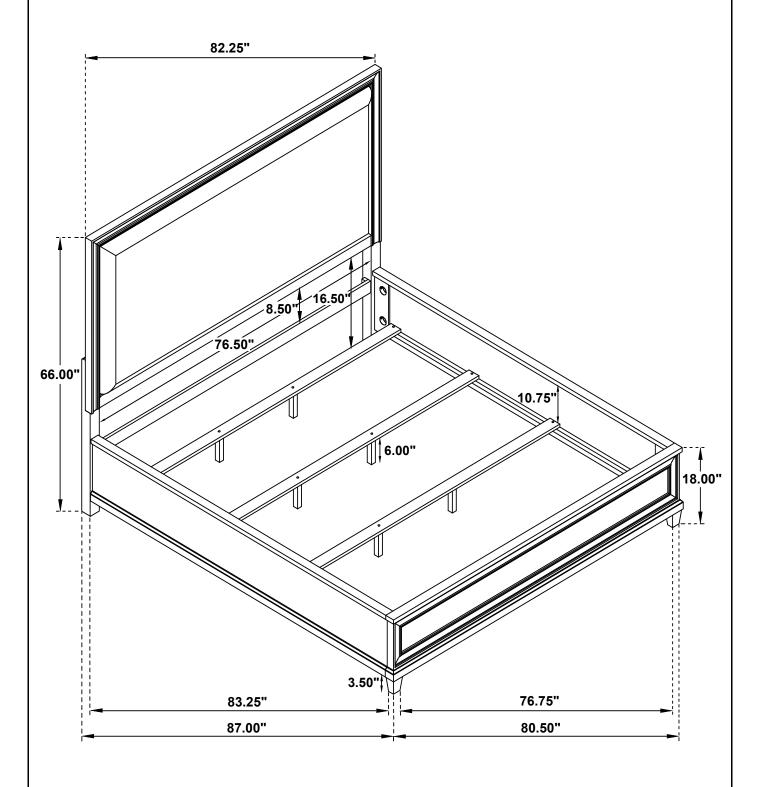

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM