



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

601510(B1-B3)
Sectional

ITEM: 601510(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A LAF SEAT FRAME



1PC

B LAF LEFT BACK



1PC

C LAF CONSOLE BACK



1PC

D LAF RIGHT BACK



1PC

E LAF ARM



1PC

B2 (BOX 2)

F WEDGE



1PC

G WEDGE LEFT BACK



1PC

H WEDGE RIGHT BACK



1PC


I FOOT



5PCS

B3 (BOX 3)

J RAF SEAT FRAME



1PC

K RAF LEFT BACK



1PC

L RAF CONSOLE BACK



1PC

M RAF RIGHT BACK



1PC

N RAF ARM



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 601510(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 601510(B1)

- 1 BOLT
(M6 x 50MM - RBW)



3PCS

- 2 LOCK WASHER
(1/4" x 12 Ø - RBW)



3PCS

- 3 FLAT WASHER
(1/4" x 19 Ø - RBW)



3PCS


- 4 ALLEN WRENCH
(M4 x 100MM - RBW)



1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 601510(B2)

- 5 FLAT HEAD SCREW
(M4 x 45MM - RBW)



5PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 601510(B3)

- 6 BOLT
(M6 x 50MM - RBW)



3PCS

- 7 LOCK WASHER
(1/4" x 12 Ø - RBW)



3PCS

- 8 FLAT WASHER
(1/4" x 19 Ø - RBW)



3PCS

- 9 ALLEN WRENCH
(M4 x 100MM - RBW)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **601510(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 1

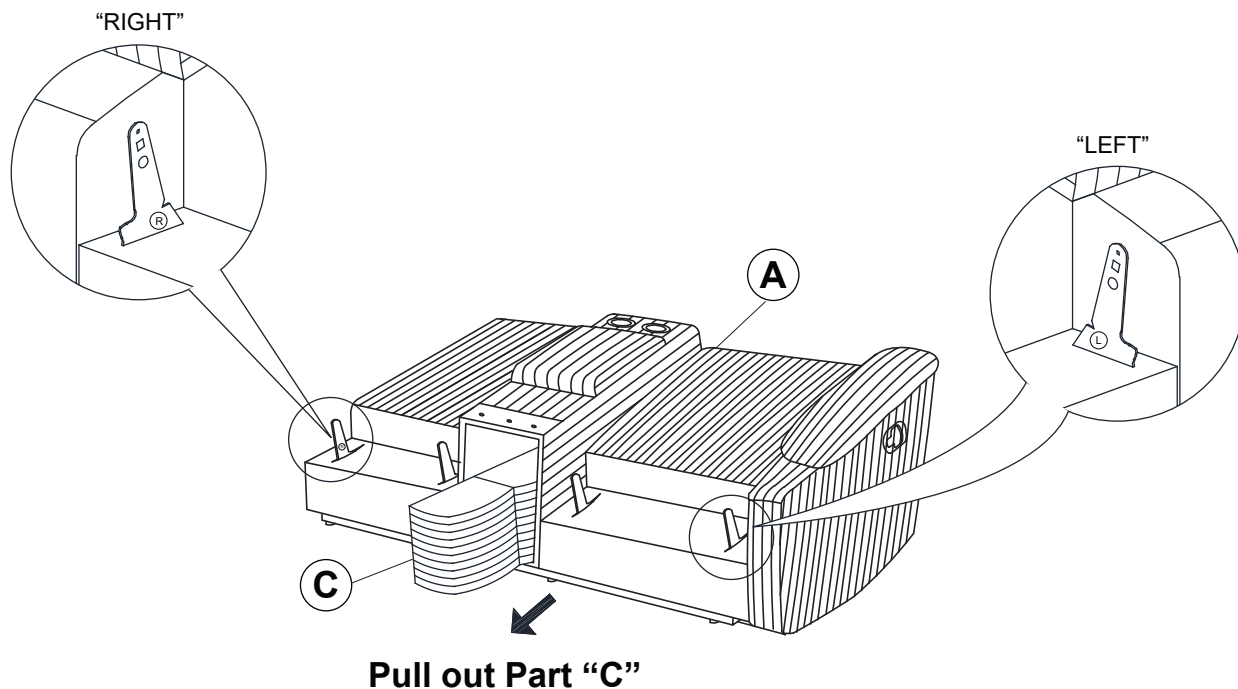


STEP 2

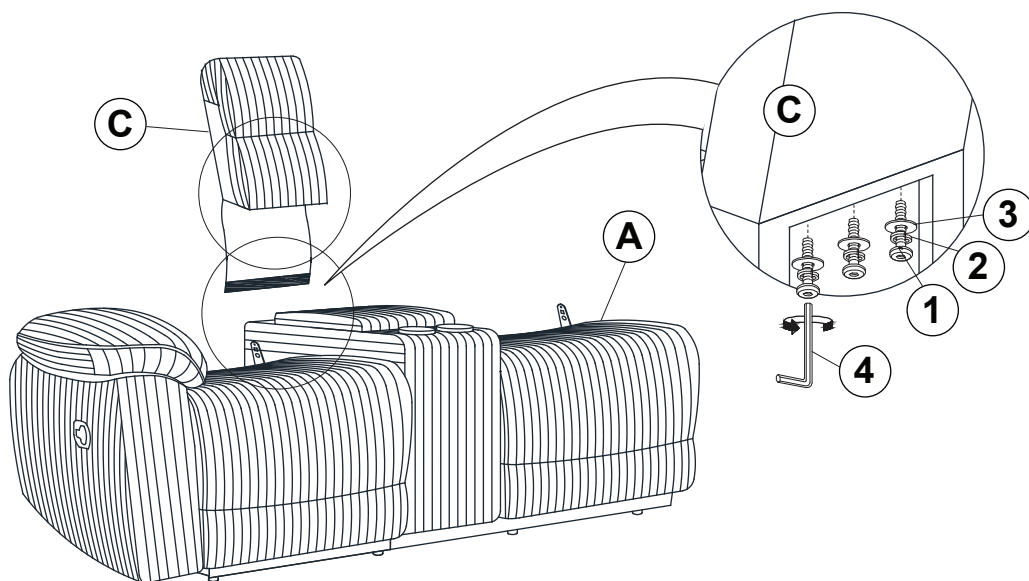


ITEM: **601510(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

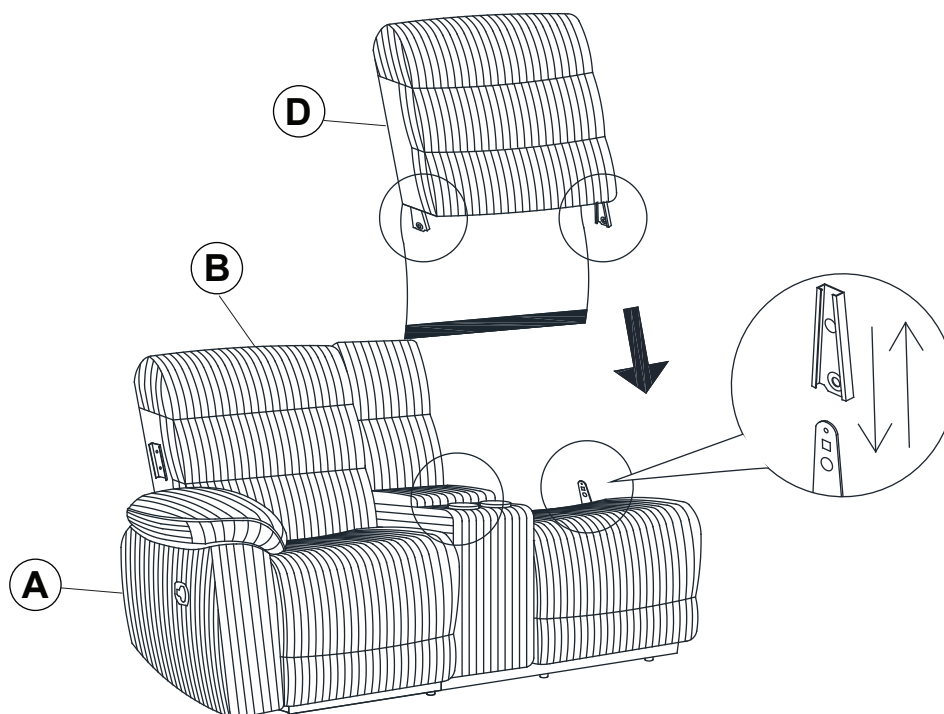


STEP 4

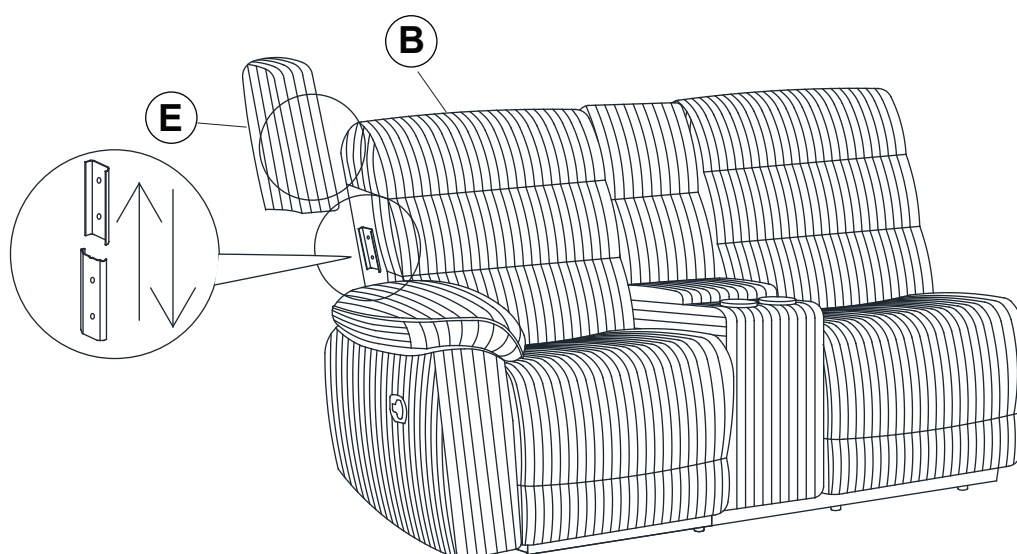


ITEM: **601510(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 5

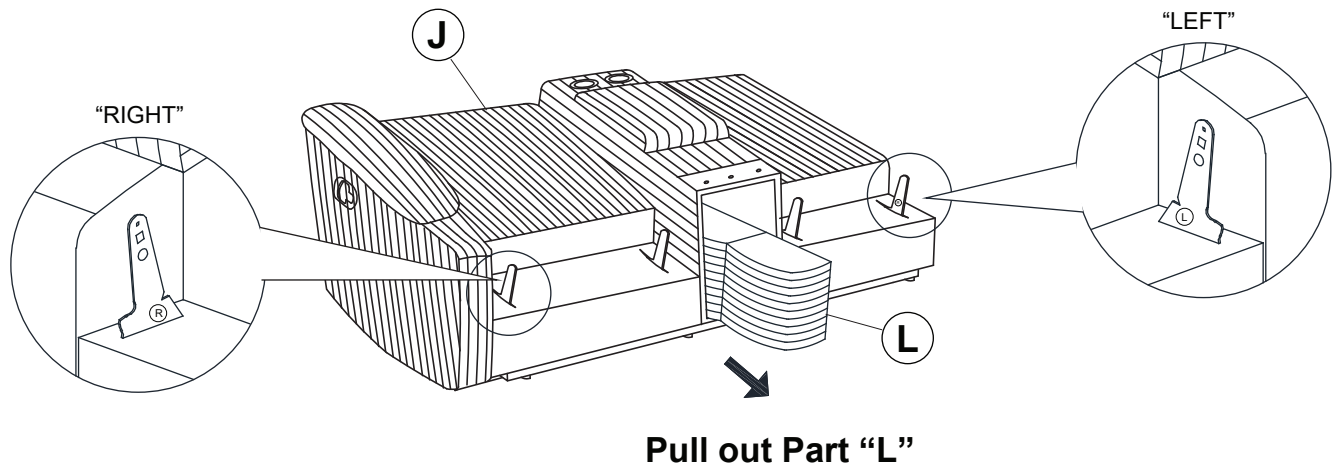


STEP 6

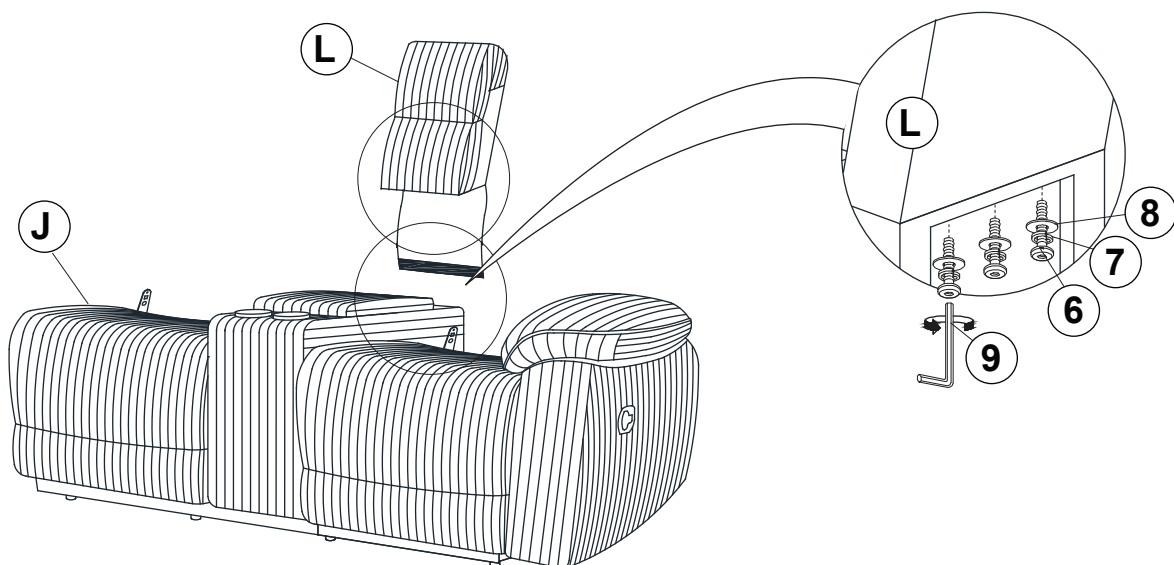


ITEM: **601510(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 7

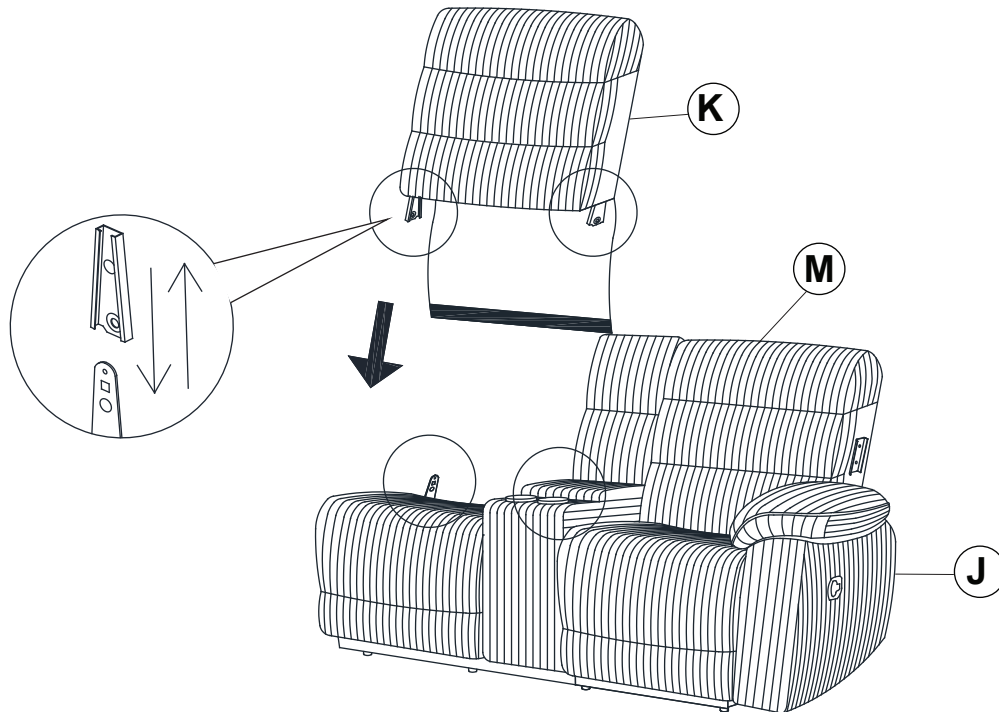


STEP 8

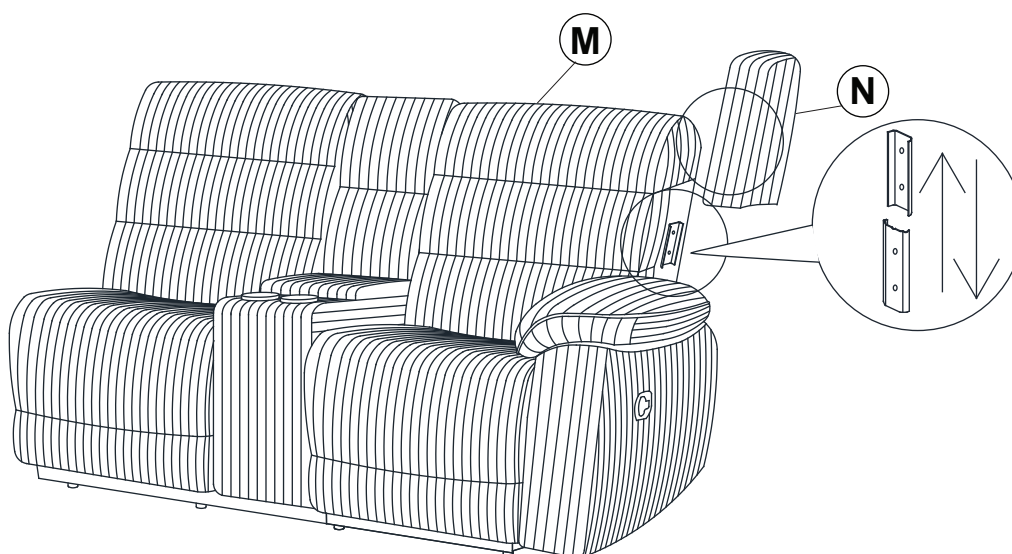


ITEM: **601510(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 9

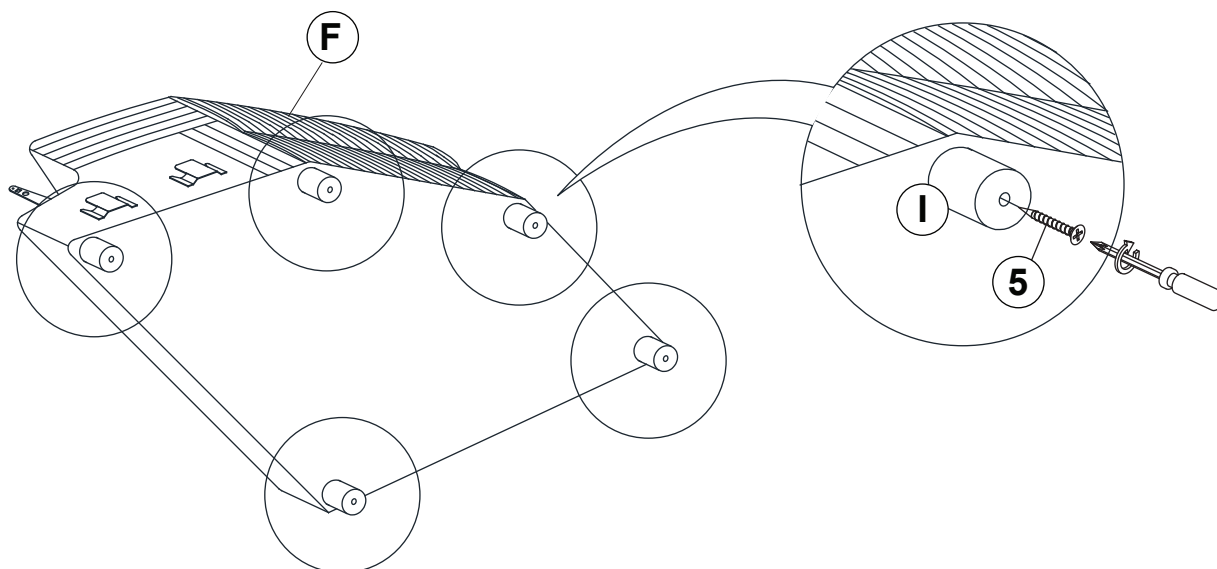


STEP 10

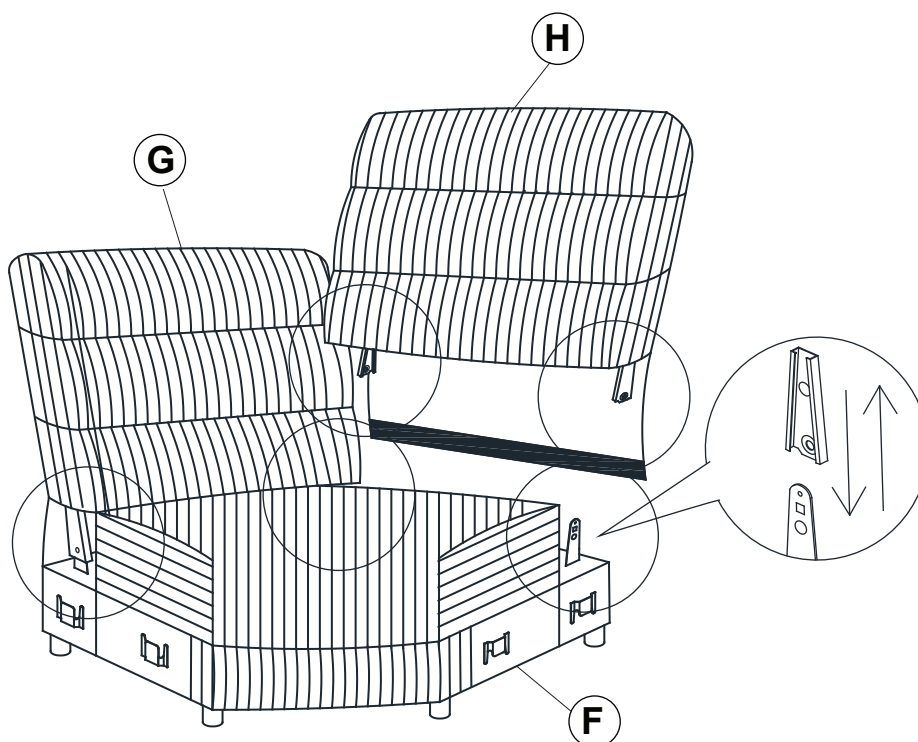


ITEM: **601510(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 11

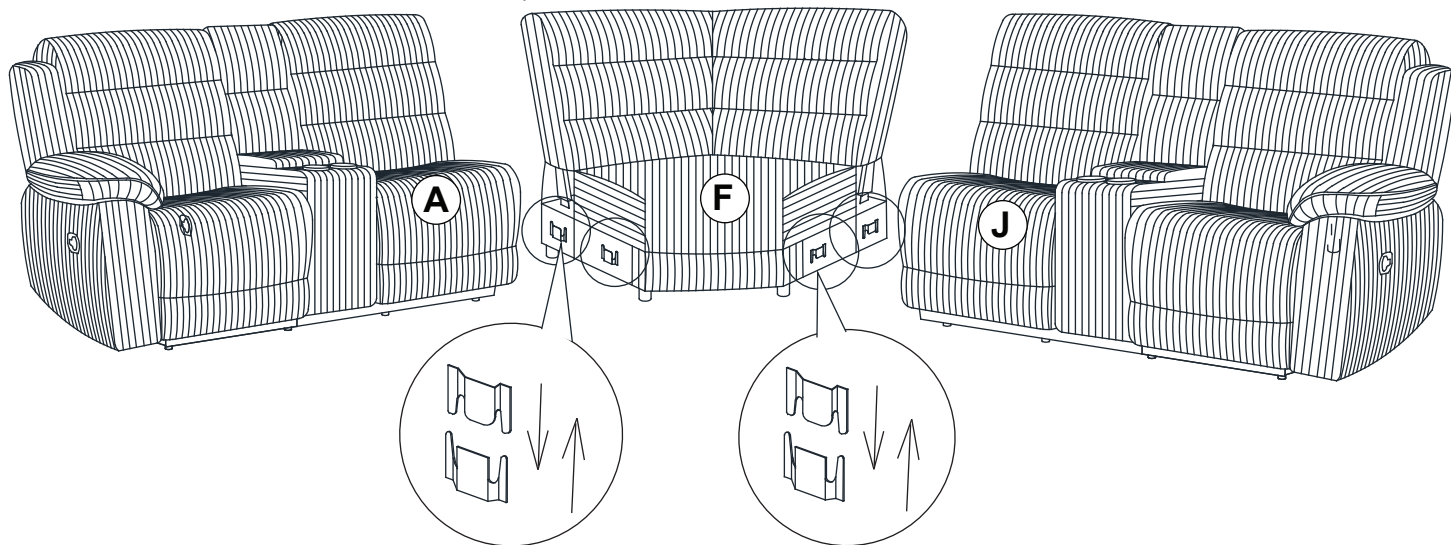


STEP 12

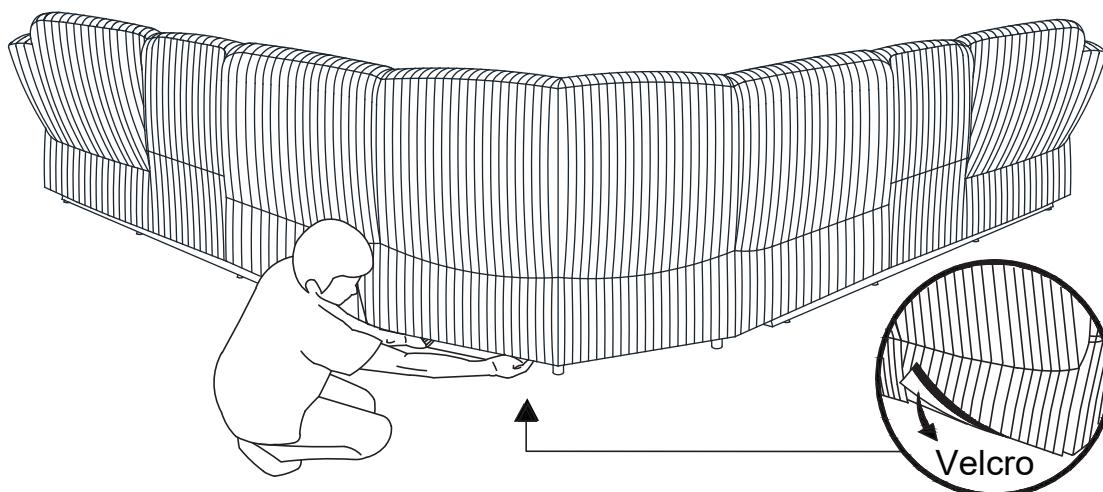


STEP 13

COMPLETE

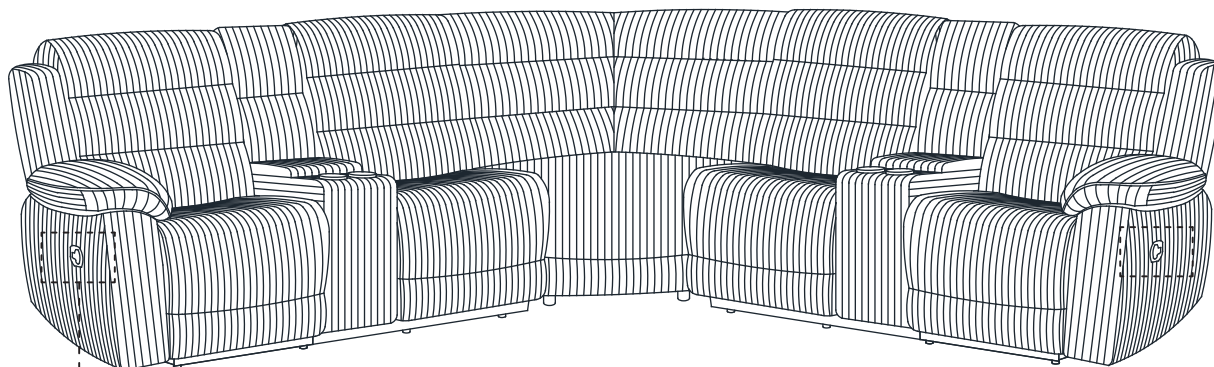

ITEM: **601510(B1-B3)**

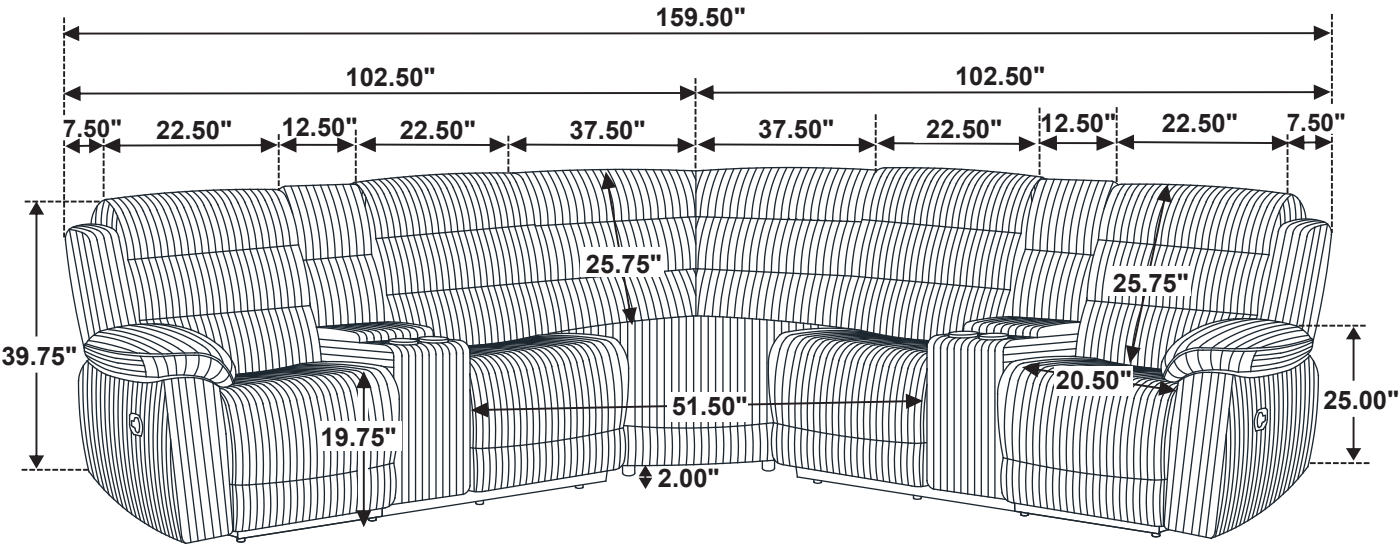

Note : Dimension tolerance $\pm 5\%$