

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

930120
BEAUTY STATION

ITEM:930120

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

















1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

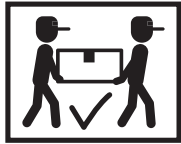

ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

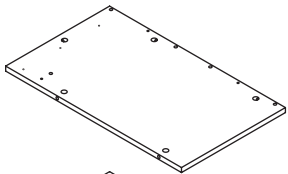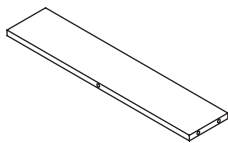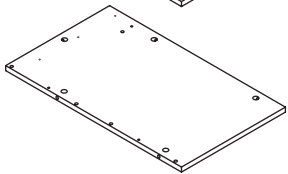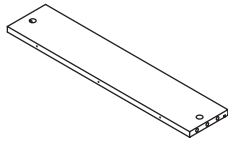
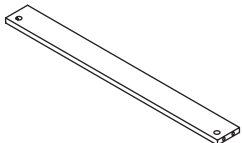
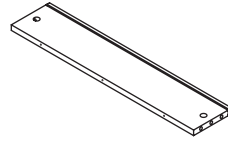
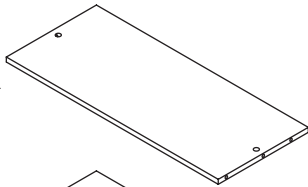
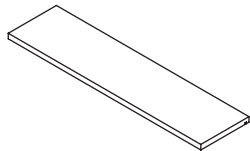
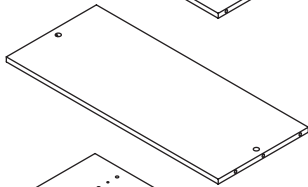
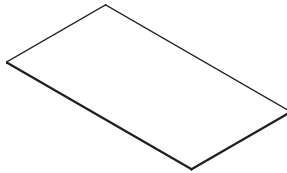
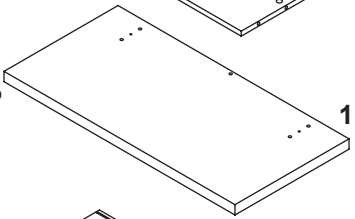
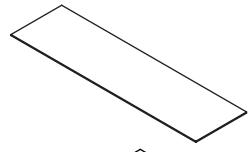
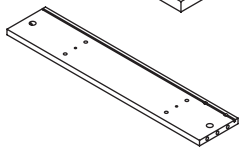
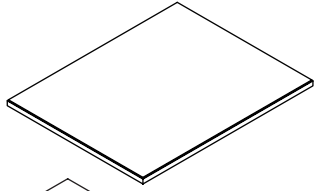
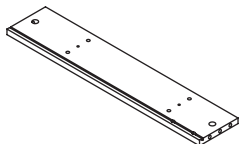
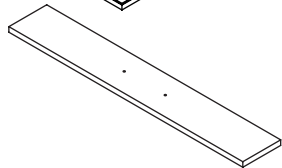
A	VANITY LEFT SIDE PANEL		1 PC	I	MIRROR BACK PARTITION PANEL		1 PC
B	VANITY RIGHT SIDE PANEL		1 PC	J	MIRROR BOTTOM PANEL		1 PC
C	VANITY FRONT BOTTOM PANEL		1 PC	K	MIRROR CROSS PANEL		1 PC
D	VANITY LOWER BACK PANEL		1 PC	L	MIRROR TOP PANEL		1 PC
E	VANITY UPPER BACK PANEL		1 PC	M	MIRROR LOWER BACK PANEL		1 PC
F	VANITY TOP PANEL		1 PC	N	MIRROR UPPER BACK PANEL		1 PC
G	MIRROR LEFT SIDE PANEL		1 PC	O	MIRROR		1 PC
H	MIRROR RIGHT SIDE PANEL		1 PC	P	DRAWER FRONT PANEL		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:930120

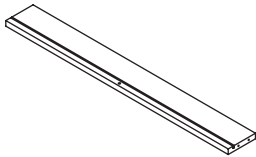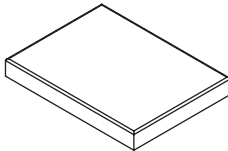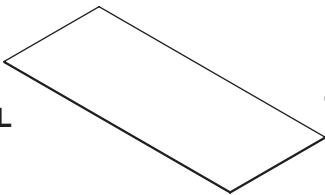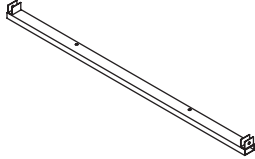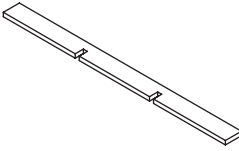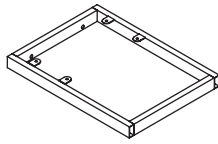











Q	DRAWER BACK PANEL		1 PC	A2	STOOL SIDE PANEL		2 PCS
R	DRAWER LEFT SIDE PANEL		1 PC	A3	STOOL DIVIDER PANEL		1 PC
S	DRAWER RIGHT SIDE PANEL		1 PC	A4	STOOL SEAT CUSHION		1 PC
T	DRAWER BOTTOM PANEL		1 PC	A5	VANITY SIDE METAL FRAME		4 PCS
U	DRAWER BOTTOM SUPPORT		1 PC	A6	VANITY TOP METAL FRAME		2 PCS
V	DRAWER SHORT DIVIDER PANEL		1 PC	A7	VANITY BOTTOM METAL FRAME		2 PCS
A1	DRAWER LONG DIVIDER PANEL		1 PC	A8	STOOL METAL FRAME		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:930120

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE BOLT Ø4x28mm BLK		2 PCS
2	WOODEN DOWEL Ø8x30mm		37 PCS	12	BOLT M6x35mm BLK		8 PCS
3	CAM BOLT Ø7x35.5mm SR		21 PCS	13	BOLT M6x12mm BLK		8 PCS
4	CAM LOCK Ø15x12mm SR		31 PCS	14	ALLEN WRENCH 4mm SR		1 PC
5	SCREW Ø4.3x35mm SR		5 PCS	15	ALLEN WRENCH 3mm SR		1 PC
6	CAM BOLT M6x31.5mm BLK		10 PCS	16	FLOOR PROTECTOR 30x15mm		8 PCS
7	RAIL L = 340mm BLK		2 PCS	17	RAIL L = 450mm BLK		2 PCS
8	RAIL SCREW Ø3.5x15mm BLK		26 PCS	18	METAL PLATE 4.5x12.3x1.2mm		2 PCS
9	BOLT M4x15mm BLK		2 PCS	19	METAL PLATE SCREW Ø3x15mm		4 PCS
10	HANDLE L = 148mm		1 PC	20	STICKER Ø20mm		6 PCS


Z7, Z10, Z17 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **930120**


STEP 1




1




2
x 11



3
x 2

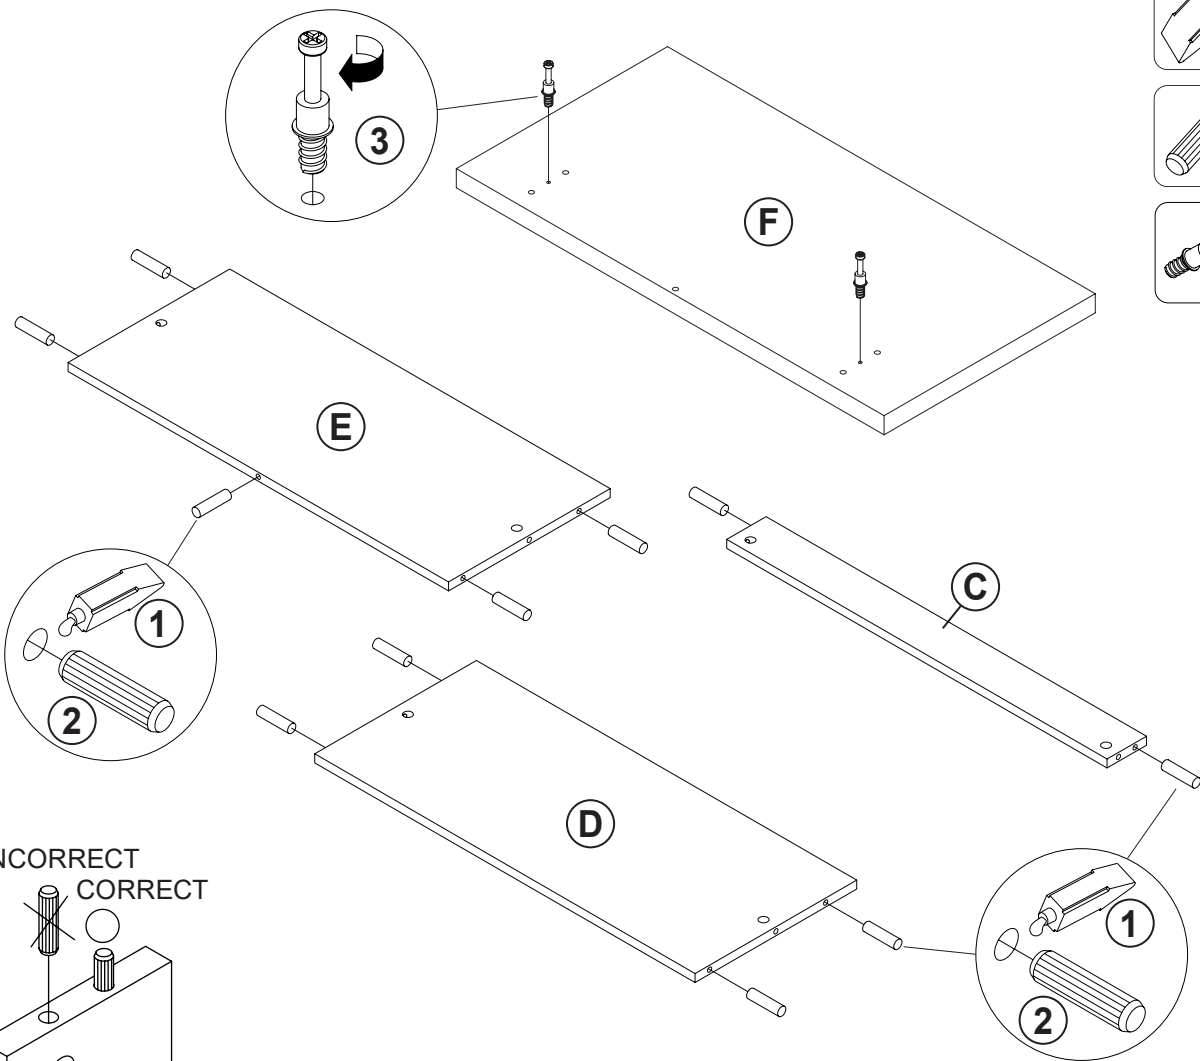


INCORRECT
CORRECT

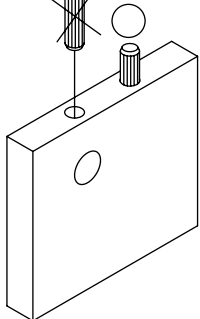


Apply glue on all wooden dowels to ensure integrity of the structure.

STEP 2







6
x 10

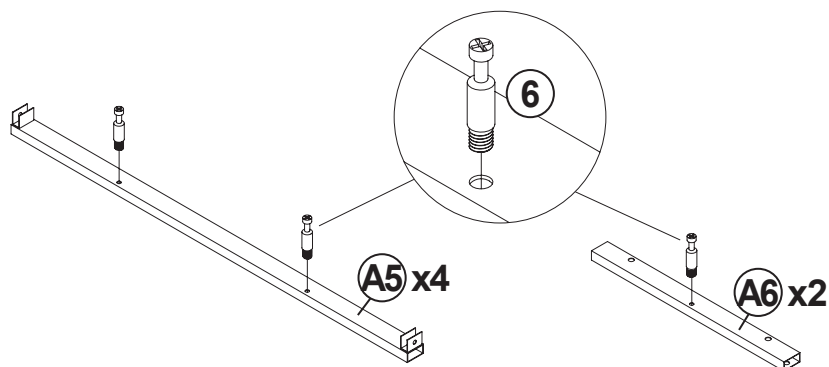

ITEM: **930120**

STEP 3


COASTER
FINE FURNITURE

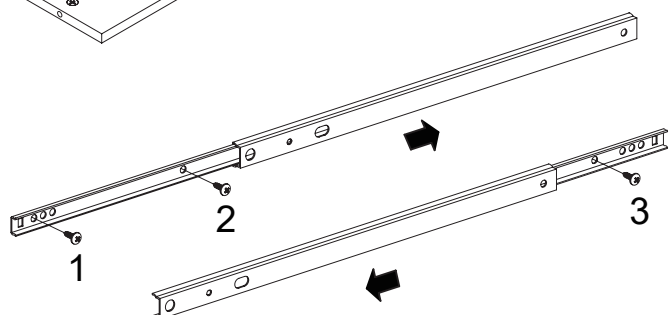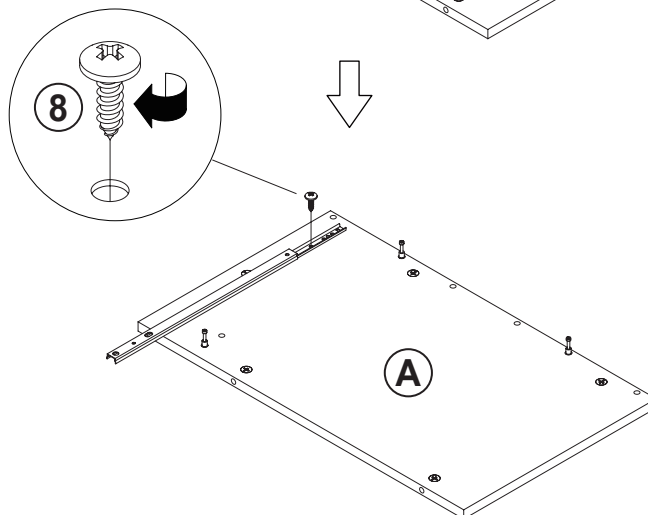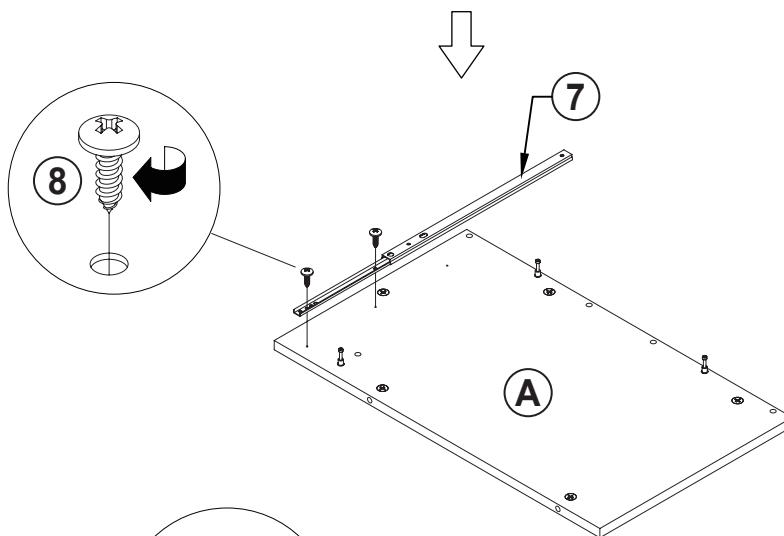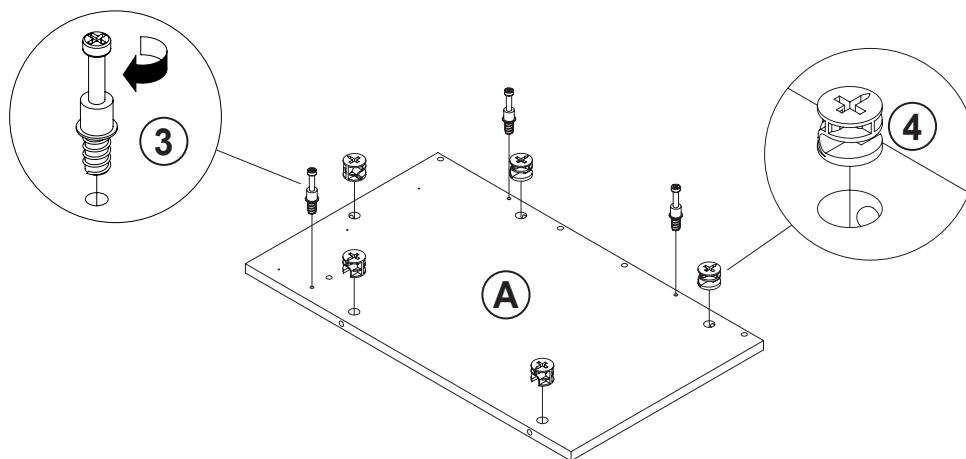

ITEM: **930120**

STEP 4









COASTER
FINE FURNITURE

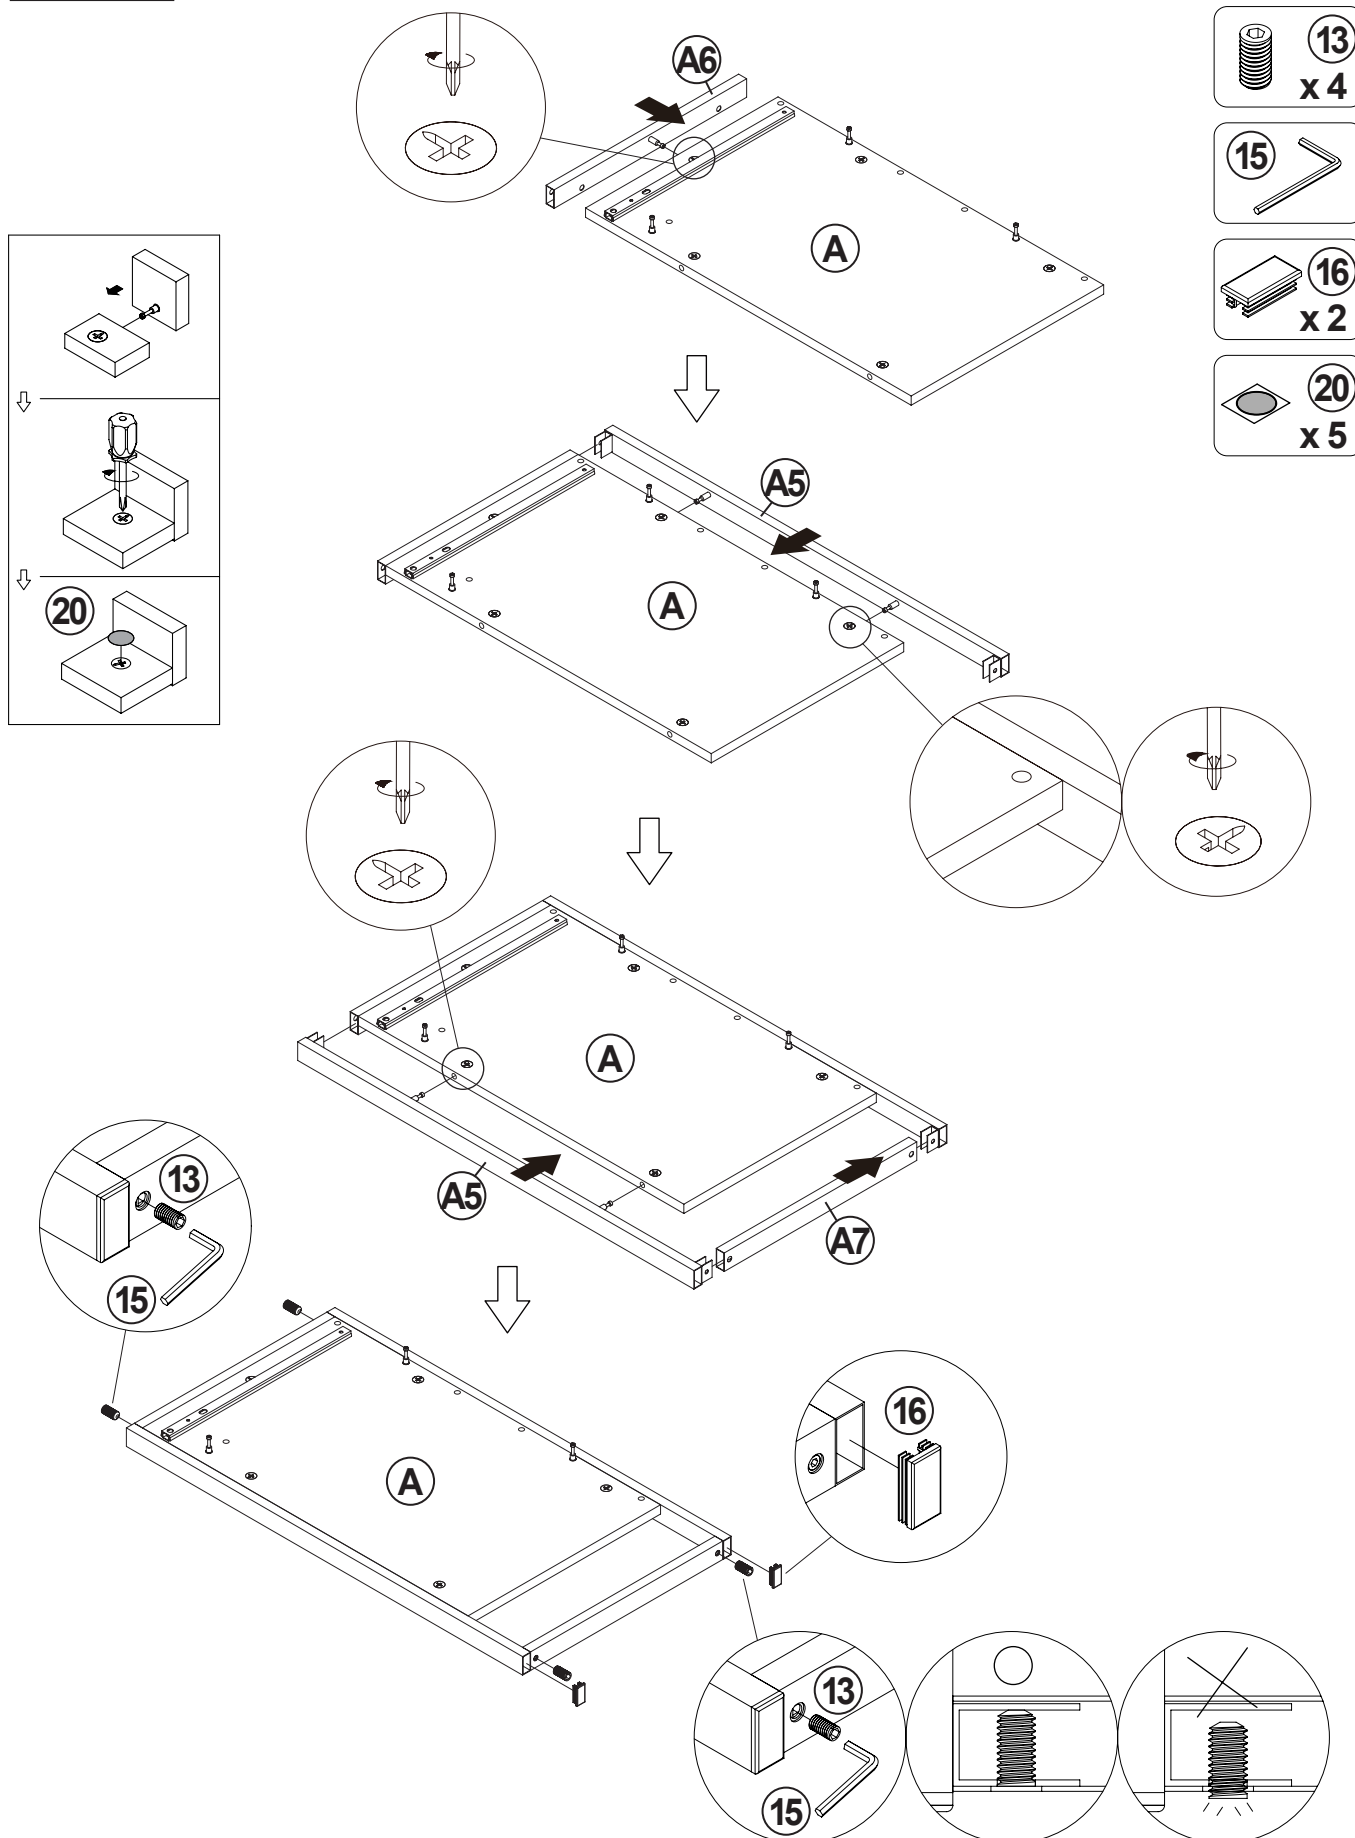

ITEM: **930120**

STEP 5


COASTER
FINE FURNITURE

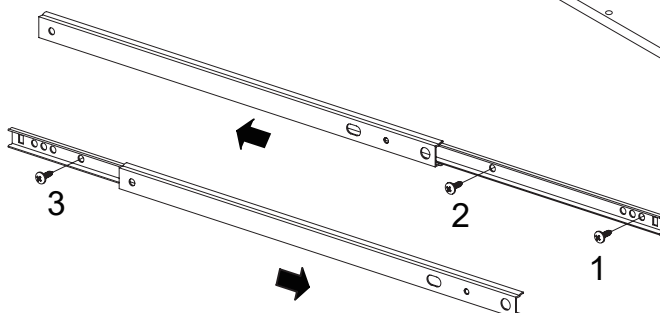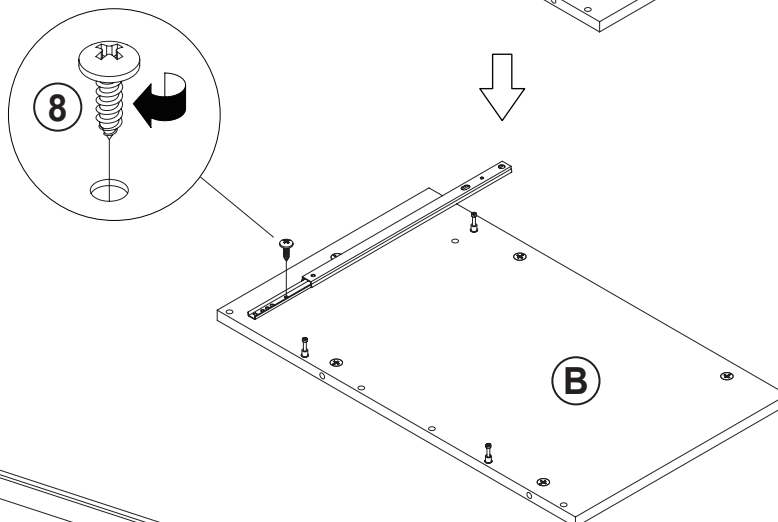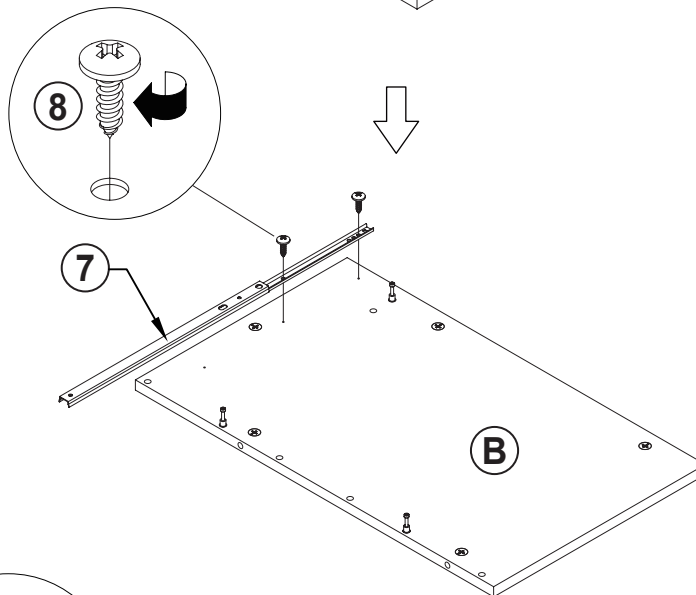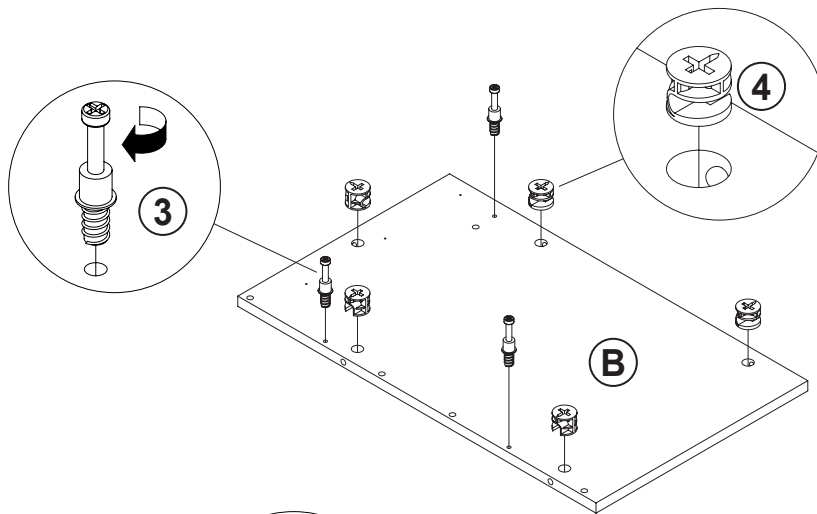

ITEM: **930120**


STEP 6

COASTER
FINE FURNITURE

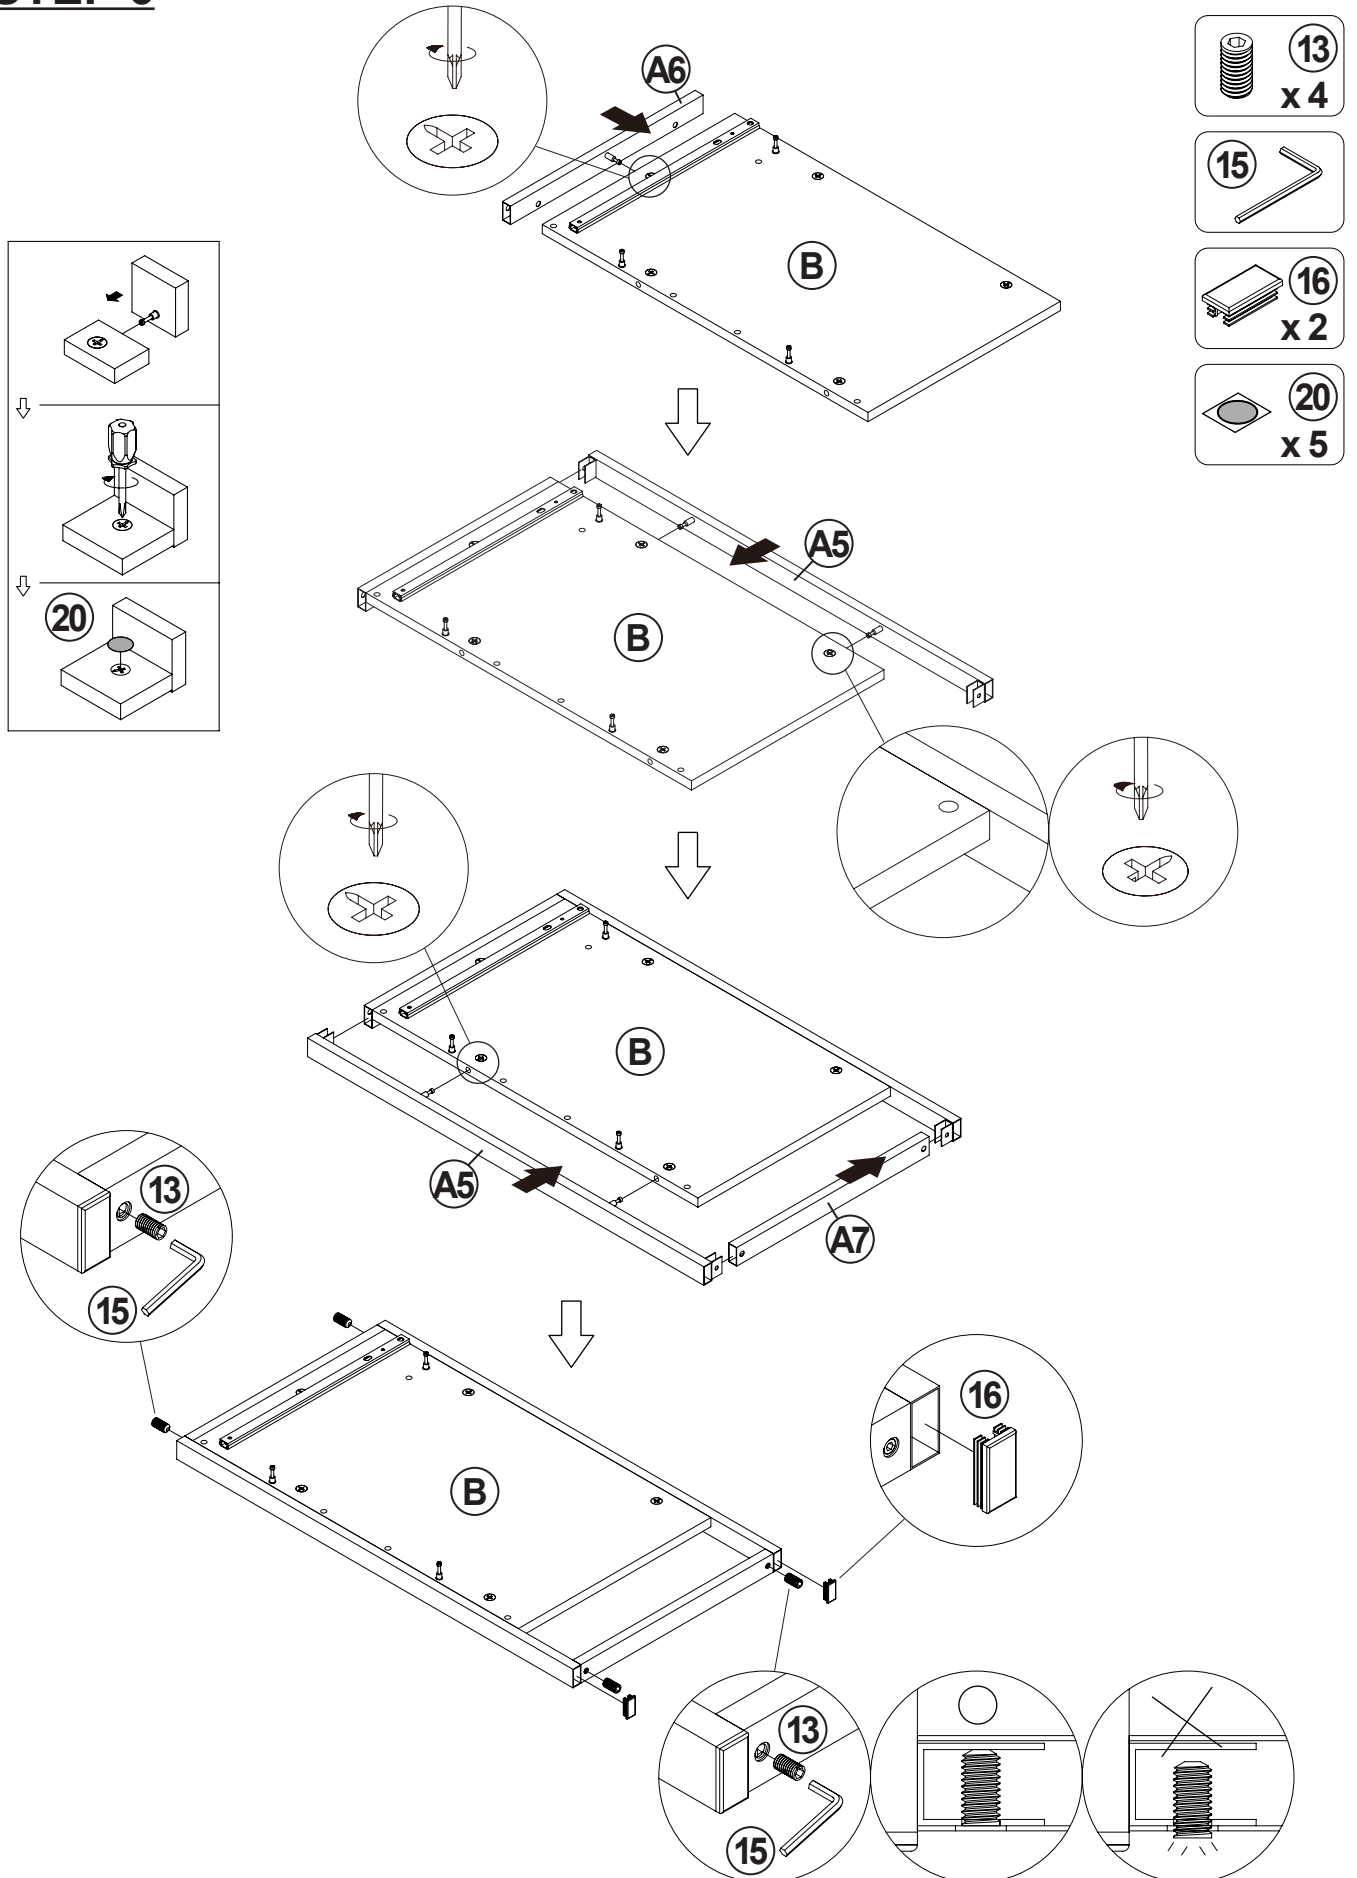


ITEM: **930120**

STEP 7

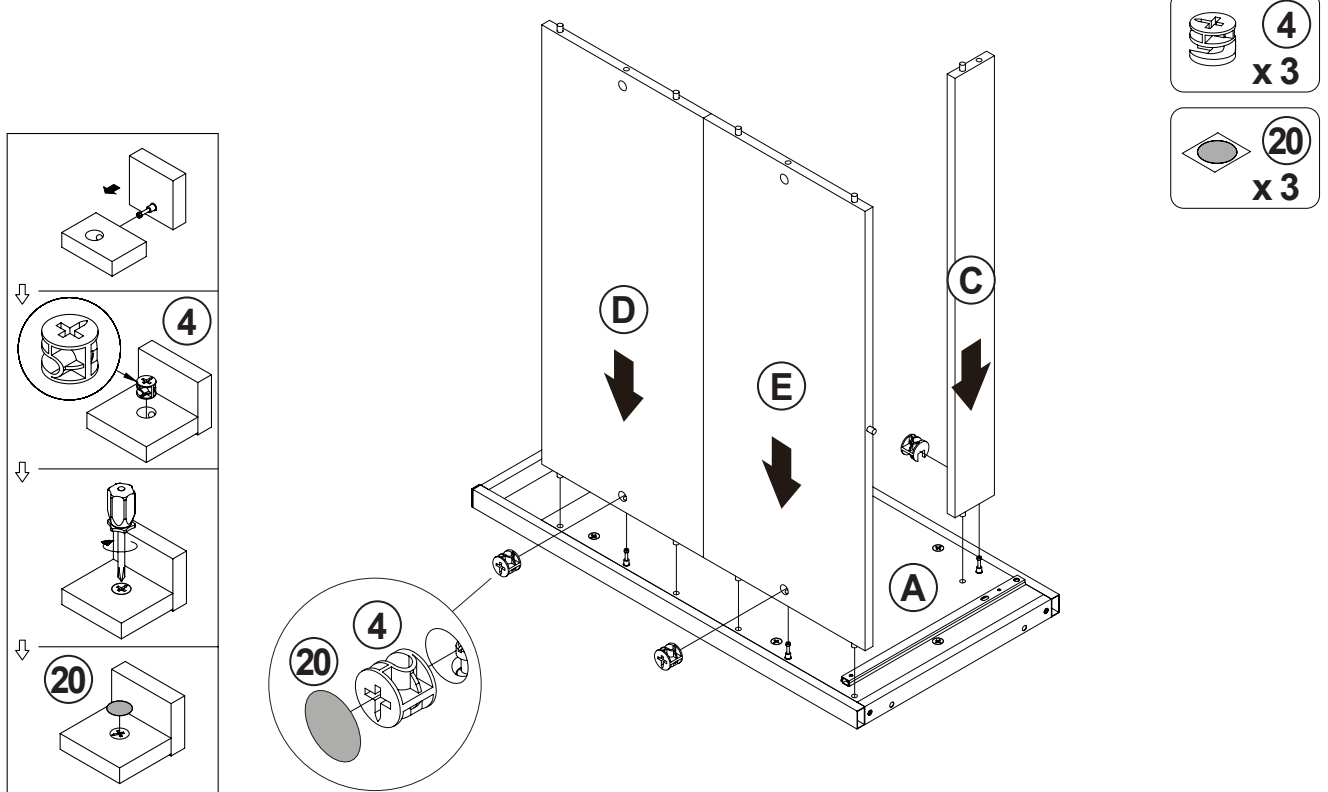


STEP 8

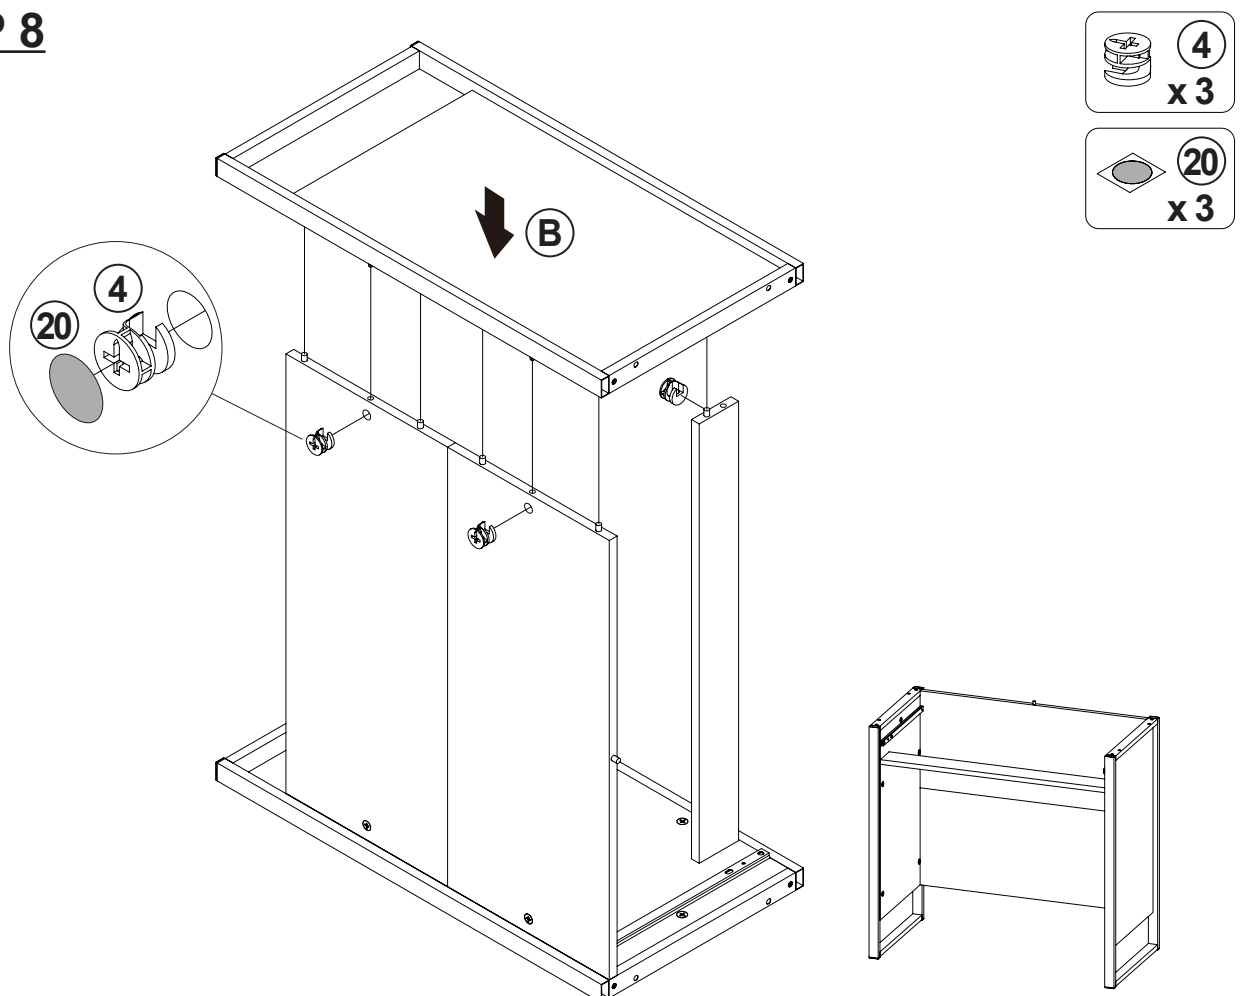


ITEM: **930120**

STEP 9

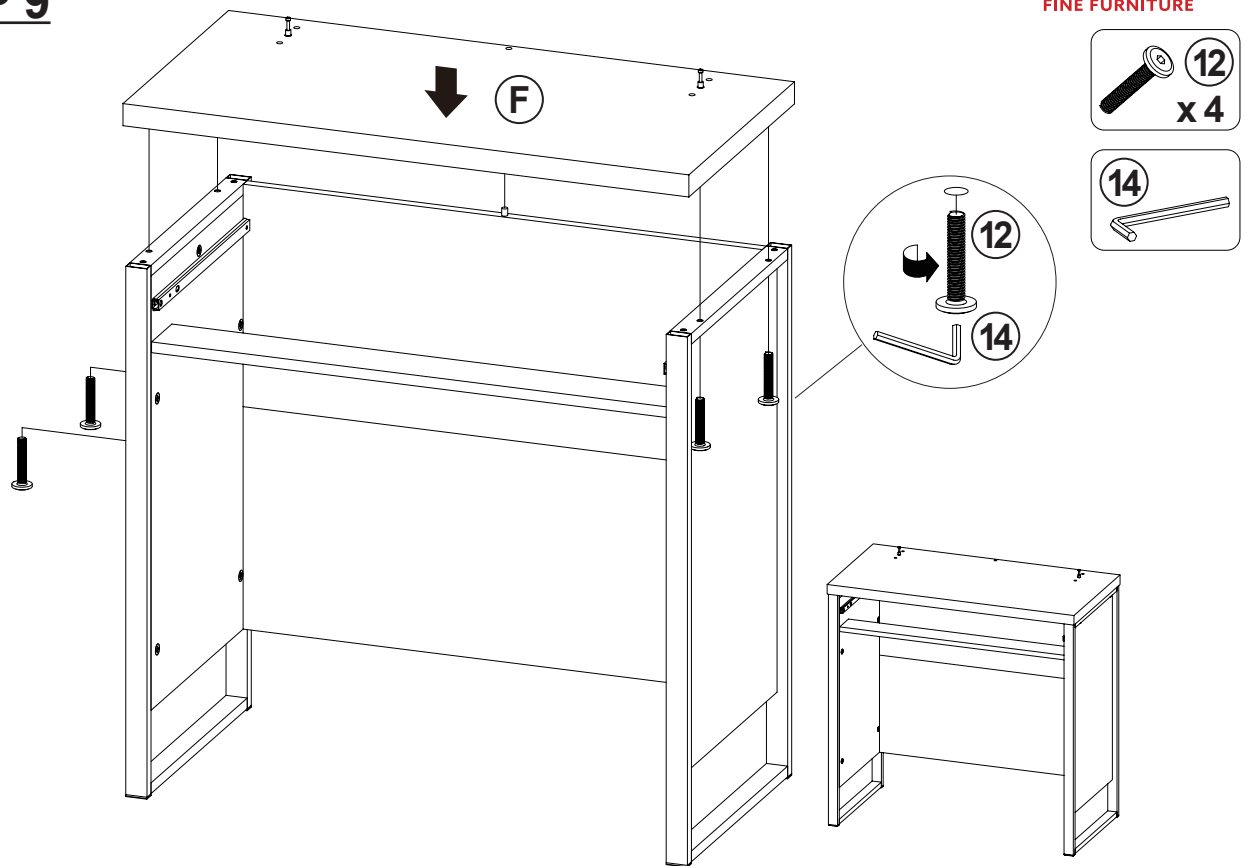


STEP 10

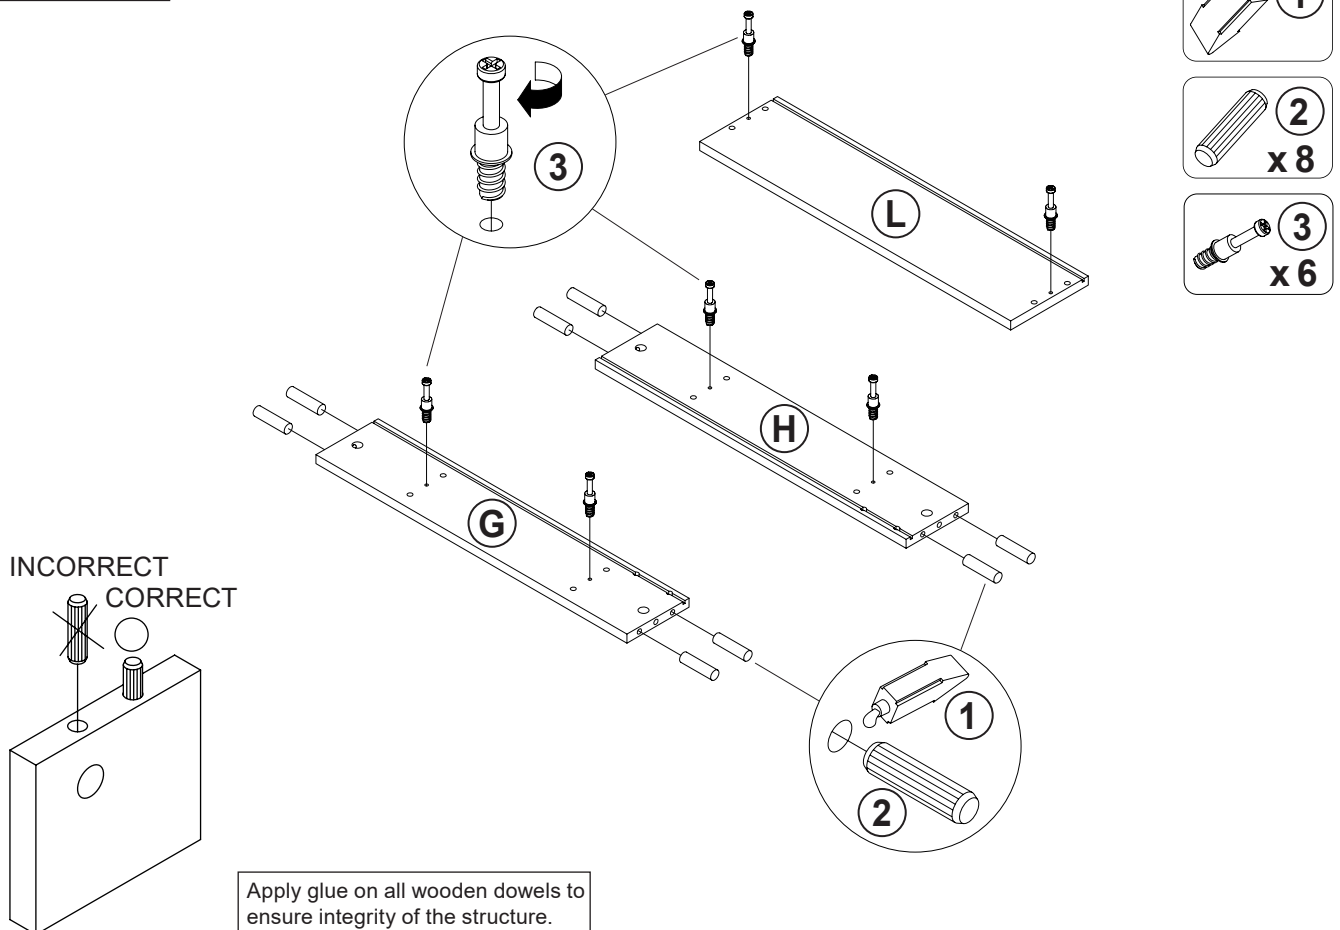





ITEM: **930120**

STEP 11







INCORRECT
CORRECT

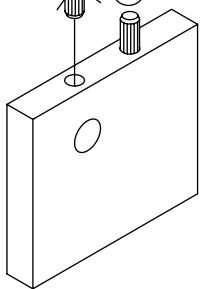

Apply glue on all wooden dowels to ensure integrity of the structure.

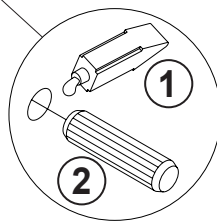

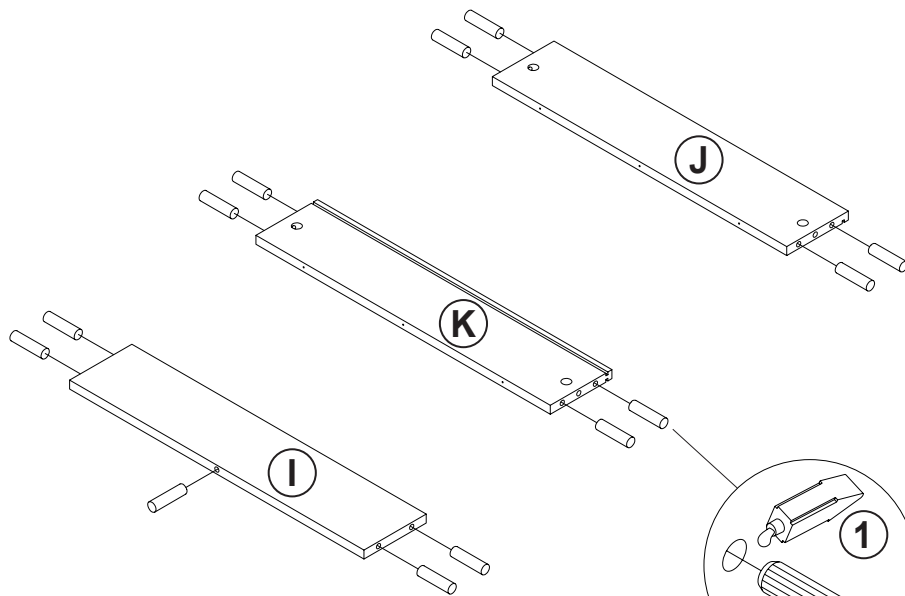


STEP 12

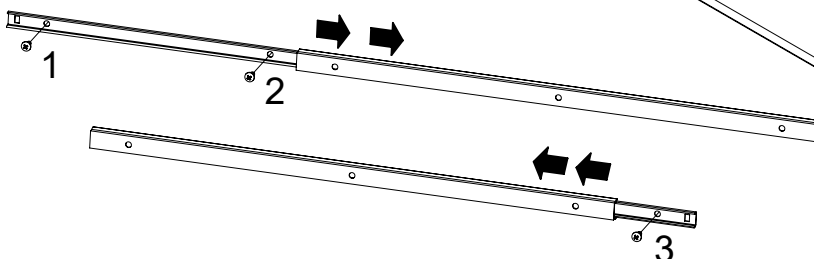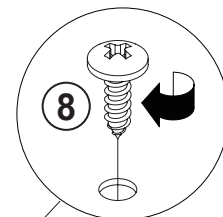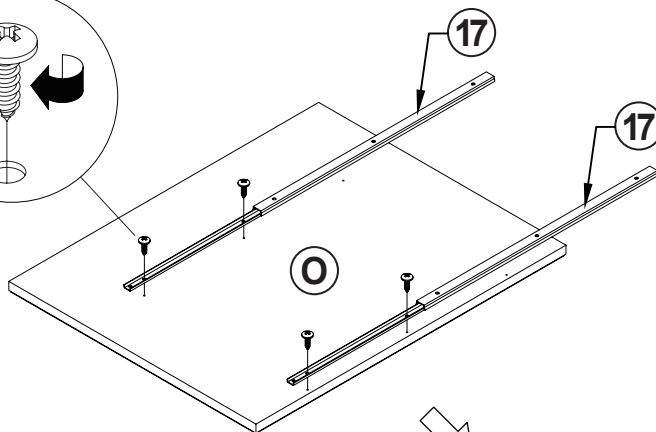
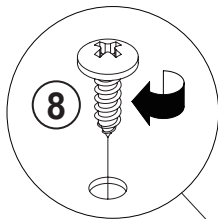


ITEM: **930120**

STEP 13


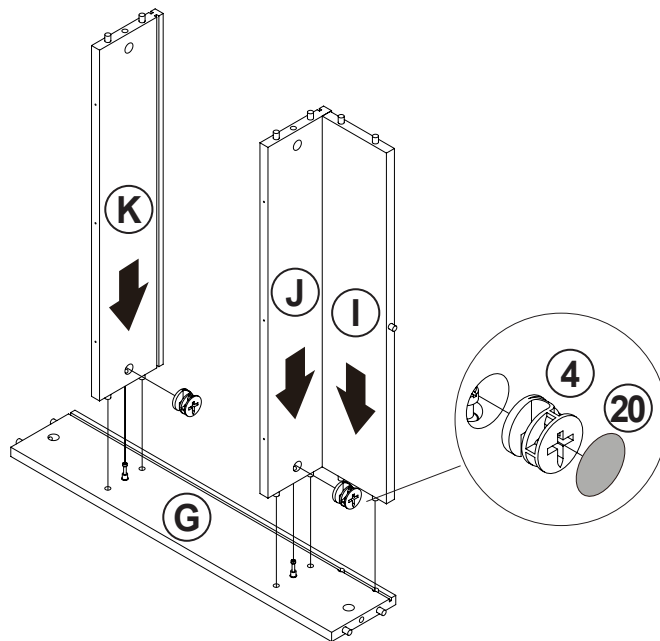
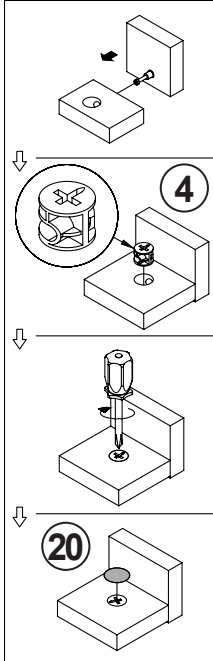


STEP 14


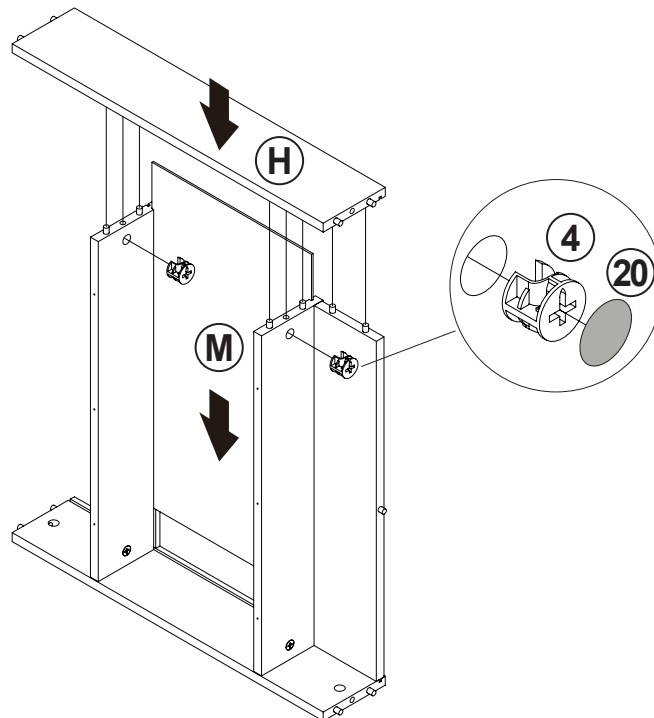


ITEM: **930120**

STEP 15

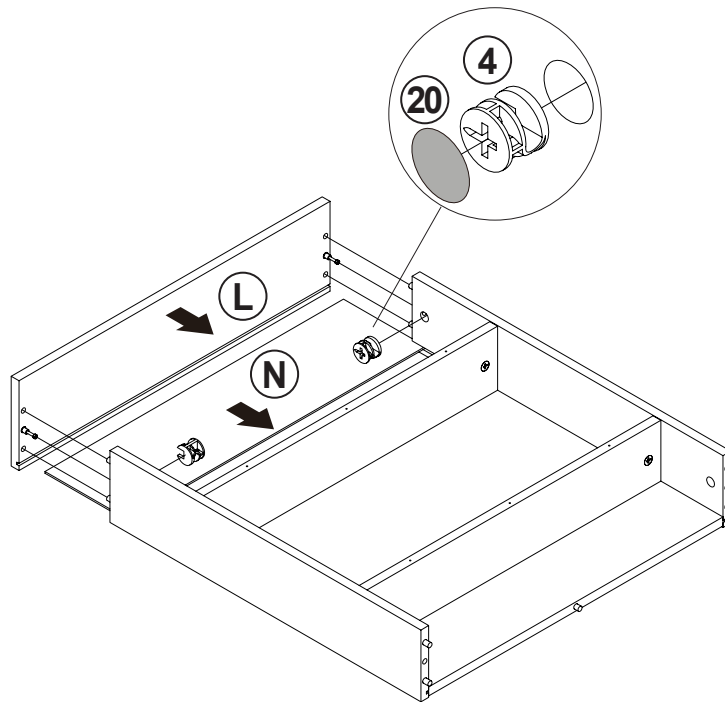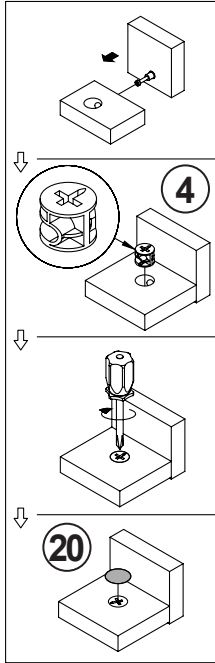



STEP 16

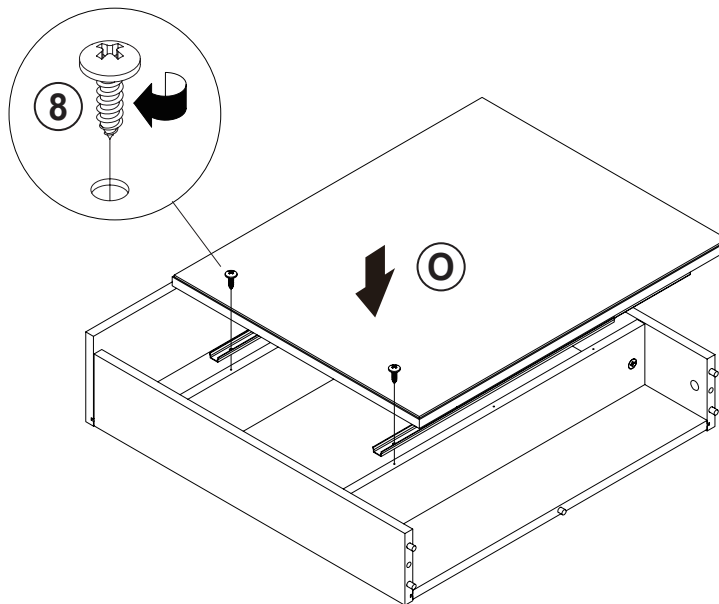






ITEM: **930120**

STEP 17

COASTER
FINE FURNITURE

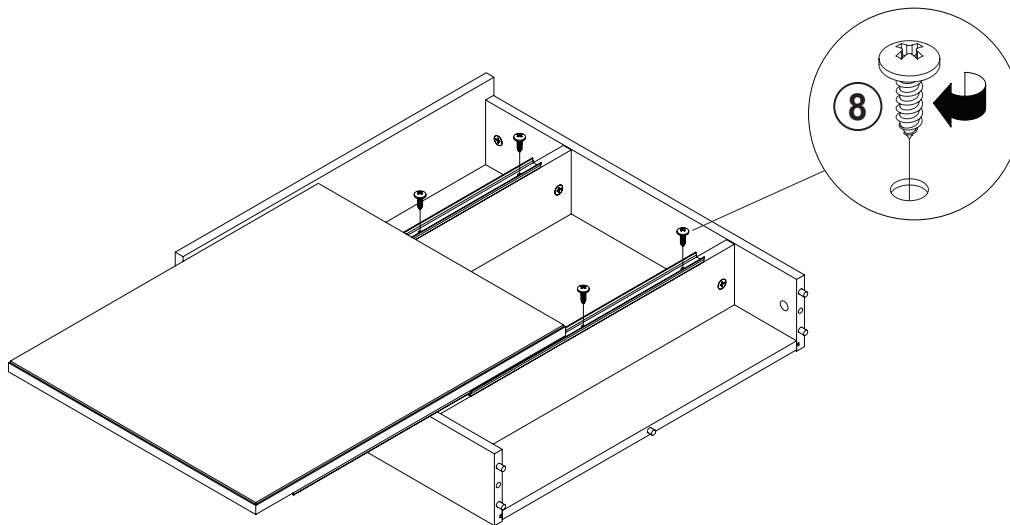


STEP 18

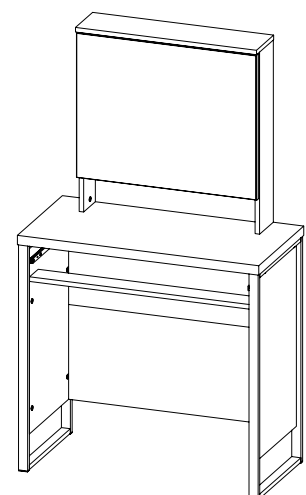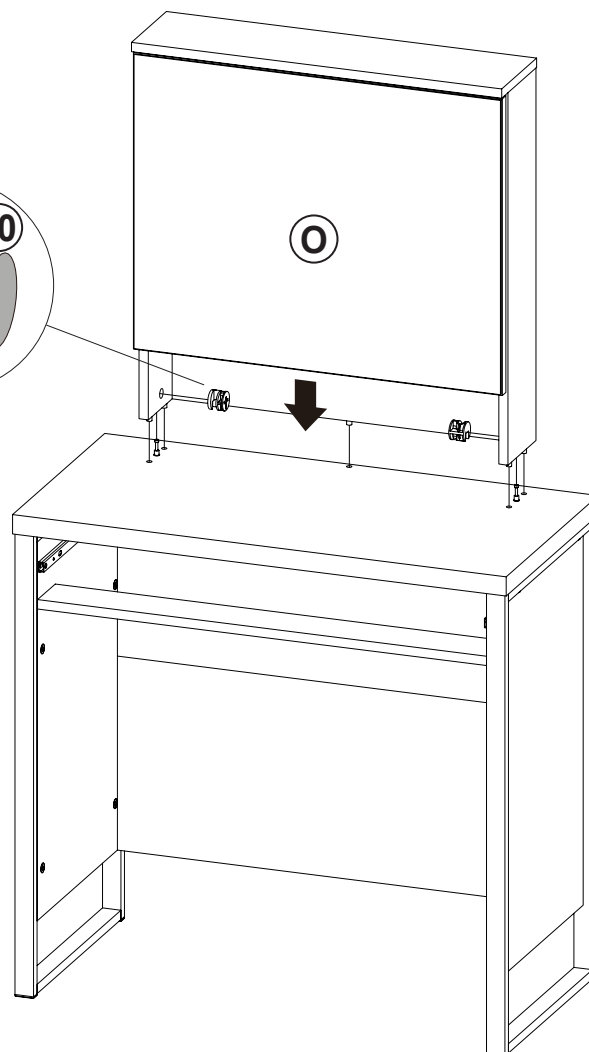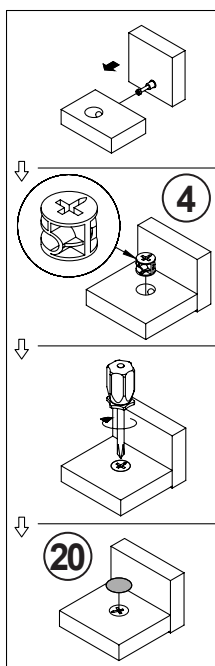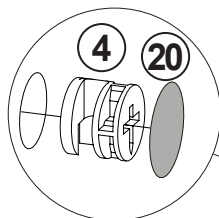

ITEM: **930120**


STEP 19

COASTER
FINE FURNITURE

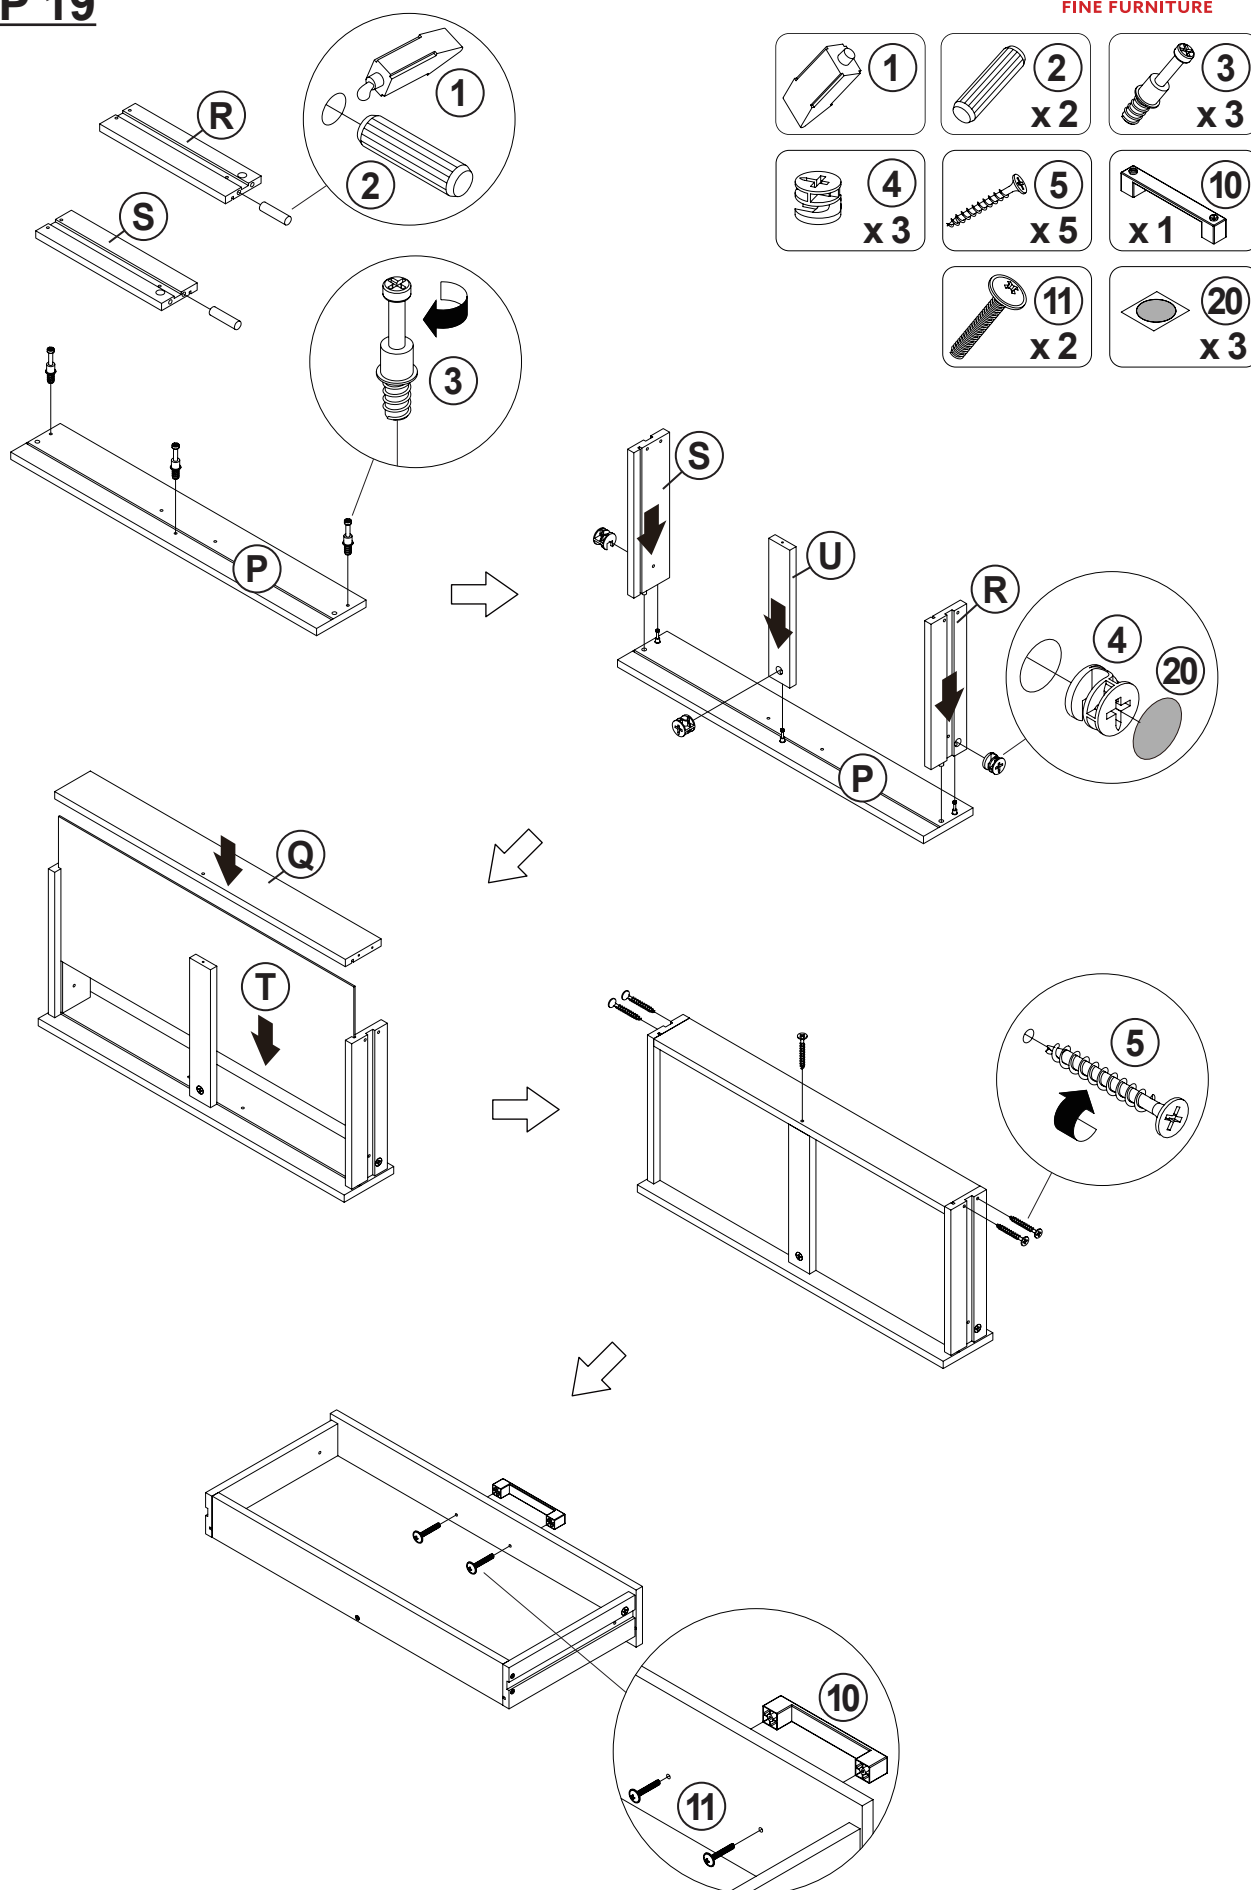


ITEM: **930120**

STEP 20

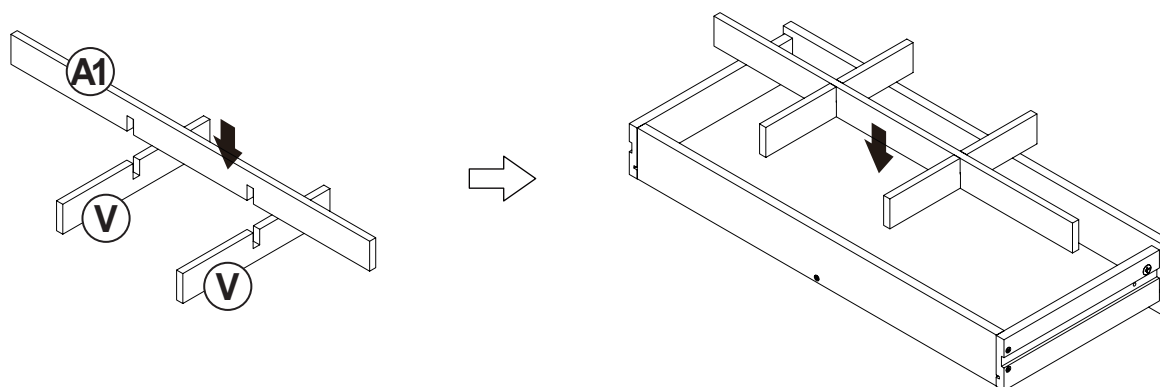



STEP 21

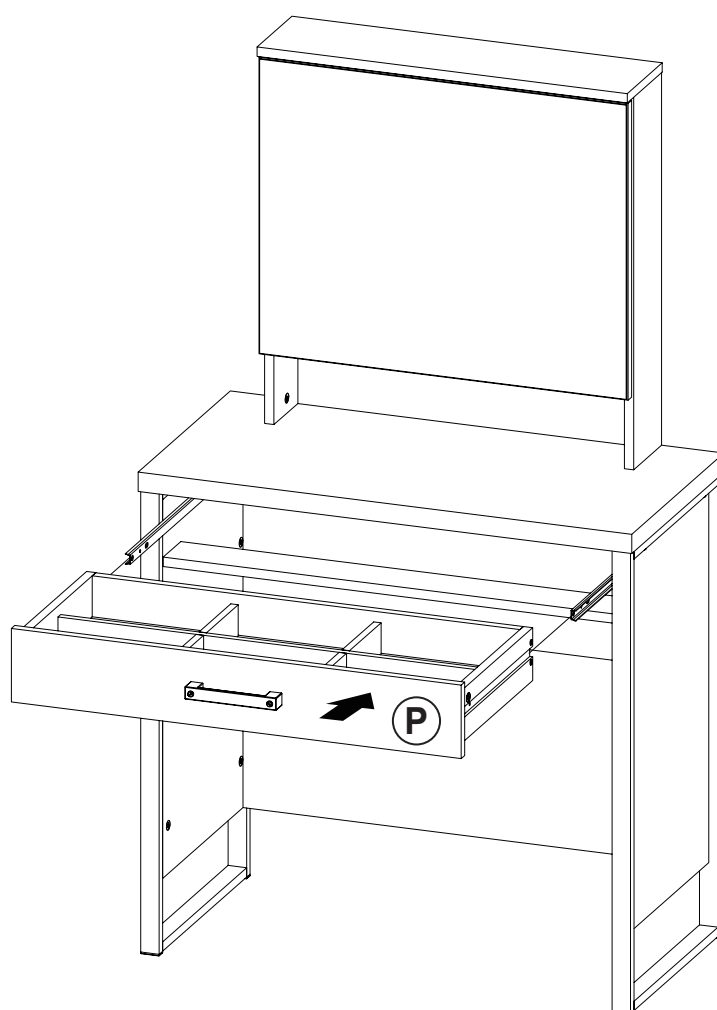




ITEM: **930120**

STEP 22

COASTER
FINE FURNITURE

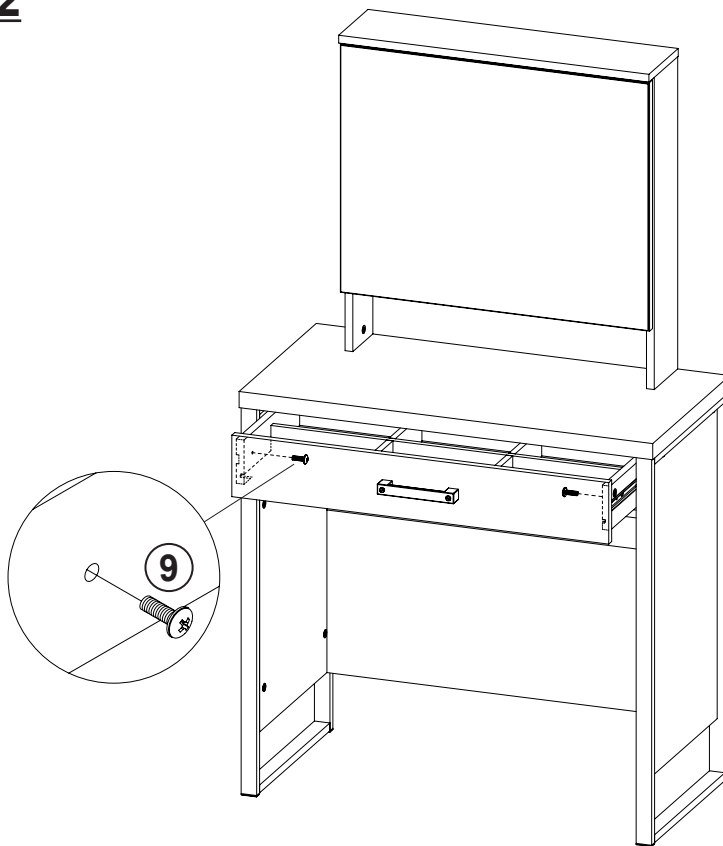


STEP 23

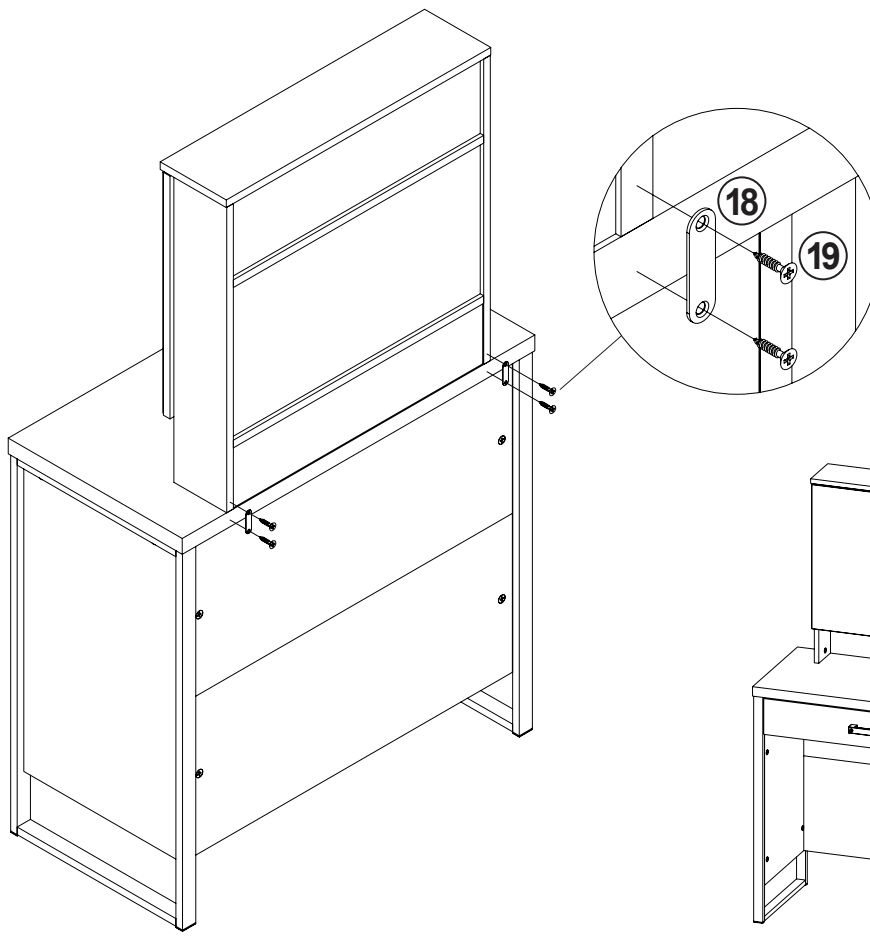


ITEM: **930120**

STEP 24

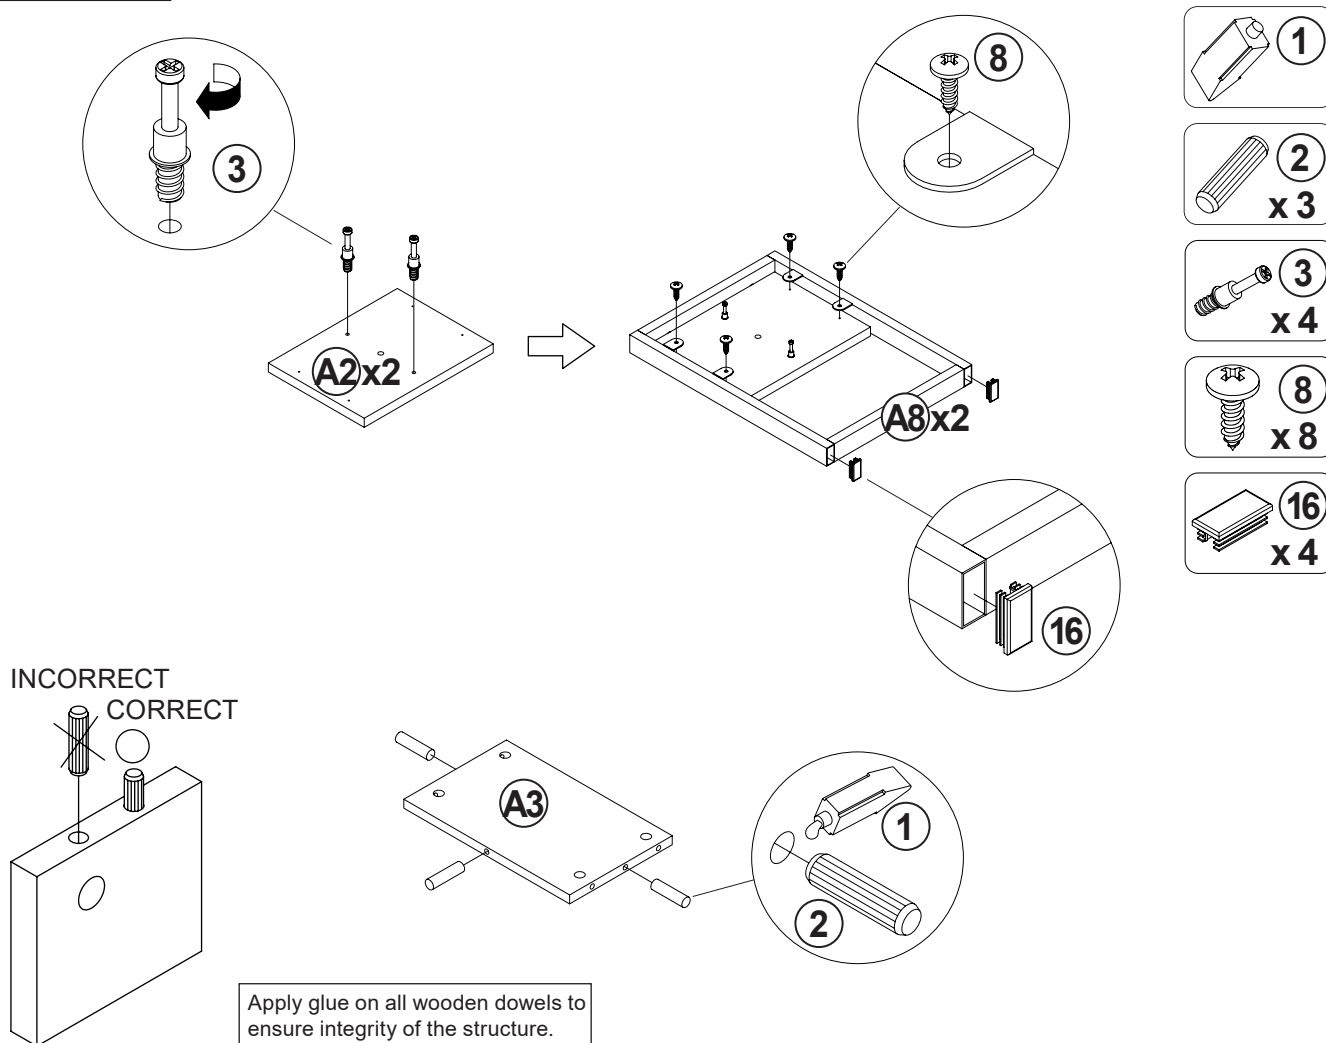




STEP 25

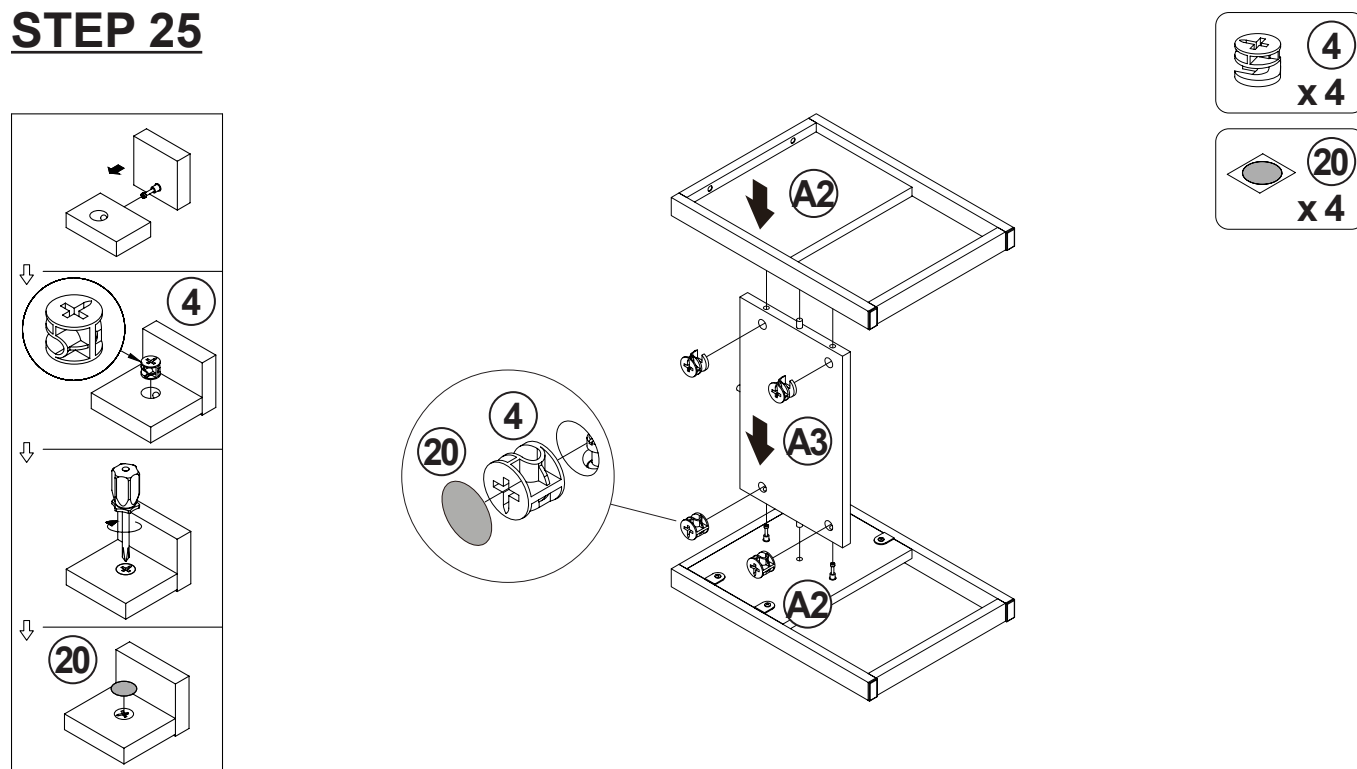




ITEM: **930120**


STEP 26

COASTER
FINE FURNITURE

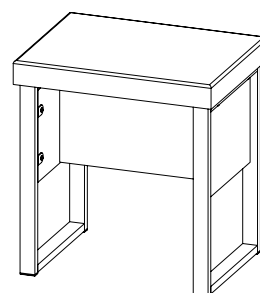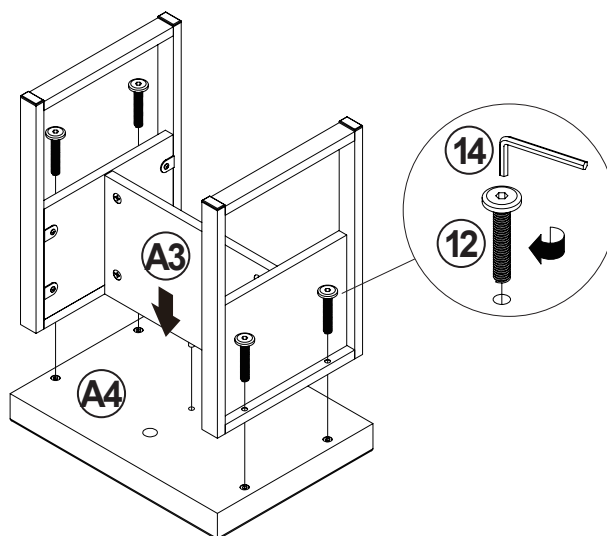

STEP 27
COMPLETE

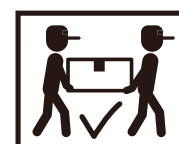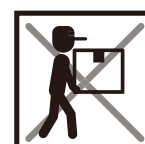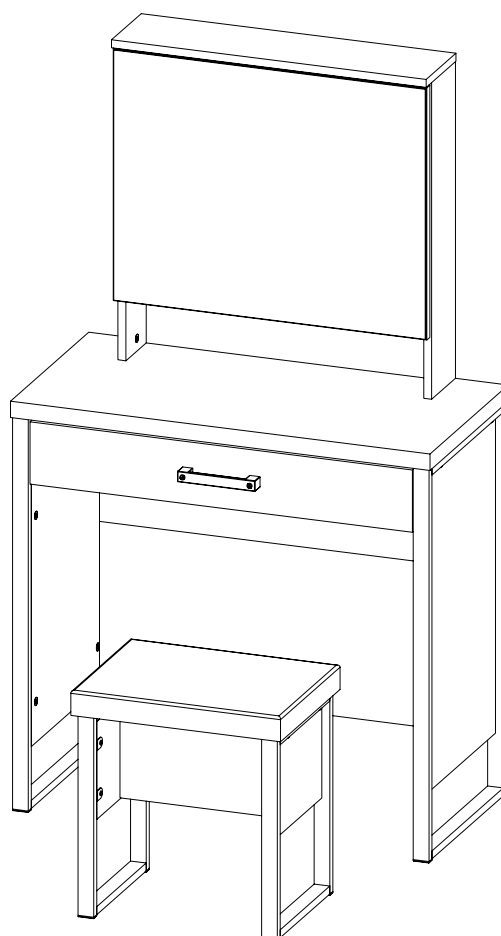

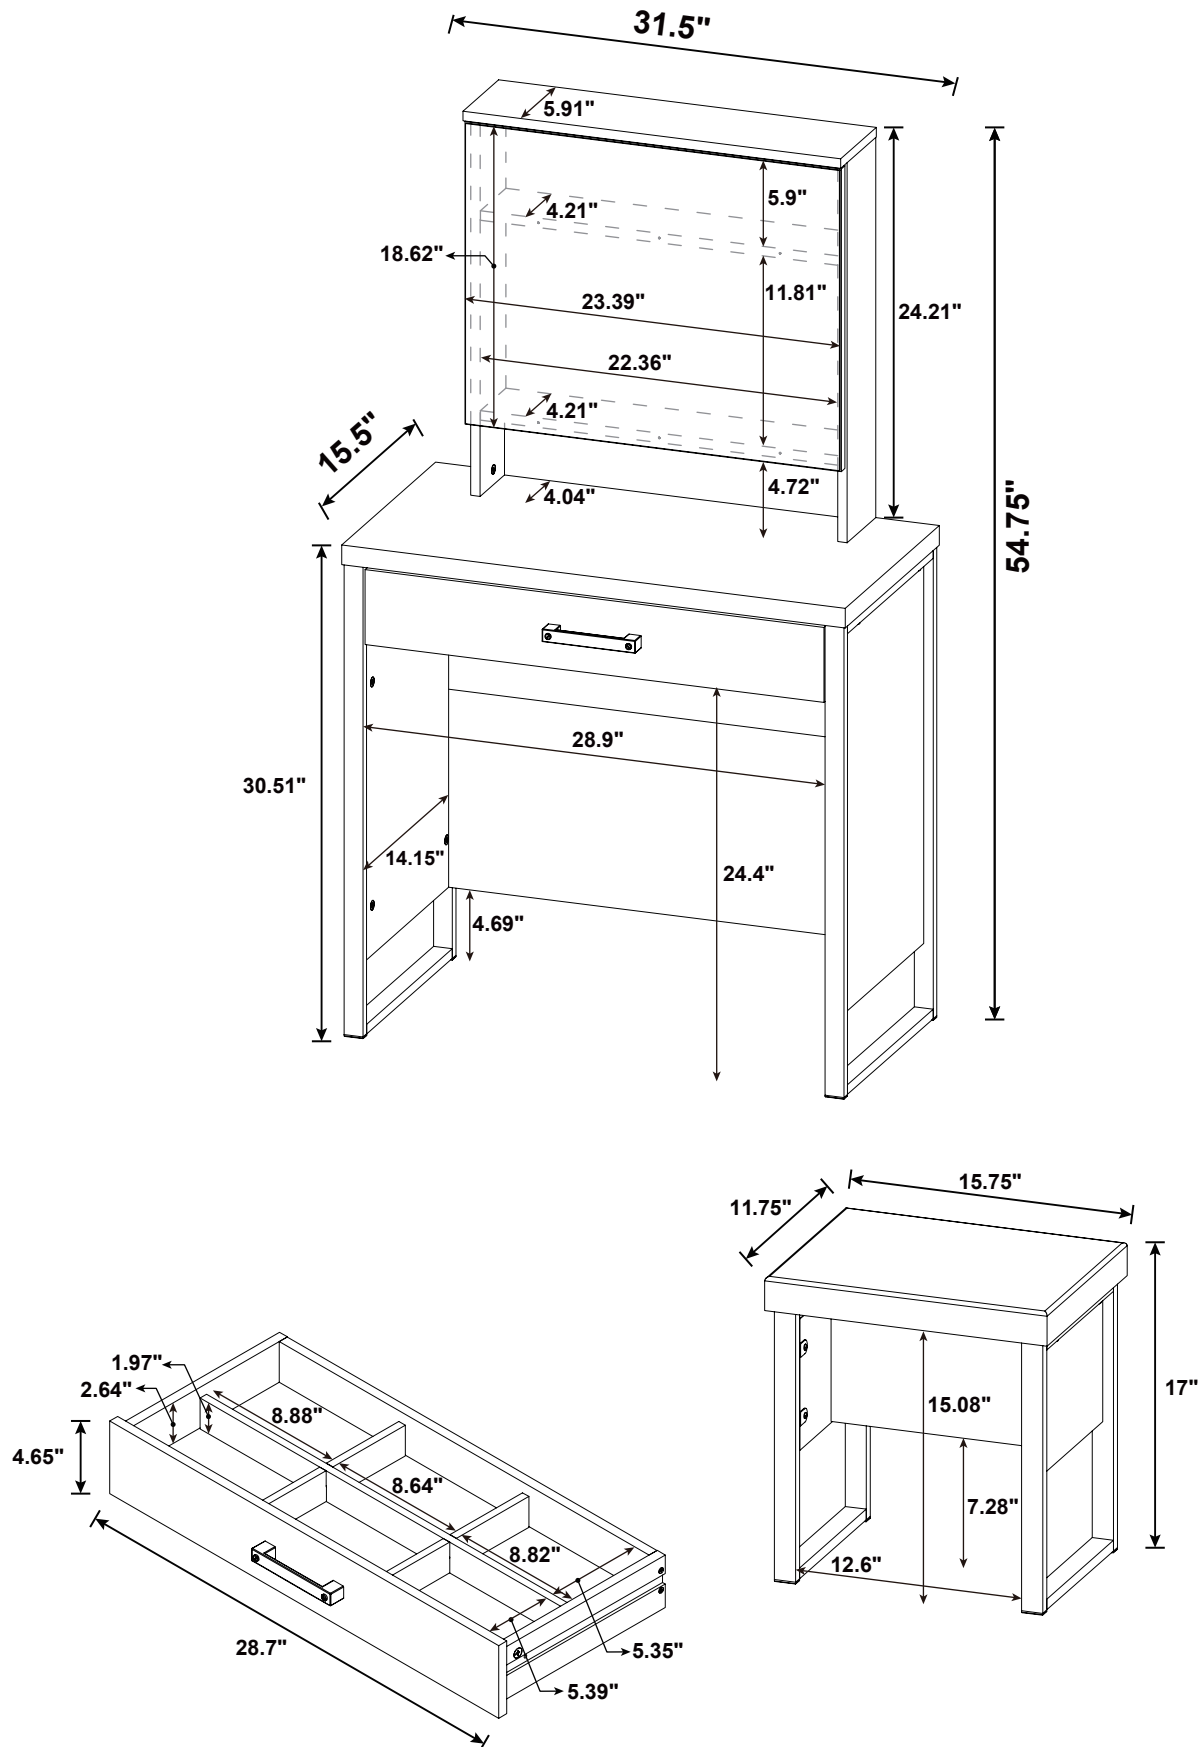

Note : Dimension tolerance $\pm 5\%$