



350134F
Wireless Adjustable Base
OWNER'S MANUAL
Installation & Operation



Serial No.

Patent Pending
2-Year Parts and Labor on entire base
Warranty.

Content

Safety Precautions	1
Parts List	2
Electronics Quick Reference Guide	3
Installation Guide	5
Remote Control	7
Memory Settings	8
Troubleshooting	9
Product size	10

Safety Precautions

PLEASE READ ALL DIRECTIONS BEFORE USING THE PRODUCT AND RETAIN THIS GUIDE FOR REFERENCE.

- **Power Supply:** Input: AC 100–240V, 50/60Hz; Output: DC 29V, 2.0A.
- **Important Product Specifications:**
 - Maximum Weight Capacity: 700LBS.
 - Motor Life: 25,000 cycles.
 - Mattress Requirements: Any sponge mattress can be used.
 - Pinch/Entrapment Warning: Pinch/entrapment warning labels are provided on the bed. Keep hands, feet, and other body parts clear of moving parts during operation.
- **Cleaning:** Unplug the product from the power outlet before cleaning.
- **Keep Away from Heat:** Keep the power cord, power supply, and control box away from heat sources.
- **Keep Dry:** Do not use the product in a humid environment. Do not allow the wire connectors or the area between the motor and control box to come into contact with water, liquids, or excessive moisture.
- **Inspect Before Use:** Do not operate the product if the power cord or plug is damaged, or if the product is not functioning properly.
- **Extended Periods of Non-Use:** Return the product to the flat position, unplug the power cord, and remove the batteries from the remote control when the product will not be used for an extended period.
- **Medical Advice:** Consult your physician if you have any questions or concerns regarding the use of this product.
- **Children:** Do not allow children to play with or operate this product.
- **Children and Pets:** Do not allow children or pets underneath the bed.

Parts List

ALL ELECTRONICS AND COMPONENTS THAT NEED TO BE INSTALLED ARE LOCATED IN BOXES UNDER THE FOUNDATION OR ATTACHED TO THE FRAME. BEFORE DISCARDING THE PACKING MATERIALS, ENSURE THAT ALL THE PARTS ARE ACCOUNTED FOR.

A



Mattress Rail (1)

B



Adjustable-Height Legs (6)

C



Remote Control (1)

D



Power Supply (1)

E



Power Cable (1)

F



AAA Batteries (2)

Electronics Quick Reference Guide




Head Motor

Control Box

Foot Motor

Electronics Quick Reference Guide

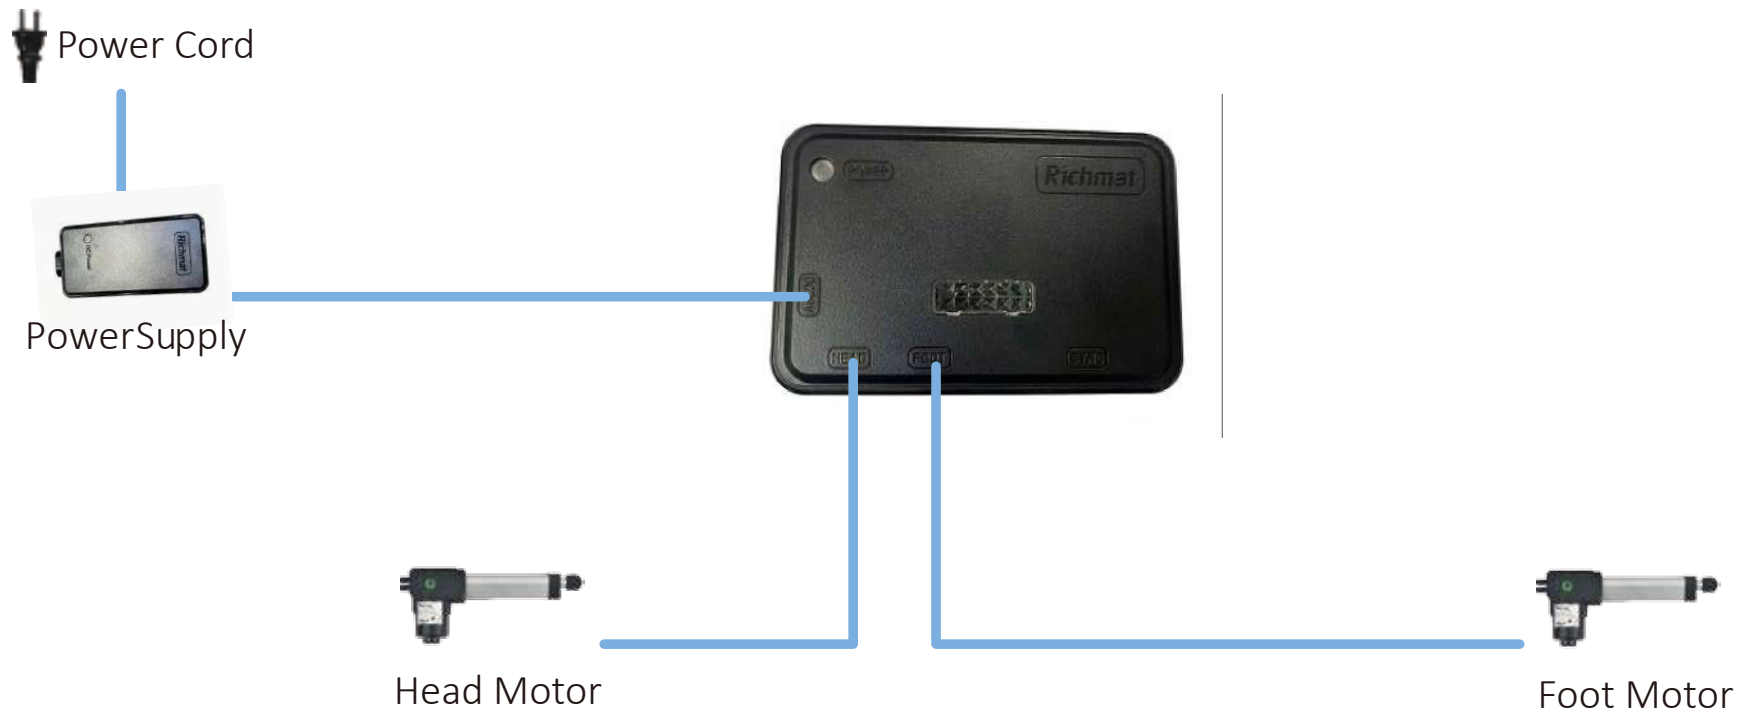


Installation Guide

ALWAYS USE TWO PEOPLE WHEN SETTING UP, MOVING, OR FLIPPING THE ZERO-CLEARANCE ADJUSTABLE BASE.


ASSEMBLY TIME

15 MINUTES


NOTE: To avoid damage to the foundation, always open the carton while the bed is in the flat position.

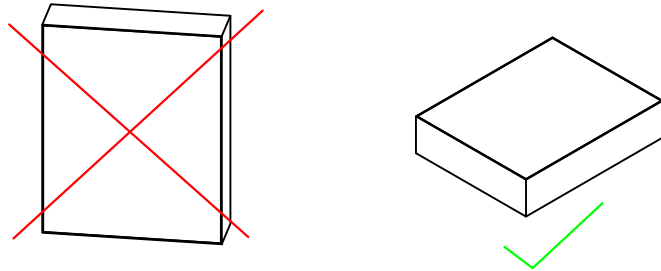

1. Lay the carton flat on the floor and carefully cut it open.

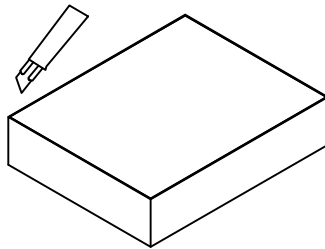

2. Lift the carton so that the open side faces downward. Slide the carton up and off the bed base. Place the bed base upside down on the floor.

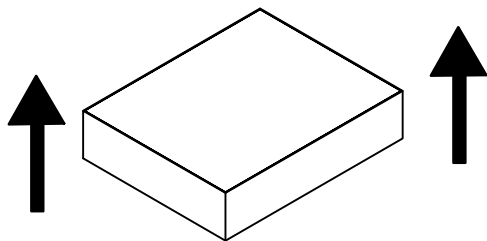


3. Remove and discard the plastic bag. Place the two sections of the bed together and align them flat on the floor.



4. Cut the zip ties, remove all parts boxes and the mattress rail, and verify that all necessary components are included according to the Parts List.




5. For leg (B) assembly, insert the screw through the triangular brace. Attach the leg and tighten the screw securely.

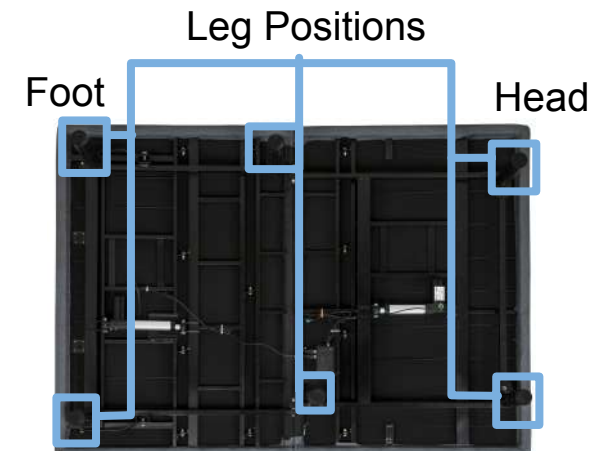

Installation Guide

6. Connect the wire from the bed to the jack on the power supply (D) box.

Connect the AC power cable (E) to the other jack on the power supply box, then plug the AC power cable into a nearby power outlet.

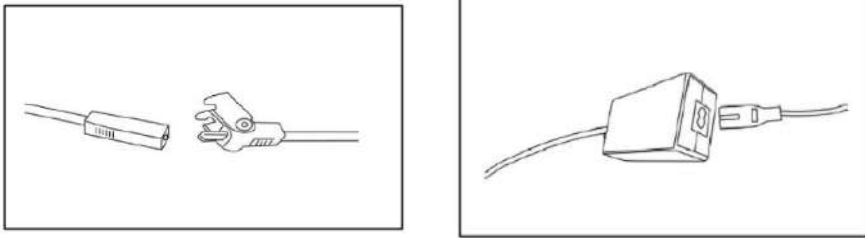

7. Insert the batteries into the remote control (C).

Press and hold the HEAD UP button. If the motor begins to run, unplug the power supply and turn the bed over to its right side-up position.

If the motor does not run, the remote control needs to be re-paired with the bed.




REMOTE PAIRING

If the remote control does not operate the adjustable base, follow these steps to pair the remote with the bed:

1. Place the remote control next to the blue **RESET** button on the power supply box.
2. Press and hold the **HEAD DOWN** and **FOOT UP** buttons on the remote at the same time.
3. While continuing to hold both remote buttons, press and hold the blue **RESET** button.
4. Continue holding all buttons until you hear a beep.
5. Release the buttons. The pairing process should take only a few seconds.
6. Test the remote by pressing one of the adjustment buttons.
7. If the remote does not pair, check all wire and power connections and repeat the pairing procedure.



8. Insert the mattress rail (A) at the foot of the bed.

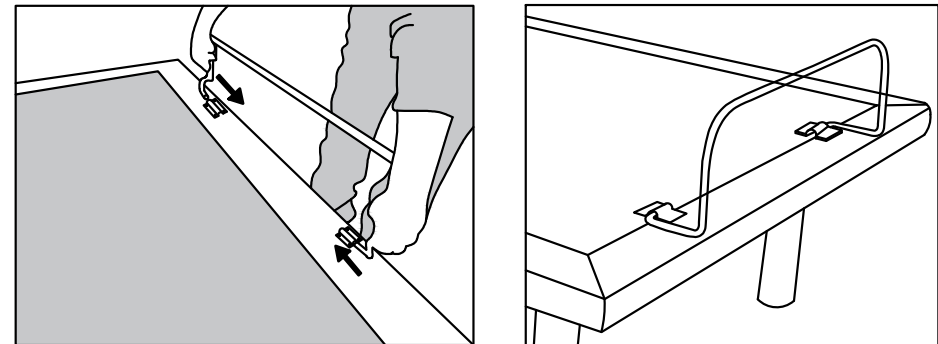

Remote Control



Button	Operation
	Press and hold to raise the backrest. Let go when the desired position is reached.
	Press and hold to raise the footrest. Let go when the desired position is reached.
	Press and hold to lower the backrest. Let go when the desired position is reached.
	Press and hold to lower the footrest. Let go when the desired position is reached.
	Press to set a user-defined position.
	Press to flatten the bed.
	Press to turn the LED flashlight on top of the remote on and off.

Memory Settings

MEMORY POSITION SETTING

USE THE FOLLOWING PROCEDURE TO SAVE A PREFERRED BED POSITION IF YOU ARE NOT SATISFIED WITH THE FACTORY PRESET.

1. Flatten the Bed



Press the FLAT button to return the bed to the flat position.

2. Adjust the Bed Position




Adjust the bed to your preferred position by pressing the Head Up/Down and Foot Up/Down buttons.

3. Save the Memory Position

Press and hold the M button. Release the button after you hear a beep sound, indicating that the preferred position has been successfully saved.

EMERGENCY RESET

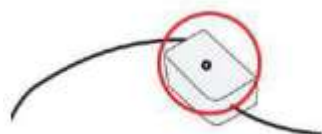

If you are temporarily unable to access the remote control, use the emergency reset button located on the extension wire.

Press the small button on the extension wire to return the bed to the flat position.

Troubleshooting

IF YOU EXPERIENCE PROBLEMS WITH YOUR ADJUSTABLE BED, PLEASE FOLLOW THESE STEPS:

1. Press any button on the remote controller to see whether the blue backlight is bright. If it is dim or does not light, check that both AAA batteries are installed correctly. Replace both batteries if necessary.
2. Check the green power indicator light on the power supply. If it is not lighted, check the power outlet.
3. Check for loose wires or connectors.
4. Check if the adjustable bed is assembled according to the above steps.

Product size

