



**350165Q**

**Wireless Adjustable Base**

**OWNER'S MANUAL**  
**Installation & Operation**



Serial No.

**Patent Pending**

2-Year Parts and Labor on entire base  
Warranty.

# Content

|                                   |    |
|-----------------------------------|----|
| Safety Precautions                | 1  |
| Parts List                        | 2  |
| Electronics Quick Reference Guide | 3  |
| Installation Guide                | 5  |
| Platform Bed Installation         | 7  |
| Remote Control                    | 8  |
| Memory Settings                   | 9  |
| Bluetooth App                     | 10 |
| Troubleshooting                   | 12 |
| Product size                      | 13 |

# Safety Precautions

PLEASE READ ALL DIRECTIONS BEFORE USING THE PRODUCT AND RETAIN THIS GUIDE FOR REFERENCE.

- **Power Supply:** Input: AC 100–240V, 50/60Hz; Output: DC 29V, 2.0A.
- **Cleaning:** Unplug the product from the power outlet before cleaning.
- **Keep Away from Heat:** Keep the power cord, power supply, and control box away from heat sources.
- **Keep Dry:** Do not use the product in a humid environment. Do not allow the wire connectors or the area between the motor and control box to come into contact with water, liquids, or excessive moisture.
- **Inspect Before Use:** Do not operate the product if the power cord or plug is damaged, or if the product is not functioning properly.
- **Extended Periods of Non-Use:** Return the product to the flat position, unplug the power cord, and remove the batteries from the remote control when the product will not be used for an extended period.
- **Medical Advice:** Consult your physician if you have any questions or concerns regarding the use of this product.
- **Children:** Do not allow children to play with or operate this product.
- **Children and Pets:** Do not allow children or pets underneath the bed.

# Parts List

ALL ELECTRONICS AND COMPONENTS THAT NEED TO BE INSTALLED ARE LOCATED IN BOXES UNDER THE FOUNDATION OR ATTACHED TO THE FRAME. BEFORE DISCARDING THE PACKING MATERIALS, ENSURE THAT ALL THE PARTS ARE ACCOUNTED FOR.

**A**



**Mattress Rail (1)**

**B**



**Adjustable-Height Legs (6)**

**C**



**Remote Control (1)**

**D**



**Power Supply (1)**

**E**




**Power Cable (1)**

**F**




**AAA Batteries (2)**

# Electronics Quick Reference Guide

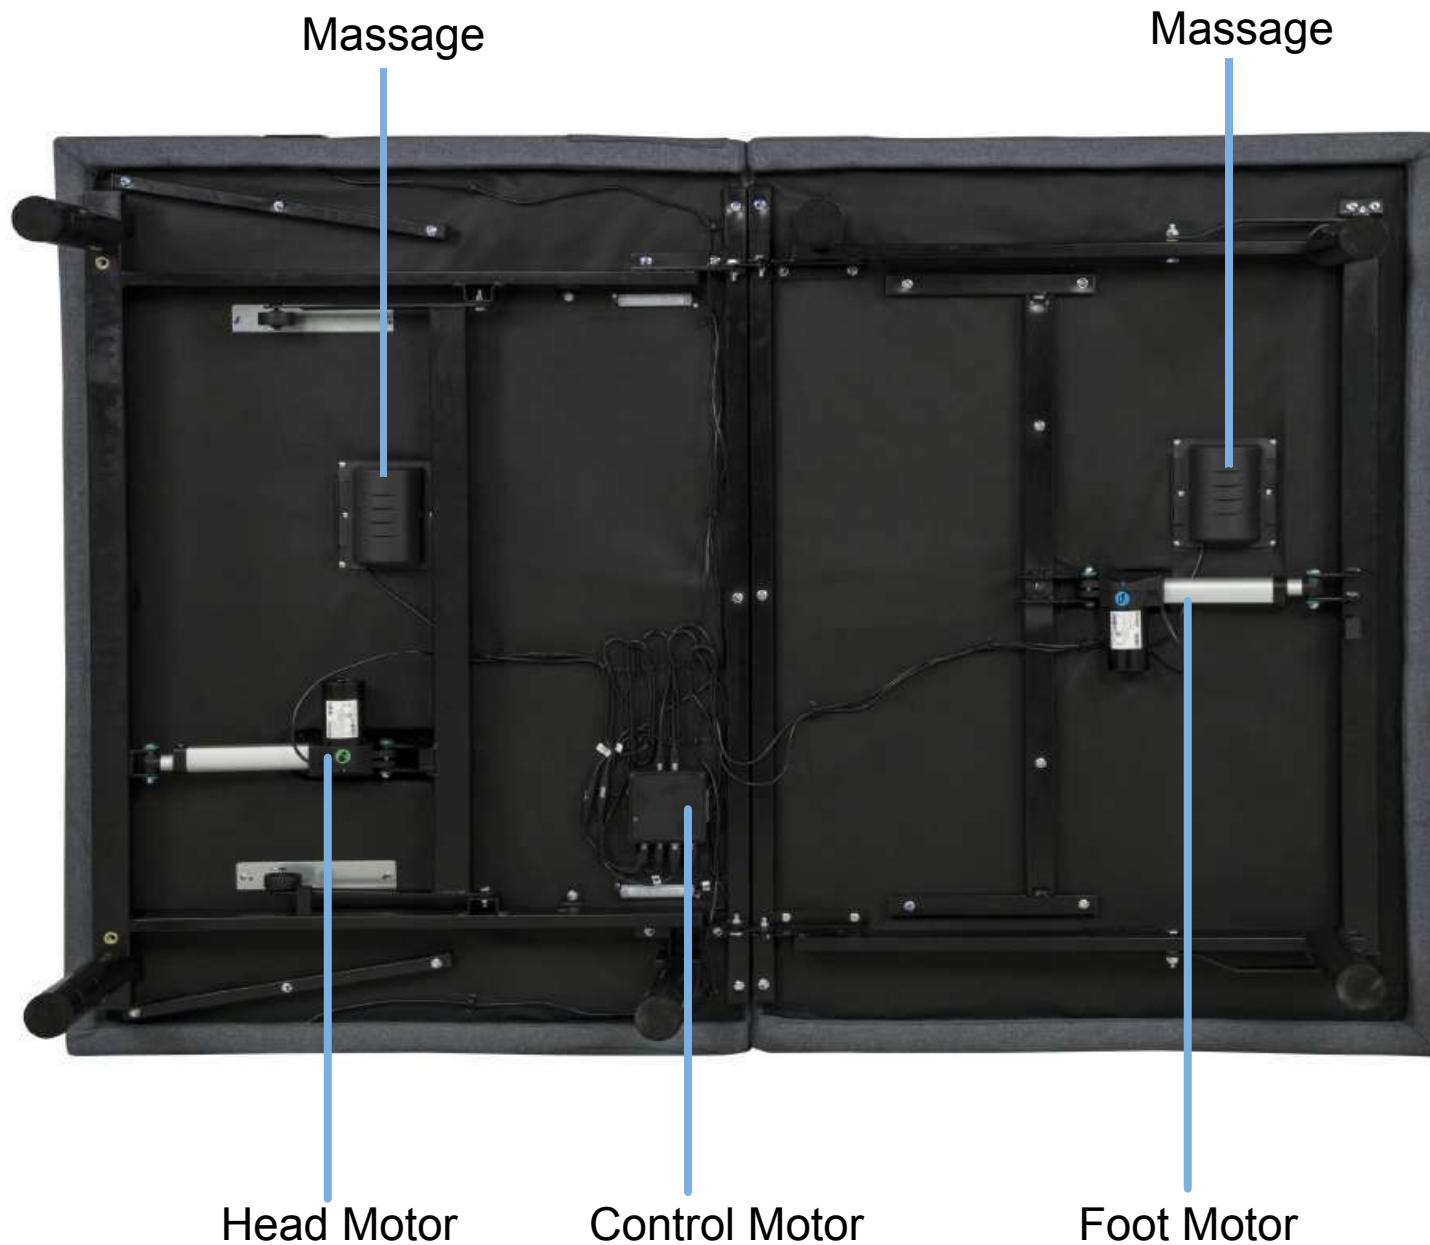


# Electronics Quick Reference Guide

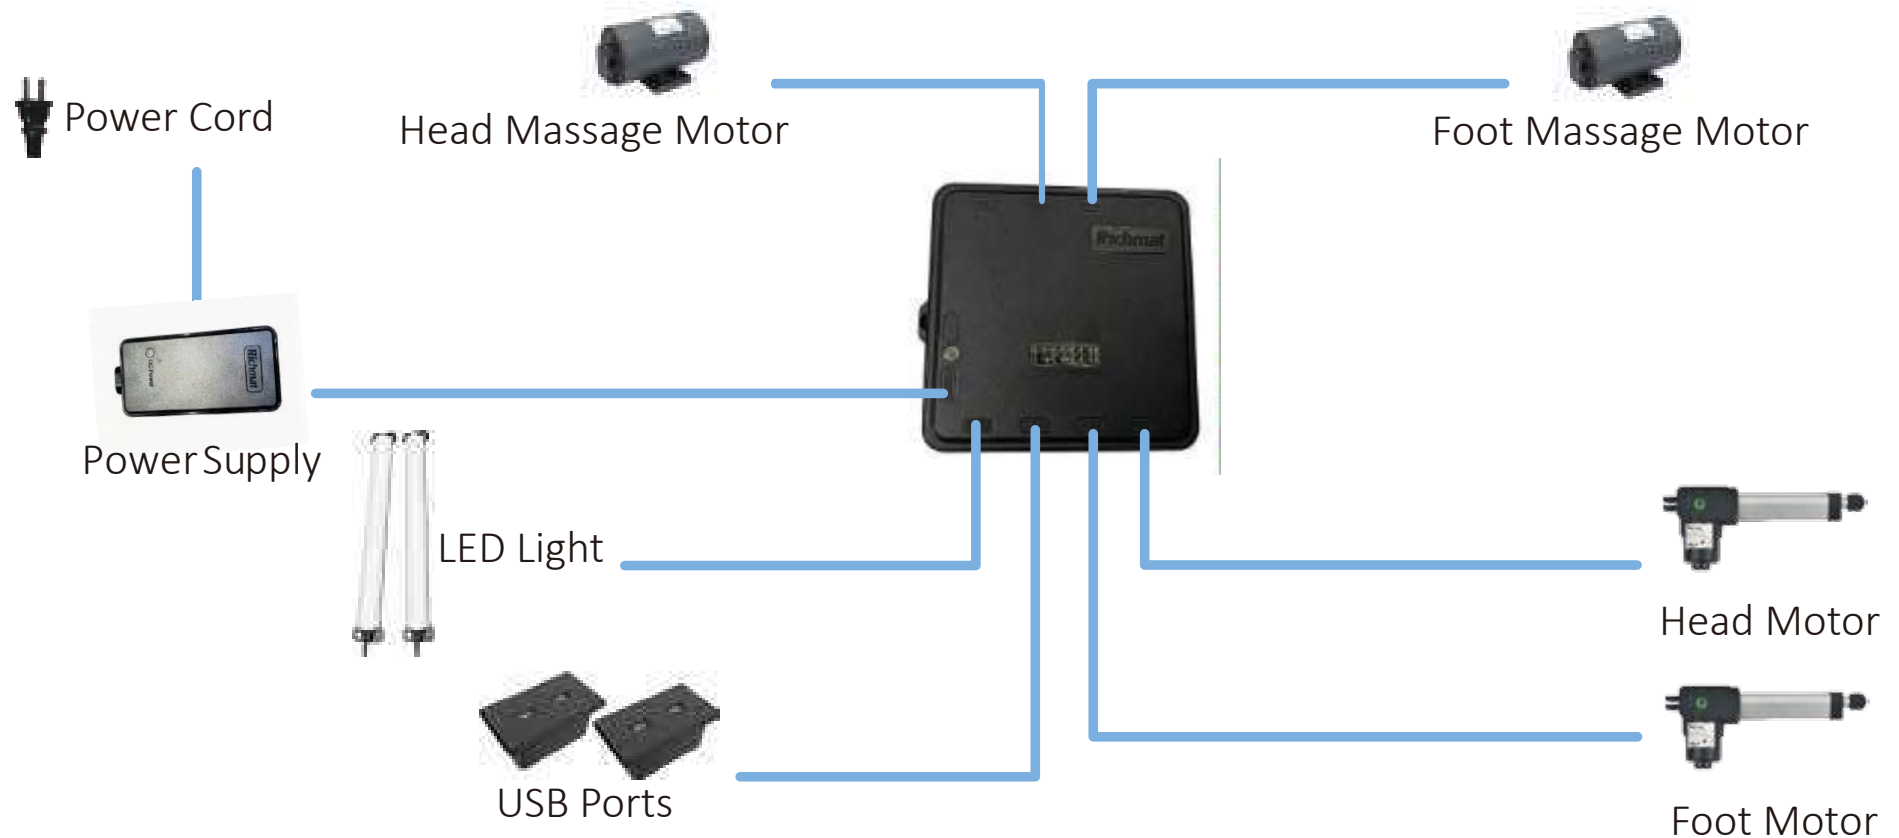


# Installation Guide

ALWAYS USE TWO PEOPLE WHEN SETTING UP, MOVING, OR FLIPPING THE ZERO-CLEARANCE ADJUSTABLE BASE.


NOTE: To avoid damage to the foundation, always open the carton while the bed is in the flat position.

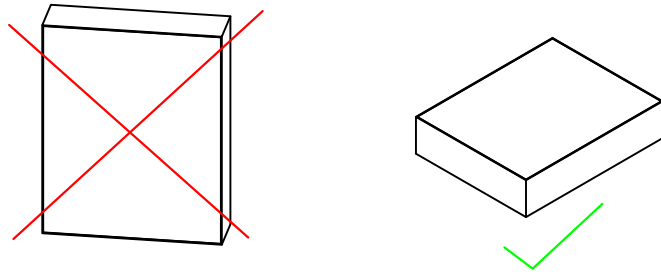

1. Lay the carton flat on the floor and carefully cut it open.

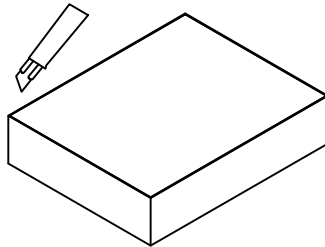

2. Lift the carton so that the open side faces downward, then slide the carton up and off the bed. Place the bed upside down on a flat surface.

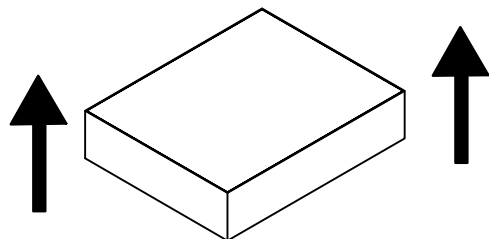


3. Remove and discard the plastic bag. Place the two sections of the bed together and align them flat on the floor.



4. Cut the zip ties, remove all parts boxes and the mattress rail, and verify that all necessary components are included according to the Parts List.





5. For leg (B) assembly, insert the screw through the triangular brace. Attach the leg and tighten the screw securely.

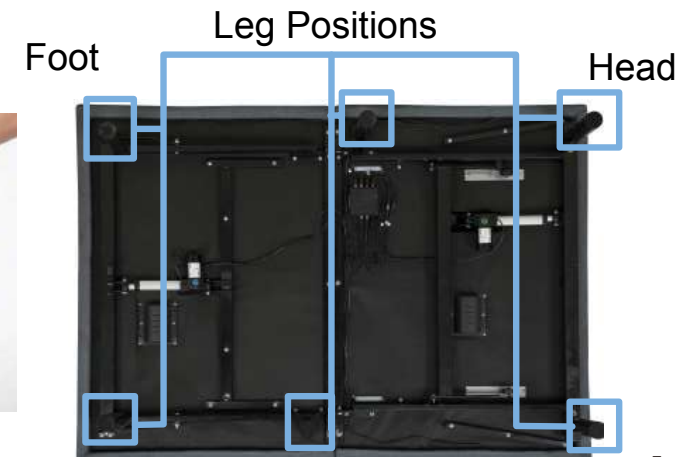

# Installation Guide

6. Connect the wire from the bed to the jack on the power supply (D) box.

Connect the AC power cable (E) to the other jack on the power supply box, then plug the AC power cable into a nearby power outlet.

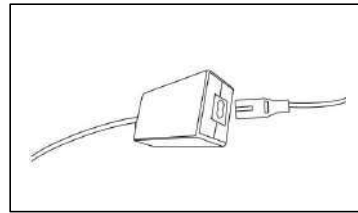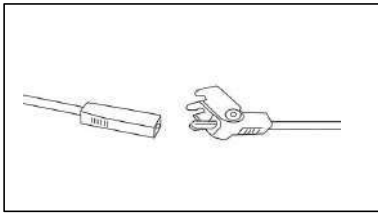

7. Insert the batteries into the remote control (C).

Press the first circled button. If the motor begins to run, unplug the power supply and turn the bed over to the right-side-up position.

If the motor does not run, the remote control needs to be paired with the control box.





## REMOTE PAIRING



Place the remote control next to the blue **RESET** button.

Press and hold the **HEAD UP** and **FOOT UP** buttons on the remote control (circled in the illustration) while simultaneously pressing and holding the blue **RESET** button until you hear a “beep” sound.

This should take only a few seconds. If the remote does not pair, check all connections and repeat the process.

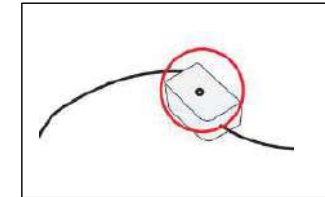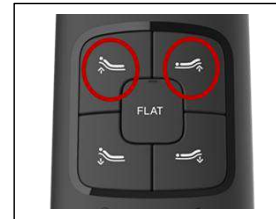

8. Insert the mattress rail (A) at the foot of the bed.

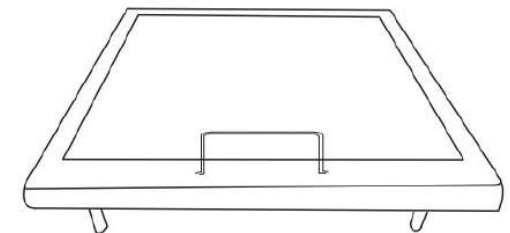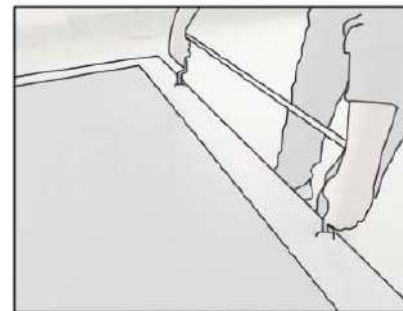

*The bed is now ready for use.*

# Platform Bed Installation

WHEN PLACING THE ADJUSTABLE BASE ON A PLATFORM BED, REMOVE THE ADJUSTABLE BASE LEGS BEFORE INSTALLATION.

A BUNKIE BOARD IS REQUIRED UNDERNEATH THE ADJUSTABLE BASE TO PROVIDE PROPER AND EVEN SUPPORT. REFER TO THE COASTER CATALOG FOR COMPATIBLE BUNKIE BOARDS.

## **CAUTION:**


DO NOT PLACE THE ADJUSTABLE BASE DIRECTLY ON BED SLATS. ENSURE THAT THE PLATFORM BED AND BUNKIE BOARD CAN SUPPORT THE COMBINED WEIGHT OF THE ADJUSTABLE BASE, MATTRESS, AND USERS.

## **ASSEMBLY STEP**


**Step 1.** Remove all Adjustable Base legs.



**Step 2.** Place the Bunkie Board on the platform bed.

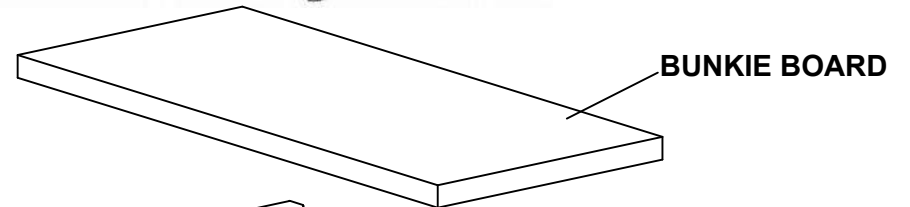



**Step 3.** Place the Adjustable Base evenly on top of the Bunkie Board.

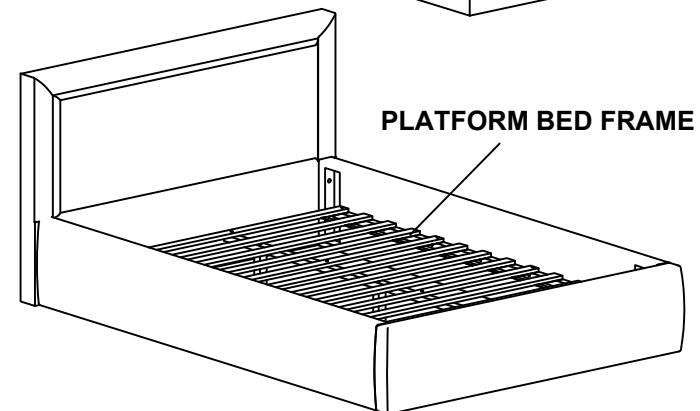

# Remote Control

THE REMOTE CONTROL ALLOWS YOU TO ADJUST THE BED POSITION, OPERATE THE MASSAGE FUNCTIONS, CONTROL THE UNDER-BED LIGHT, AND USE THE PRESET AND MEMORY FUNCTIONS.



| Button                                                                              | Operation                                                                                          | Button                                                                                | Operation                                                                                          |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|    | TV Preset Position                                                                                 |    | Lounge Preset Position                                                                             |
|    | Memory Position 1                                                                                  |    | Memory Position 2                                                                                  |
|    | Anti-Snore Preset Position                                                                         |    | Zero-Gravity Preset Position                                                                       |
|    | Press and hold to raise the head section. Release the button when the desired position is reached. |    | Press and hold to raise the foot section. Release the button when the desired position is reached. |
|    | Press and hold to lower the head section. Release the button when the desired position is reached. |    | Press and hold to lower the foot section. Release the button when the desired position is reached. |
|    | Press once to return the bed to the flat position.                                                 |    | Press to turn on the head massage. 3 intensity levels are available.                               |
|   | Press to turn on the foot massage. 3 intensity levels are available.                               |   | Press to turn the under-bed light on/off.                                                          |
|  | Press to turn the LED flashlight on/off.                                                           |  | Press to select a massage mode. 3 modes are available.                                             |
|  | Timer Control / Turn All Functions Off                                                             |  | Select the massage timer: 10min / 20min / 30 min.                                                  |

**NOTE:** Only press **one button at a time**, except when performing the **Remote Pairing** procedure described later in this manual.

# Memory Settings

FOLLOW THE STEPS BELOW TO SAVE YOUR PREFERRED BED POSITIONS TO THE **M1** AND **M2** MEMORY BUTTONS.

## 1. Return the Bed to the Flat Position



Press the **FLAT** button to return the bed to the flat position.

## 2. Adjust the Bed Position



Use the appropriate adjustment buttons to adjust the bed to your desired position.

## 3. Save the Position



Press and hold the **M1** or **M2** button for several seconds until you hear a beep.

The current bed position is now saved to the selected memory button.

## 4. Save Another Position

Repeat Steps 1–3 to save another desired position to the remaining memory button.

# Bluetooth App

THE ADJUSTABLE BASE CAN BE OPERATED USING THE **RMCONTROL** MOBILE APP VIA BLUETOOTH.

## 1. Scan the QR Code



Use your mobile phone to scan the QR code provided in this manual. The QR code will open the download page for the RMControl app

## 2. Download the App



### + Android Devices

After scanning the QR code with an Android device, select the appropriate download option:

- Select Android (China) if you are located in China.
- Select Android (Global) if you are outside China.

Follow the on-screen instructions to download and install the RMControl app.



### + IOS Devices

After scanning the QR code with an iPhone, select iOS to download the app.

Follow the on-screen instructions to complete the installation.

# Bluetooth App

## 3. Connect to the Adjustable Base



Open the **RMControl** app.

Select the device labeled with a **10-digit device ID**, such as “**QRRMXXXXXX**”, from the available device list.

## 4. Pair the App with the Adjustable Base



 **Android**

Select the **10-digit device ID** (e.g., “**QRRMXXXXXX**”) and scan the QR code provided for the device.

Once connected, the motor control interface will appear.

You can now use your mobile phone to operate the adjustable base.



 **IOS**

Select the **10-digit device ID** (e.g., “**QRRMXXXXXX**”), enter “**XJRM**”, and tap **Search**.

Once connected, the motor control interface will appear.

You can now use your mobile phone to operate the adjustable base.

# Troubleshooting

IF YOU EXPERIENCE PROBLEMS WITH YOUR ADJUSTABLE BED, PLEASE FOLLOW THESE STEPS:

1. Press any button on the remote controller to see whether the blue backlight is bright. If it is dim or does not light, check the batteries. Replace batteries when necessary.
2. Check the green power indicator light on the power supply. If it is not lighted, check the power outlet.
3. Check for loose wires and connectors.
4. Check if the adjustable bed is assembled according to the above steps.
5. If batteries are low and replaced, you may need to run the **"Remote Pairing"** procedure afterwards.
6. If power to the base has been interrupted, you may need to run the **" Remote Pairing"** procedure when power is restored.
7. Check for any damage to wiring, electronic components, or structure of the base.
8. Make sure that operation of the base is not impeded by other furniture, walls, wires, or any other objects.

If your problems cannot be solved by above steps, please contact us.

# Product size

